

TABLE OF CONTENTS

Paragraph		Page
CHAPTER 1 - GENERAL INFORMATION		
1-1.	Introduction	1-1
1-2.	Functional Description	1-1
	a. Coupler Control C-2698/SRA-22	1-3
	b. Antenna Coupler CU-714/SRA-22	1-3
	c. Interconnection Terminal Board TB-5	1-3
1-3.	Factory or Field Changes	1-3
1-4.	Reference Data	1-5
1-5.	Safety Precautions	1-5
1-6.	Equipment List	1-5
	a. Equipment Supplied	1-5
	b. Equipment and Publications Required but not Supplied	1-5
	c. Diode Complement	1-5
	d. Shipping Data	1-5
CHAPTER 2 - OPERATION		
2-1.	Functional Description	2-1
2-2.	Capabilities and Limitations	2-1
2-3.	Operating Procedures	2-3
	a. Description of Controls	2-3
	b. Sequence of Operation	2-4
	(1) Control Settings Prior to Starting	2-4
	(2) Tuning Procedure Where a Dummy Load is Available	2-5
	(3) VSWR Protective Device	2-6
	c. Operating Procedures for Antennas Less than 35 Feet in Length	2-6
	d. Stopping the Equipment	2-7
	e. Tuning Chart	2-7
	f. Precautions	2-7
	g. Summary: Abbreviated Procedure for Tuning AN/SRA-22	2-8
2-4.	Operator's Maintenance	2-9
	a. Operator's Check	2-9
	b. Emergency Maintenance	2-9
CHAPTER 3 - SCHEDULED TESTS AND SERVICING		
3-1.	Introduction	3-1
3-2.	Maintenance Requirement Index	3-1
3-3.	Maintenance Requirement Description	3-2
CHAPTER 4 - FUNCTIONAL DESCRIPTION		
4-1.	Over-All Functional Description	4-1
4-2.	Functional Sections	4-1
	a. Coupler Control C-2698/SRA-22	4-1
	(1) TAP and COIL Indicators	4-1
	(2) COIL COARSE TUNE-FINE TUNE	4-4
	(3) Electrical Limit Switches	4-4
	(4) TAP COARSE TUNE-FINE TUNE	4-4
	(5) Twelve-Position CAPACITOR Switch 2S2 and CAPACITOR SERIES-SHUNT Switch 1S9	4-4
	(6) Directional Coupler	4-4

TABLE OF CONTENTS (Cont)

Paragraph		Page
CHAPTER 4 - FUNCTIONAL DESCRIPTION (Cont)		
4-2.	(7) Transfer Relay and LOAD-ANT Switch	4-6
	(8) TUNE-OPERATE Switch	4-7
	(9) VSWR Protector	4-7
b.	Antenna Coupler CU-714/SRA-22	4-8
	(1) Capacitor Drive Circuit	4-8
	(2) Tuning and Loading	4-8
	(3) Blower	4-10
CHAPTER 5 - TROUBLESHOOTING AND REPAIR		
5-1.	General Information	5-1
5-2.	Test Equipment and Special Tools	5-1
5-3.	Over-All Troubleshooting	5-1
	a. Preliminary Check	5-1
	b. Control Settings	5-1
	c. Typical Malfunctions	5-2
5-4.	Functional Section Troubleshooting	5-2
	a. Antenna Coupler Group AN/SRA-22	5-2
	b. Indicating Circuits	5-2
	c. Motor Control Circuits	5-3
	d. R-F Power Section	5-4
	(1) Directional Coupler Subassembly 2A1 and R-F Power Meter 2M3	5-4
	(2) VSWR Protective Subassembly 2A2	5-4
	(3) Antenna Switch 2S1, Antenna Transfer Relay 2K3, Coil 1L1, and Series-Shunt Switch 1S9.	5-5
5-5.	Checkout and Alignment Procedure	5-5
	a. Introduction	5-5
	b. Procedure	5-5
	(1) Preliminary Steps	5-5
	(2) Coil Stop Adjustment	5-6
	(3) Tap Stop Adjustment	5-6
	(4) Tap Electrical Limit Switch Adjustment	5-7
	(5) Coil Potentiometer 1R6 Adjustment	5-7
	(6) Tap Potentiometer 1R7 Adjustment	5-7
	(7) Variable Capacitor 1C7 Alignment	5-7
	c. Final Check	5-8
5-6.	Removal, Adjustment, Repair, and Reassembly of Parts and Subassemblies	5-8
	a. Removal and Disassembly of Coupler Control C-2698/SRA-22	5-8
	b. Removal and Replacement of Antenna Coupler CU-714/SRA-22 Components	5-9
	(1) Removal of Antenna Coupler Unit from Case	5-11
	(2) Tap Assembly and Coil Assembly Removal and Replacement	5-11
	(3) Removal and Replacement of Motors and Gears	5-11
	(4) Replacement of Items not Requiring the Separation of Gear Plates	5-12
	(a) Replacement of Coil Indicator Potentiometer 1R6 and Coil Limit Switch 1S12.	5-12
	(b) Replacement of Tap Indicator Potentiometer 1R7 and Tap Limit Switches 1S13 and 1S14	5-12
	(c) Replacement of Vacuum Variable Capacitor 1C7	5-13

TABLE OF CONTENTS (Cont)

Paragraph		Page
CHAPTER 5 - TROUBLESHOOTING AND REPAIR (Cont)		
5-6.	(d) Replacement of Capacitor Limit Switch 1S11	5-13
	(e) Replacement of Capacitor SERIES-SHUNT Switch 1S9 and Capacitor Drive Switch 1S10	5-14
CHAPTER 6 - PARTS LIST		
6-1.	Introduction	6-1
6-2.	Maintenance Parts List	6-1
6-3.	List of Manufacturers	6-1
CHAPTER 7 - YARD AND TENDER INFORMATION		
7-1.	Installation	7-1
	a. Unpacking and Handling	7-1
	b. Installation Requirements	7-1
	(1) Installation Pointers	7-1
	(2) Outline Drawing	7-1
	(3) Interconnecting Diagrams	7-1
	(4) Cable Assembly	7-1
	(5) Weatherproofing	7-1
	c. Inspection and Adjustments	7-1
	d. Preparation for Reshipment	7-1
7-2.	Major Overhaul	7-10
	a. Removal and Disassembly of Coupler Control C-2698/SRA-22	7-10
	b. Removal and Disassembly of Antenna Coupler CU-714/SRA-22	7-10
	c. Cleaning	7-14
	(1) Cleaning Nonsealed Ball Bearings	7-15
	(2) Cleaning Covered Cable	7-16
	(3) Cleaning Castings	7-16
	(4) Cleaning Wired Chassis	7-16
	(5) Cleaning Connectors	7-16
	(6) Cleaning Covers and Shields	7-17
	(7) Cleaning Dials and Knobs	7-17
	(8) Cleaning Neoprene or Rubber Gaskets and Seals	7-17
	(9) Cleaning Gaskets and Shim Washers (Paper or Fiber)	7-17
	(10) Cleaning Insulators	7-17
	(11) Cleaning Jacks	7-17
	(12) Cleaning Lamp Holders	7-17
	(13) Cleaning Lamps	7-17
	(14) Cleaning Lamp-Holder Lens	7-17
	(15) Cleaning Machined Metal Parts	7-17
	(16) Cleaning Mechanical Metal Parts	7-17
	(17) Cleaning Receptacles	7-17
	(18) Cleaning Rotary Switches	7-17
	(19) Cleaning Fuse Holders and Fuses	7-18
	(20) Cleaning Toggle Switches	7-18
	(21) Cleaning Motors and Relays	7-18
	(22) Cleaning Ceramic Drum	7-18
	(23) Cleaning Silver Ribbon	7-18
	(24) Cleaning Metal, Fiber, or Fabric Gears	7-18

TABLE OF CONTENTS (Cont)

Paragraph		Page
CHAPTER 7 - YARD AND TENDER INFORMATION (Cont)		
7-2.	(25) Cleaning Nonsealed Needle Bearings	7-18
	(26) Cleaning Bronze Oilite Bearings	7-18
	(27) Cleaning Sealed or Shielded Bearings	7-18
	(28) Cleaning Ceramic Coil Forms	7-18
	(29) Cleaning Molded Plastic Parts	7-18
d.	Inspection	7-18
	(1) Inspecting Bearings	7-18
	(2) Inspecting Castings	7-19
	(3) Inspecting Covers and Shields.	7-19
	(4) Inspecting Dials and Knobs.	7-19
	(5) Inspecting Gaskets and Seals	7-19
	(6) Inspecting Fiber Gaskets	7-19
	(7) Inspecting Gears	7-19
	(8) Inspecting Machined Metal Parts	7-19
	(9) Inspecting Metal Parts	7-21
	(10) Inspecting Covered Cable.	7-21
	(11) Inspecting Coils	7-21
	(12) Inspecting Connectors	7-21
	(13) Inspecting Ceramic Drum	7-21
	(14) Inspecting Jacks	7-21
	(15) Inspecting Lamps	7-21
	(16) Inspecting Lamp Holders	7-22
	(17) Inspecting Lenses	7-22
	(18) Inspecting Molded Plastic Parts	7-22
	(19) Inspecting Receptacles	7-22
	(20) Inspecting Fixed Composition Resistors	7-22
	(21) Inspecting Fixed Film and Wire-Wound Resistors	7-22
	(22) Inspecting Variable Resistors.	7-22
	(23) Inspecting Terminal Connections.	7-22
	(24) Inspecting Rotary Switches.	7-22
	(25) Inspecting Toggle Switches.	7-22
	(26) Inspecting Transformers	7-22
	(27) Inspecting Wiring.	7-22
	(28) Inspecting Motors and Relays	7-22
	(29) Inspecting Insulators	7-22
	(30) Inspecting Silver Coil Ribbon	7-22
	(31) Inspecting Fixed Capacitors	7-22
	(32) Inspecting Variable Capacitors	7-23
	(33) Inspecting the Variable Vacuum Capacitor	7-23
	(34) Inspecting Aluminum Drum	7-23
7-3.	Reassembly and Testing	7-23
a.	Reassembling the Case and Blower Assembly	7-23
b.	Reassembling Coupler Control C-2698/SRA-22	7-24
c.	Reassembling Antenna Coupler CU-714/SRA-22	7-24
	(1) Gear Subassemblies	7-24
	(2) Capacitor Drive Switch 1S10	7-26
	(3) Coil Stop Assembly	7-26
	(4) Tap Potentiometer 1R7	7-26
	(5) H-V Output Plate	7-26
	(6) Coil Potentiometer 1R6 and H-V Contact (265)	7-26

TABLE OF CONTENTS (Cont)

Paragraph		Page
CHAPTER 7 - YARD AND TENDER INFORMATION (Cont)		
7-3.	(7) Capacitor Limit Switch 1S11, SERIES-SHUNT Switch 1S9, and Plug 1P9	7-26
	(8) Ceramic Drum	7-27
	(9) Front Plate	7-28
	(10) Front Casting	7-28
	d. Alignment	7-29
	(1) Coupler Control C-2698/SRA-22	7-29
	(2) Antenna Coupler CU-714/SRA-22	7-29
	e. Testing	7-29
	(1) Backlash Checks	7-29
	(2) End Play and Clearances	7-29
	(3) Operating Check	7-29
7-4.	Final Reassembly and Test	7-29
	a. Final Reassembly	7-29
	b. Final Test	7-29
	(1) Test Equipment and Special Tools	7-29
	(2) Test Setup	7-29
	(3) Test Procedure	7-29

LIST OF ILLUSTRATIONS

Figure		Page
CHAPTER 1 - GENERAL INFORMATION		
1-1.	Antenna Coupler Group AN/SRA-22	1-1
1-2.	Antenna Coupler Group AN/SRA-22 Relationship of Units	1-2
1-3.	Interconnection Terminal Board TB-5	1-2
CHAPTER 2 - OPERATION		
2-1.	Impedance Characteristics of Typical 35-Foot Whip Antenna	2-2
2-2.	Antenna Coupler Group AN/SRA-22, Front Panel Control Location	2-4
2-3.	Dial Set to 100	2-5
2-4.	Typical Tuning Chart	2-7
CHAPTER 3 - SCHEDULED TESTS AND SERVICING		
3-1.	Relationship of SWR to Incident and Reflected Power	3-3
CHAPTER 4 - FUNCTIONAL DESCRIPTION		
4-1.	Antenna Coupler Group AN/SRA-22, Block Diagram	4-2
4-2.	TAP and COIL Indicator Meter Circuits, Simplified Schematic Diagram	4-3
4-3.	Coil-Tap Tuning Circuit, Simplified Schematic Diagram	4-5
4-4.	Directional Coupler 2A1, Simplified Schematic Diagram	4-6
4-5.	VSWR Protector 2A2, Simplified Schematic DS3 Diagram	4-7
4-6.	Capacitor Drive, Simplified Schematic Diagram	4-9

LIST OF ILLUSTRATIONS (Cont)

Figure		Page
CHAPTER 5 - TROUBLESHOOTING AND REPAIR		
5-1.	COIL STOP CAM Positioning	5-6
5-2.	Capacitor Drive Switch 1S10 Alignment	5-8
5-3.	Coupler Control C-2698/SRA-22, Front Panel Removed	5-9
5-4.	Coupler Control C-2698/SRA-22, Rear Panel Removed	5-9
5-5.	Coupler Control C-2698/SRA-22, Directional Coupler	5-10
5-6.	Coupler Control C-2698/SRA-22, VSWR Protector	5-10
5-7.	Coupler Control C-2698/SRA-22, Schematic Diagram	5-15
5-8.	Antenna Coupler CU-714/SRA-22, Schematic Diagram	5-17

CHAPTER 6 - PARTS LIST

6-1.	Antenna Coupler CU-714/SRA-22, Exploded View	6-45
------	---	------

CHAPTER 7 - YARD AND TENDER INFORMATION

7-1.	Antenna Coupler CU-714/SRA-22, Outline and Mounting Dimensions	7-2
7-2.	Coupler Control C-2698/SRA-22, Outline and Mounting Dimensions	7-3
7-3.	Interconnecting Diagram of Antenna Coupler Group AN/SRA-22 with Radio Set AN/XXX	7-5
7-4.	Interconnecting Diagram of Antenna Coupler Group AN/SRA-22 for Use as Separate Unit	7-7
7-5.	Antenna Coupler CU-714/SRA-22 Weatherproofing Procedures	7-8
7-6.	Antenna Coupler CU-714/SRA-22 Ground Recommendations	7-9
7-7.	Antenna Coupler CU-714/SRA-22 Sealing Procedures	7-30
7-8.	AN/SRA-22 Test Setup, Block Diagram	7-31

LIST OF TABLES

		Page
CHAPTER 1 - GENERAL INFORMATION		
1-1.	Field Change Information	1-4
1-2.	Antenna Coupler Group AN/SRA-22, Equipment Supplied	1-6
1-3.	Antenna Coupler Group AN/SRA-22, Diode Complement	1-7
1-4.	Antenna Coupler Group AN/SRA-22, Shipping Data	1-7

LIST OF TABLES (Cont)

Table		Page
CHAPTER 2 - OPERATION		
2-1.	Controls/Indicators and Functions	2-3
2-2.	AN/SRA-22 Efficiency with Various Antenna Lengths	2-7
2-3.	Routine Check Chart	2-9
2-4.	Symptoms of Probable Fuse Failures	2-9
CHAPTER 3 - SCHEDULED TESTS AND SERVICING		
3-1.	Maintenance Requirement Index	3-1
CHAPTER 5 - TROUBLESHOOTING AND REPAIR		
5-1.	Test Equipment Required	5-1
5-2.	Special Test Assemblies	5-1
5-3.	Capacitor Limit Switch 1S11 Wire Connections	5-13
5-4.	Capacitor Drive Switch 1S10 Wire Connections	5-14
CHAPTER 6 - PARTS LIST		
6-1.	Maintenance Parts List	6-1
6-2.	Antenna Coupler Group AN/SRA-22, List of Manufacturers	6-42
CHAPTER 7 - YARD AND TENDER INFORMATION		
7-1.	Cable Requirements	7-10
7-2.	Cleaning Materials and Protective Agents	7-15
7-3.	Gear Data	7-20
7-4.	Inspection of Fixed Capacitors	7-23