BELL SYSTEM PRACTICES Plant Series

28 PERFORATOR-TRANSMITTER BASE

WIRING DIAGRAM

1. GENERAL


1.01 This section shows the wiring for the 28A, 28B, 28D, 28E, 28F, 28K, 28G, 28G-1, 28H, 28J, 28J-1, and 28LA perforator-transmitter bases for use with the 28 automatic send-receive set.


1.02 This section is reissued to add the wiring for the 28G-1 and 28K perforator-transmitter bases. The drawing showing the wiring for the 28D, 28E, 28F, and 28K perforator-transmitter bases was changed to:

(a) Remove the jumper wire on the K-KT-T switch.

- (b) Add a white-purple (W-P) wire from terminal 3 of the K-KT-T switch to terminal 7 of the keyboard terminal block.
- (c) Add a jumper between terminals 1 and 7 of the keyboard terminal block.

Page 1

 

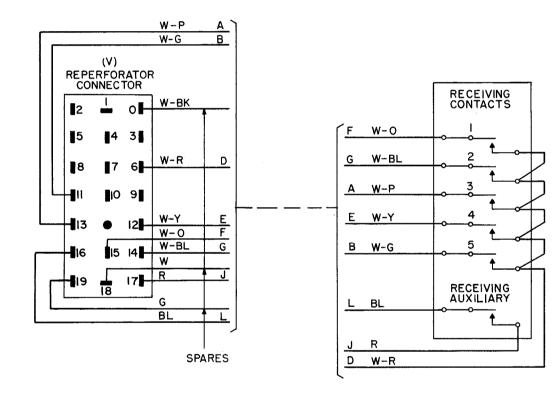

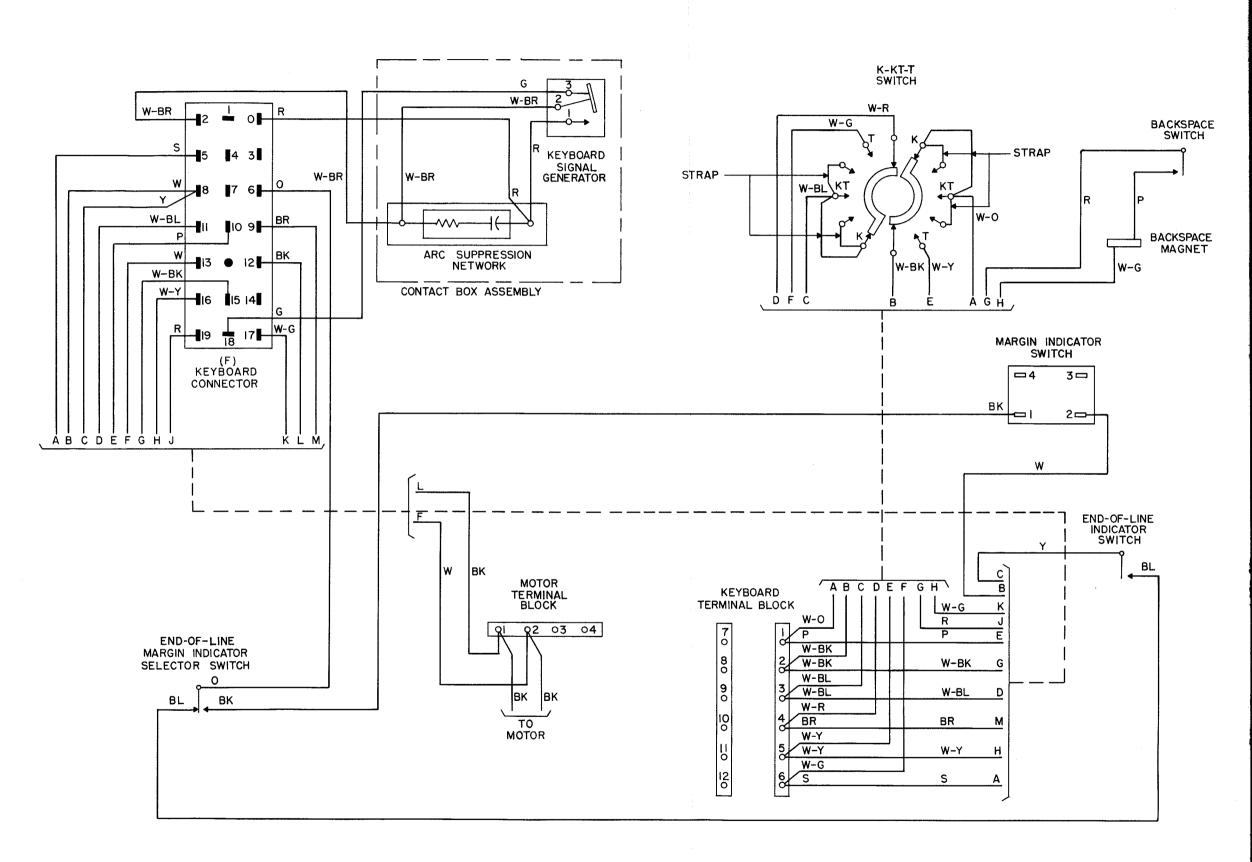


Figure 1 - 28A Perforator-Transmitter-Base

Page 2


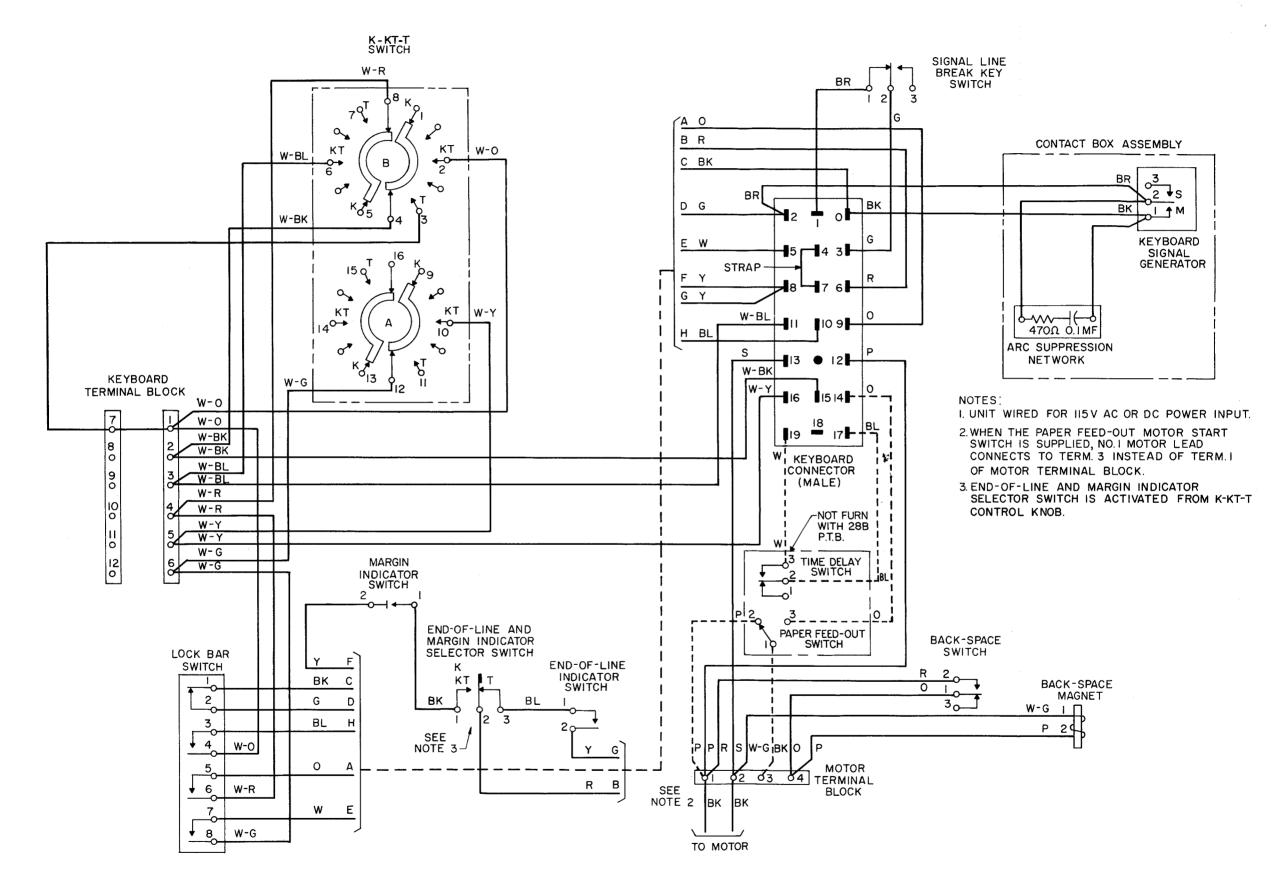


Figure 2 - 28B Perforator-Transmitter-Base

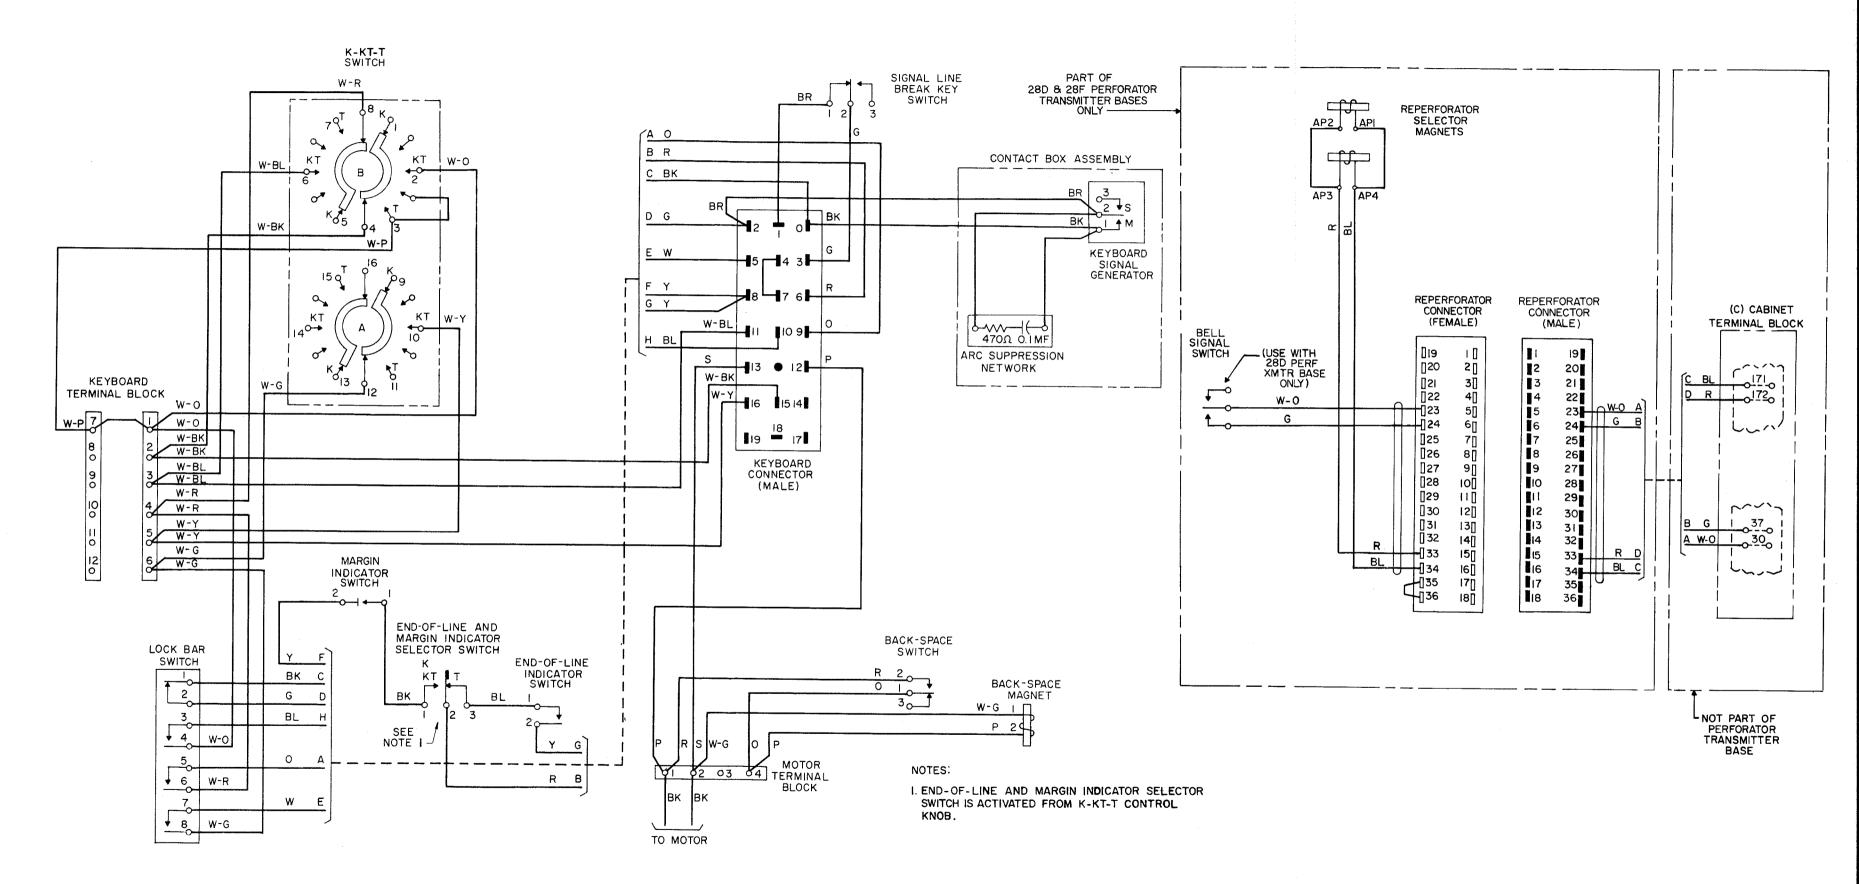

ISS 5, SECTION 573-117-400

Figure 3 - 28D, 28E, 28F, and 28K Perforator-Transmitter-Base

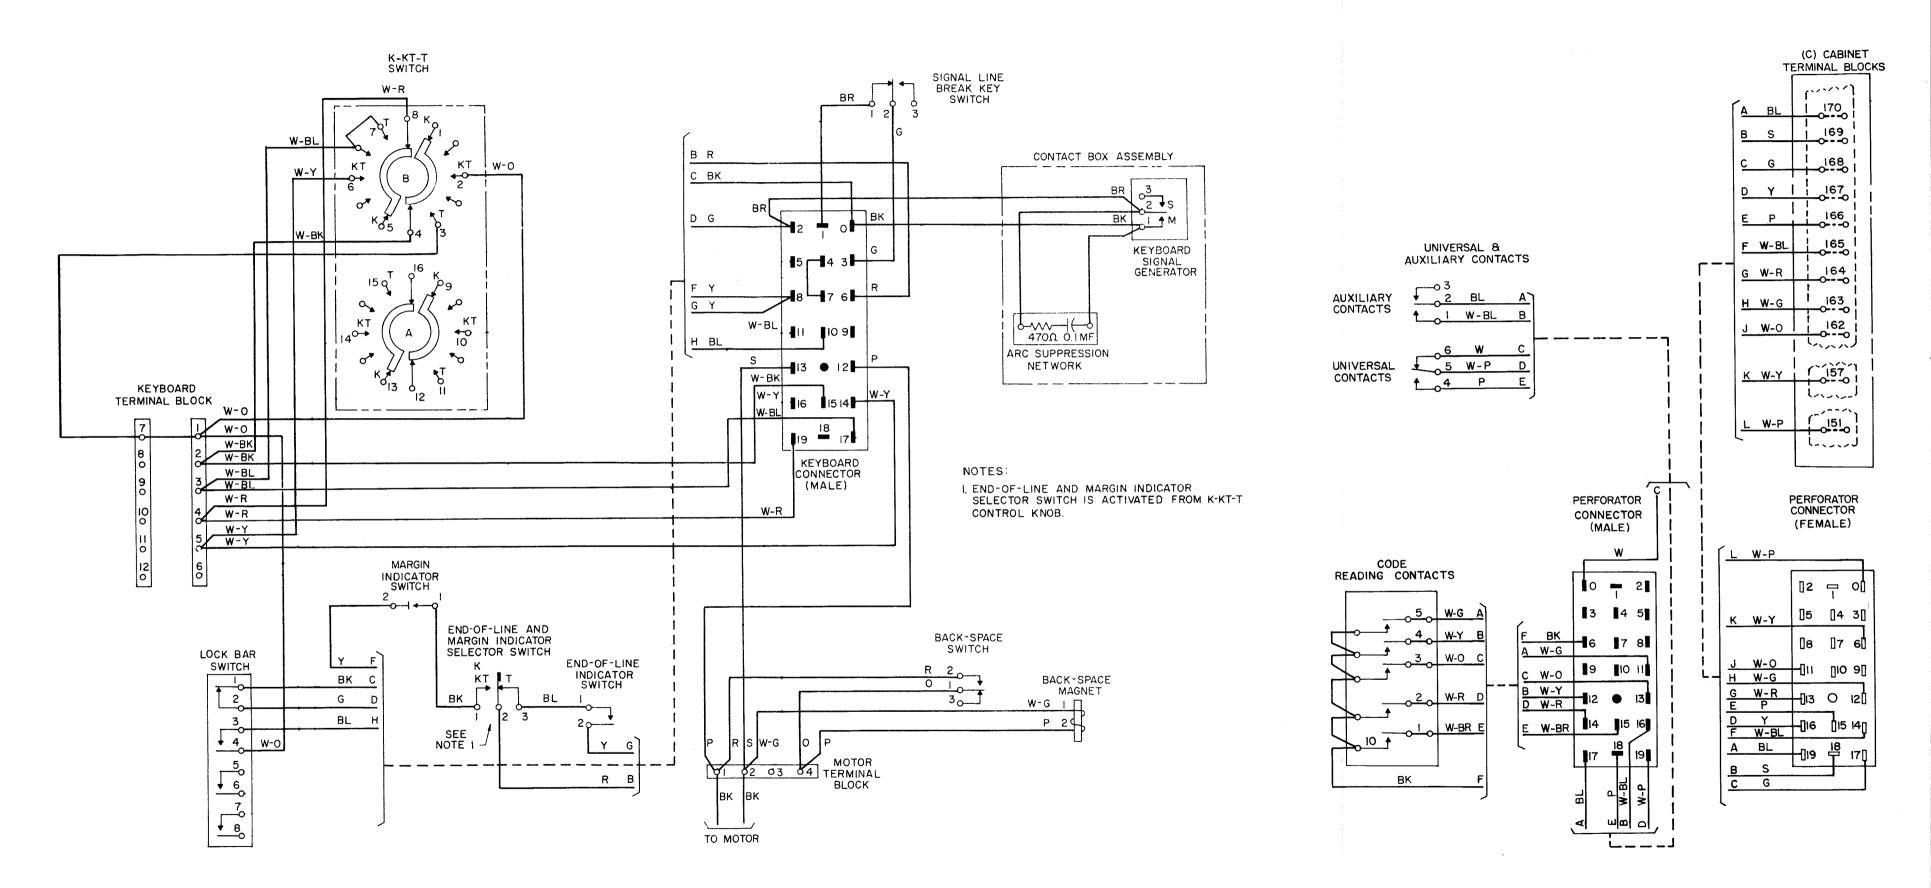
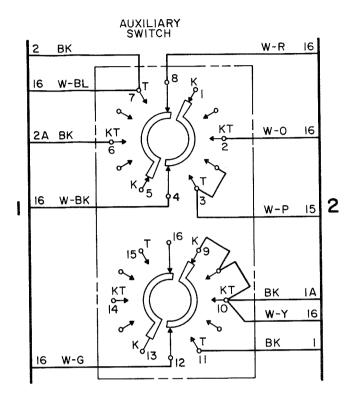
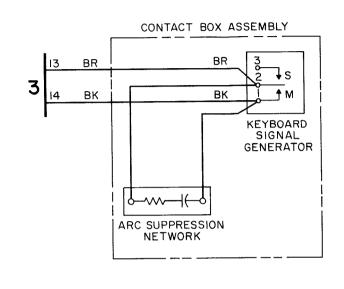



Figure 4 - 28G and 28G-1 Perforator-Transmitter-Base


1


Page 5






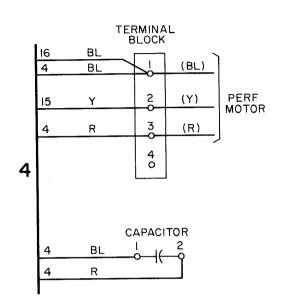

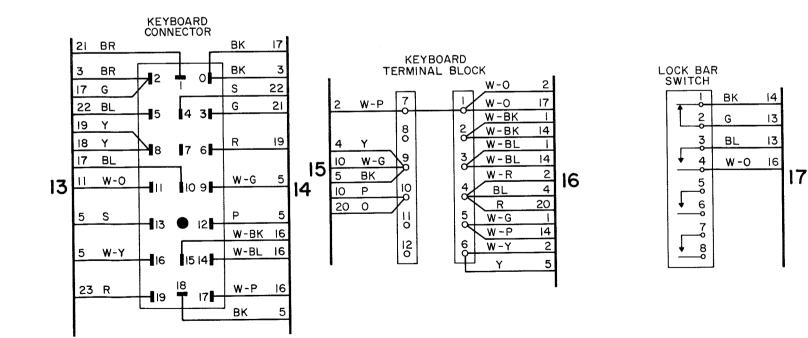

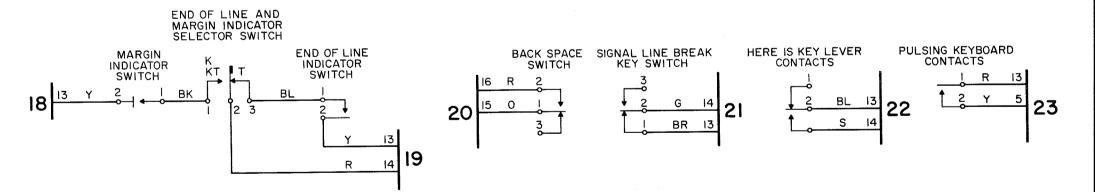

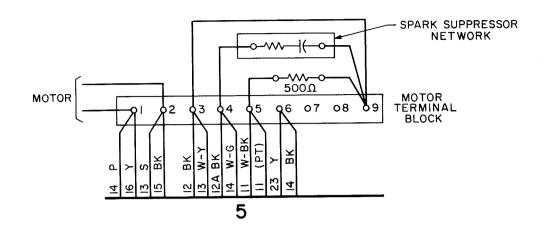





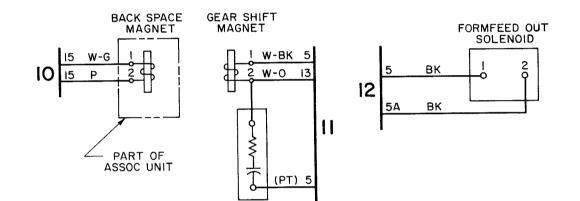



Figure 5 - 28H Perforator-Transmitter-Base

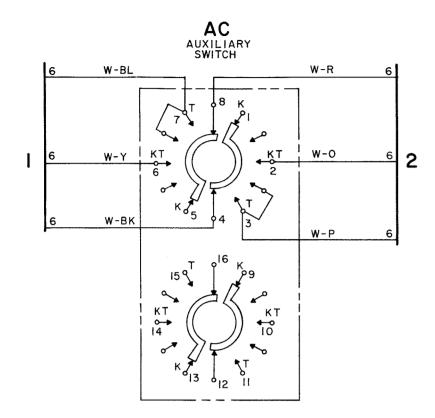


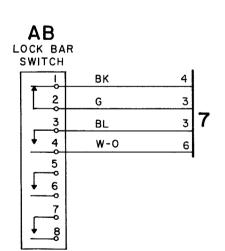

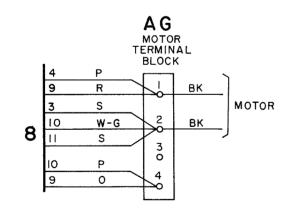

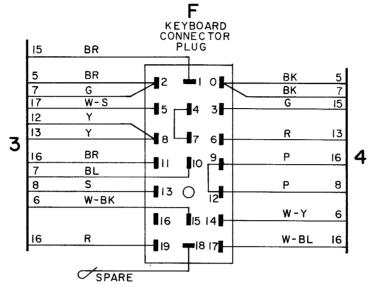

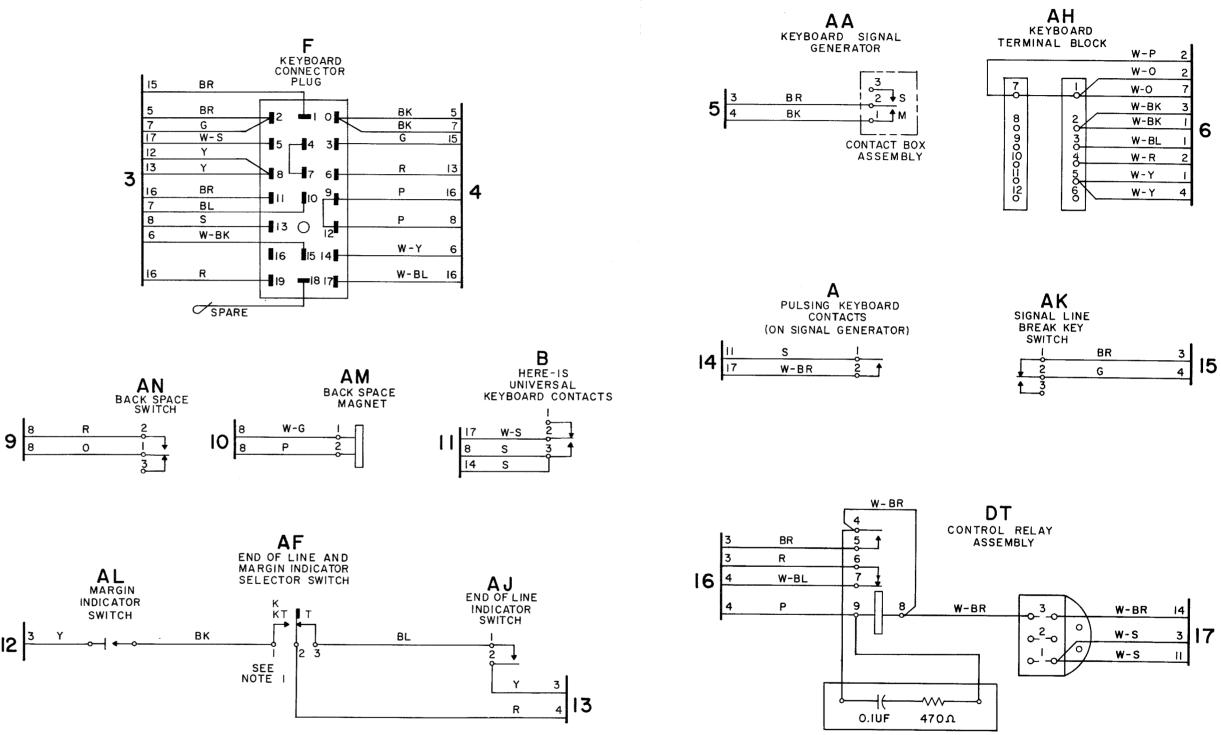


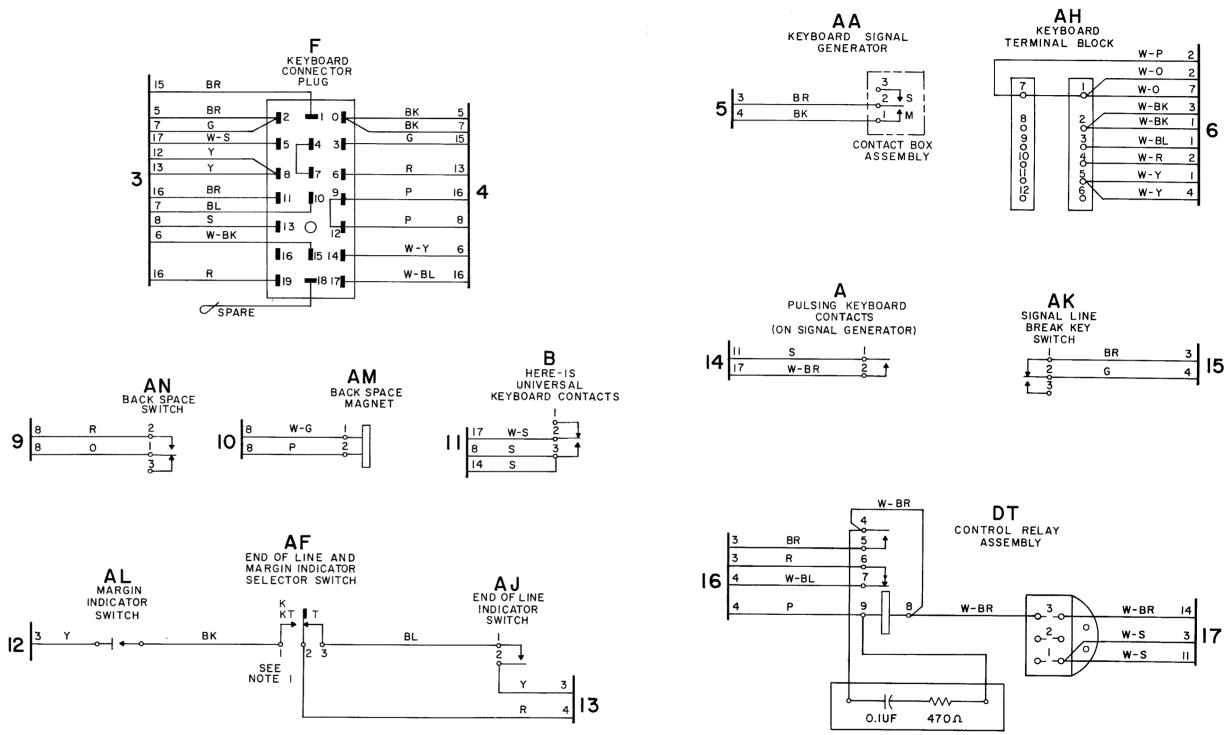


NOTES:


I. END OF LINE AND MARGIN INDICATOR SELECTOR SWITCH IS ACTIVATED FROM THE AUXILIARY SWITCH CONTROL KNOB.


Figure 6 - 28J Perforator-Transmitter-Base

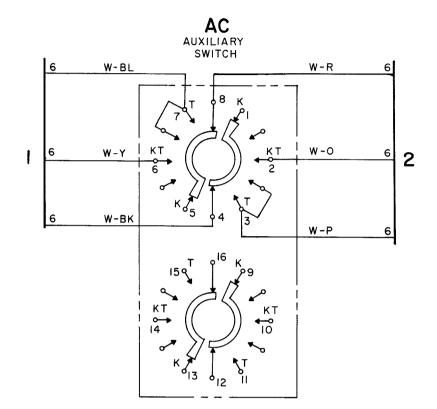


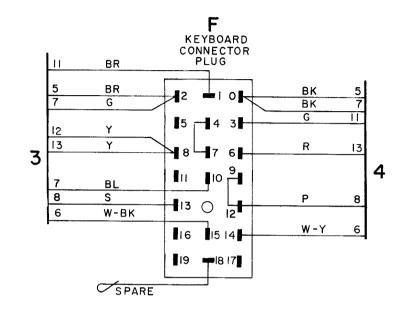





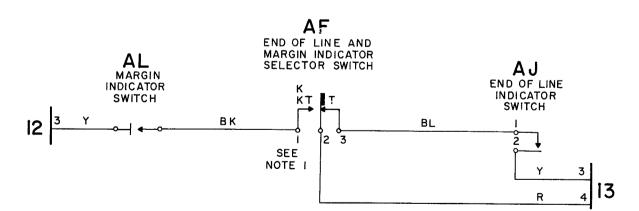

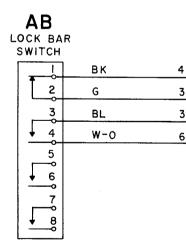

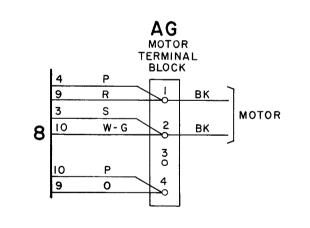

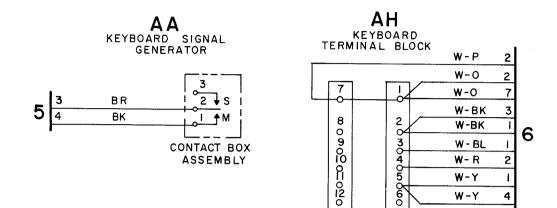

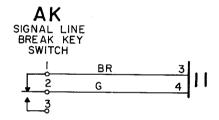





ž


NOTES:


I. END OF LINE AND MARGIN INDICATOR SELECTOR SWITCH IS ACTIVATED FROM THE AUXILIARY SWITCH CONTROL KNOB.

 Figure 7 - 28J-1 Perforator-Transmitter-Base

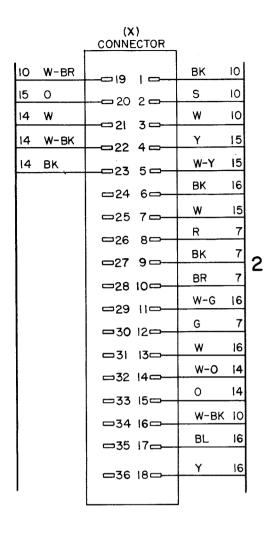

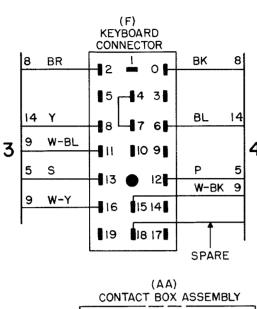

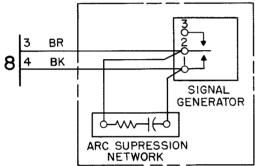



12

14 S

12 W-G

12 W-0


W-Y

12 W-R


12


13


W-BL

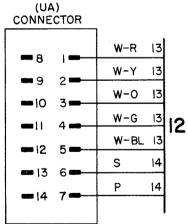



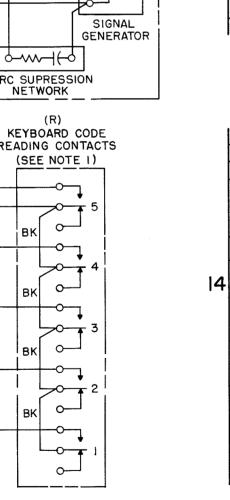

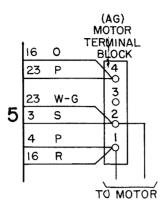


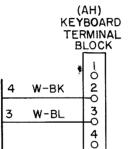

9

13

 W-Y



15

15 W-G

 
(2)

(1)


Ð


2 W-Y

15 W-P





(H)

 

 

(AJ) END-OF-LINE INDICATOR SWITCH BL 4 Y

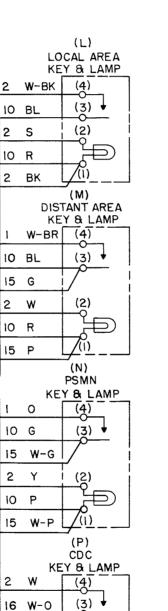

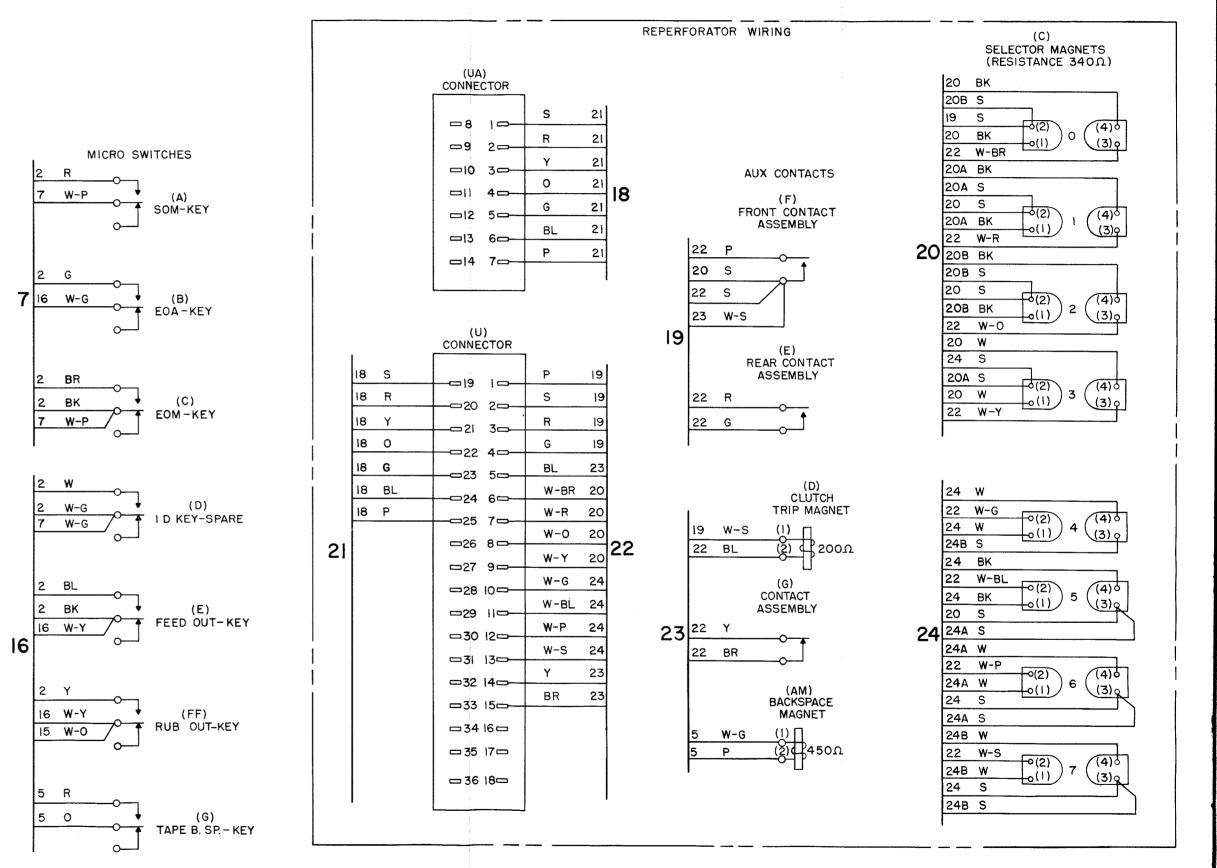

ISS 5, SECTION 573-117-400

Figure 8 - 28LA Perforator-Transmitter-Base

Page 9 9 Pages