

28 TRANSMITTER DISTRIBUTOR UNITS (LAXD, LCXD)

DISASSEMBLY AND REASSEMBLY

1. GENERAL

1.01 This section provides instructions and procedures for the disassembly and reassembly of the transmitter distributor units LAXD and LCXD. These instructions and procedures are arranged in a sequence which should be followed to disassemble the transmitter distributors into their main subassemblies or when a complete disassembly of one unit or both units is required.

1.02 For additional information on main subassemblies, refer to the appropriate parts section for associated illustrations.

Note: Remove power from unit before starting disassembly procedure.

1.03 The covers, of the transmitter distributors, may be removed for inspection and minor repair. However, for complete disassembly and ease of assembly, the removal of the entire unit from its subbase is necessary.

1.04 To reassemble, reverse the disassembly procedures.

1.05 Unless otherwise indicated, the disassembly procedures of this section are common to both transmitter distributor units.

2. DISASSEMBLY

2.01 Cover Plate Assembly (Fixed Head): Lift the left end upward and slide the plate to the left to disengage the spring clip.

2.02 Top Plate Assembly (Fixed Head): Loosen the front and rear mounting screws and lift the plate upward.

Reassembly Note: Guide the mounting screws into the notches in the front and rear plates in the unit. Align and adjust the top plate position.

2.03 Tape-Guide Plate Assembly (Fixed Head): Loosen the front and rear mounting screws and slide the plate upward.

Reassembly Note: Guide the mounting screws into the notches in the front and rear plates in the unit. Align and adjust the tape-guide plate position.

2.04 Cover Plate Assembly (Pivoted Head):

- (1) Loosen the captive screw on top.
- (2) Loosen the two mounting screws on the left.
- (3) Lift the plate up.

2.05 Idler Gear Assembly:

- (1) Remove the feed lever spring and latch stripper bail spring.
- (2) Remove the oil reservoir bar assembly by removing the screws, lockwashers, and flat washers holding the bar to its mounting bracket.
- (3) Pull out the idler gear oil retainer plug and remove the leather washer.
- (4) Remove the idler gear bearing stud locknut, lockwasher, and flat washer.
- (5) Remove as a unit the idler gear bearing stud, idler gear, and spacer (if used).

2.06 Sensing Shaft Assembly (Pivoted Head):

- (1) Remove the idler gear assembly as covered in 2.05.
- (2) Remove the front bearing clamp by removing the three mounting screws and lockwashers.
- (3) Remove the rear bearing clamp by removing the two mounting screws and lockwashers.
- (4) Remove the sensing shaft assembly.

SECTION 573-127-702TC

2.07 Distributor and Sensing Shaft Assembly (Pivoted and Fixed Head): Follow the procedure for removing the sensing shaft assembly.

2.08 Distributor Shaft Assembly (Pivoted Head): Follow the procedure for removing the sensing shaft assembly.

2.09 Clutch Trip Assembly:

- (1) Disconnect the wires leading to the clutch magnet.
- (2) Remove the mounting plate mounting screw, lockwasher, and flat washer and the mounting plate adjusting screw, lockwasher, and flat washer.
- (3) Withdraw the clutch trip assembly from the bottom of the unit.

2.10 Pivot Shaft:

- (1) Remove the sensing shaft assembly or the distributor and sensing shaft assembly as covered in previous paragraphs.
- (2) Remove the two ring retainers, one of which is hidden under a felt washer.
- (3) Loosen the feed lever collar setscrews.
- (4) Remove the pivot shaft nut, lockwasher, and flat washer.
- (5) Remove the pivot shaft by pushing it toward the rear plate, being careful not to lose the feed lever collars and felt washers.

2.11 Pivoted Sensing Head and Tape Deflector:

- (1) Remove the last character contact assembly.
- (2) Remove the check pawl spring.
- (3) Remove the tape deflector spring.
- (4) Loosen the rear pivot screw locknut and screw the rear pivot screw as far as possible into the casting.
- (5) Pull the sensing pins down and free from the top plate.
- (6) Loosen the front pivot screw locknut.
- (7) Turn the front pivot screw until the tape deflector is free from the pivot screw.
- (8) Remove the sensing head and tape deflector.

2.12 Storing Switch Assembly:

- (1) Disconnect the electrical cable assembly.
- (2) Remove the four mounting screws, lockwashers, and flat washers.
- (3) Remove the storing switch assembly.

2.13 Distributor Block Assembly:

- (1) Disconnect the electrical cable assembly.
- (2) Remove the three mounting screws, lockwashers, and flat washers.
- (3) Remove the distributor block assembly.

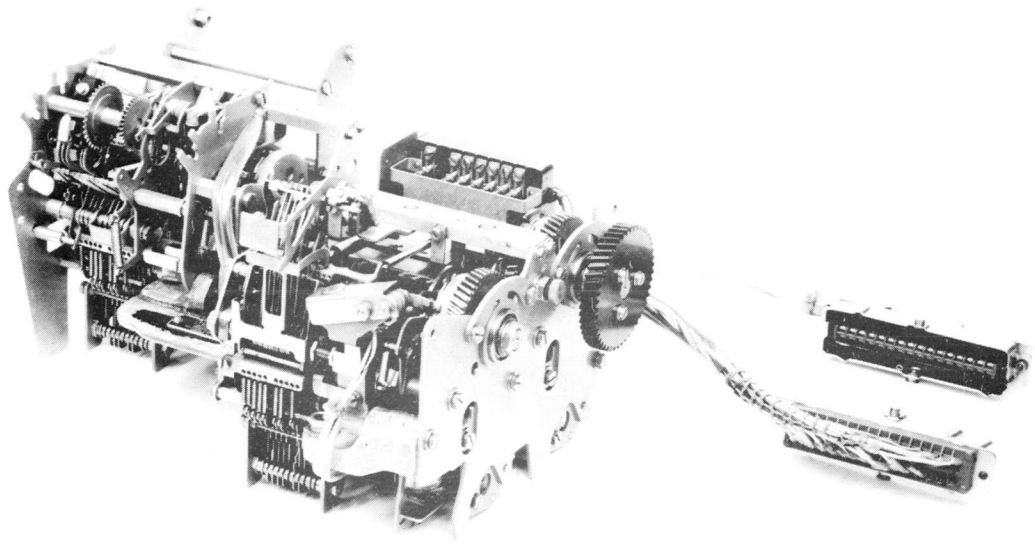


Figure 1 - Typical Transmitter Distributor (LCXD) with Top Plates Removed

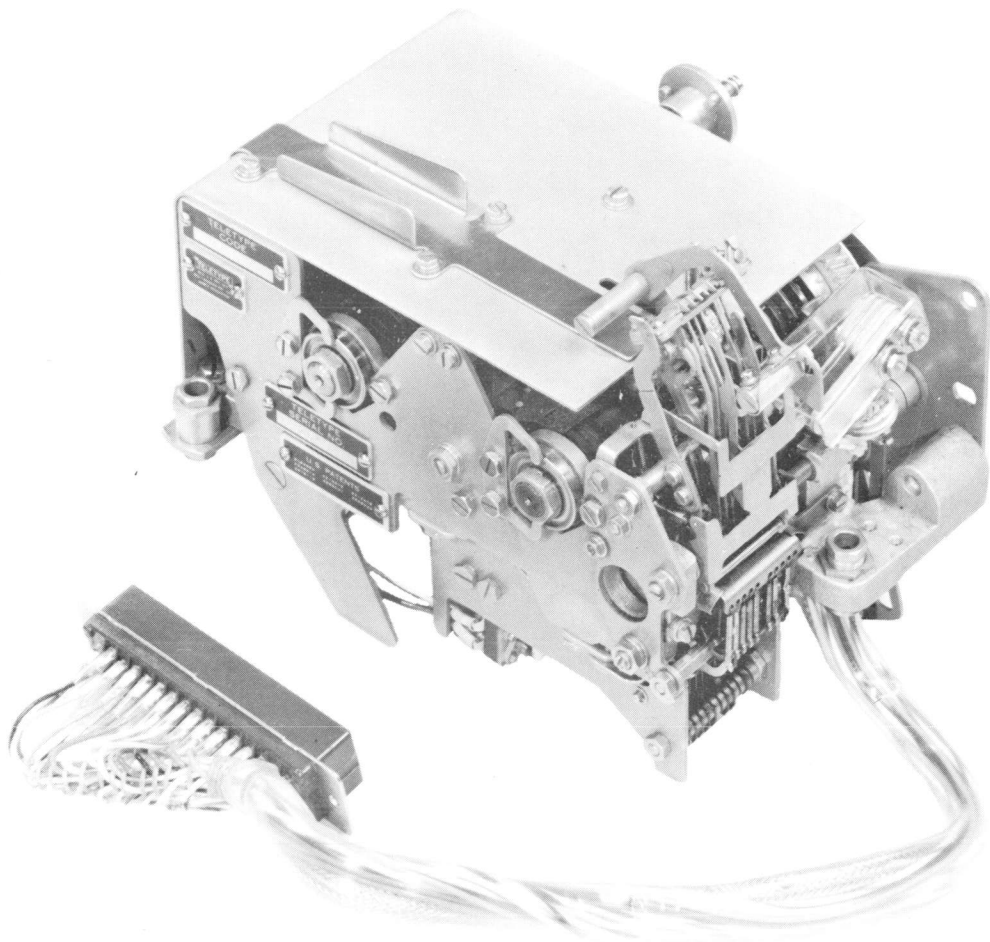


Figure 2 - Typical Transmitter Distributor (LAXD)