28 ANSWER-BACK UNIT

For information on the 28 answer-back unit, refer to the following sections:

| 574-235-100 | 28 and 35 Answer-Back Unit General Description and Principles of Operation |
|-------------|---|
| 574-235-200 | 28 and 35 Answer-Back Unit Installation |
| 574-235-400 | 28 and 35 Answer-Back Unit Actual and Schematic Wiring Diagram |
| 574-235-700 | 28 and 35 Answer-Back Unit Adjustments |
| 574-235-701 | 28 and 35 Answer-Back Unit Lubrication |
| 574-235-702 | 28 and 35 Answer-Back Unit Disassembly and Reassembly |
| 574-235-800 | Self-Contained Answer-Back Unit (LABD) Parts |