

CHANGES IN  
BULLETIN 138, ISSUE 5  
ADJUSTMENTS - TYPE BAR PAGE  
PRINTER (MODEL 15)

To facilitate adjustment of the right motor stop contact

PAGE 42

RIGHT MOTOR STOP CONTACT ADJUSTMENT (Figures 35 and 36)

Substitute the following for the last sentence in the first paragraph:

"To adjust, position the right contact spring bracket by means of its mounting holes so that the contact spring mounting surface of the bracket is approximately parallel to the top edge of the send-receive mechanism plate. Then bend the light contact spring, if necessary, to obtain the required clearance. Make certain that the heavy contact spring does not bear against the light spring."

\* \* \* \* \*