

CHANGES IN
BULLETINS

170. Issue 1 Multiple Transmitter Distributor and Base, Single Unit Trans-
mitter Distributor and Base. Page 5
175 Issue 1 Single Unit Transmitter and Base. Page 5
185 Issue 1 Multiple Transmitter Distributor and Base, Page 10

FEED WHEEL DETENT SPRING TENSION

Change this adjustment to read as follows:

"With the feed pawl held away from the feed wheel ratchet, hook a 32 oz. scale over the head of the detent roller screw and pull parallel to the top plate. It should require 14 to 20 ozs. to start the detent moving."

* * *