

INSTRUCTIONS FOR USING THE PORTABLE REPERFORATOR  
TABLES (RT-33 OR RT-34) IN CONNECTION WITH THE  
METAL TABLE (XRT-107) OF THE 19 TYPE SET

The portable tables RT-33 and RT-34 will accommodate either a standard single magnet reperforator or a typing reperforator. The RT-34 was designed to accommodate a typing reperforator or a reperforator. The RT-33 was designed specifically for a reperforator but will also accommodate a typing reperforator. The primary difference in tables is that the right edge of the typing reperforator extends beyond the edge of the RT-33 table. On the other hand, the RT-34 being wider, accommodates both the reperforator and typing reperforator in a central position on the table.

Either table with a reperforator or typing reperforator mounted on it can be stored within the left front cavity of the XRT-107 table. A 95042 latch must be attached to the XRT-107 table in order to hold the RT-33 or RT-34 tables in this position.

Shipped with the RT-33 and the RT-34 tables are the following parts:

2	2191	Lock Washer
2	7002	Washer
1	80419	Plate
2	80444	Screw
2	92552	Rubber Sleeve
2	92553	Metal Sleeve
1	92780	Felt Pad (RT-33 only)
1	98695	Felt Pad (RT-34 only)
1	95042	Latch
4	95128	Casters

Installing the Reperforator or the Typing Reperforator on the RT-33 or RT-34 Tables

Place the 92552 rubber sleeves over the studs on the table, and then place the 92553 metal sleeves over the rubber sleeves. Place the 92780 felt pad on the RT-33 table or the 98695 felt pad on the RT-34 table so that the holes in the pad engage the studs, and so that the notch in the rear edge of the pad aligns with the hole in the table. Mount either the reperforator or the typing reperforator so that the holes in the base plate engage the locating studs, and so that the power and line cords pass directly down through the hole in the table provided for this purpose. When so installed, the tape will feed from the reperforator at the front of the table which may be identified by the Teletype name plate.

Installing the 95042 Latch on the XRT-107 Table

Secure the 95042 latch and 80419 plate to the left horizontal cross brace on the inside of the table, using the two holes provided in the cross brace. Place the 80419 plate against the inner surface of the cross brace and extend the latch toward the front of the table. Using a 2191 lock washer and a 7002 washer on each 80444 screw, insert the screws through the holes in the

latch and cross brace and thread them into the 80419 plate. Adjust the latch if necessary, so that it clears the lower horizontal edge of the portable table by a safe margin (approximately 1/4").

Connecting the Reperforator or Typing Reperforator to the XRT-107 Table

With the reperforator or typing reperforator mounted on the portable table, position this table under the XRT-107 table so that the left rear leg of the portable table is engaged by the latch. Then bring the line and power cords up through the hole in the shelf of the XRT-107 table and insert the plugs in the receptacles adjacent to the hole. If desired, the excess cord may be pulled through the hole and stored in the hollow left rear leg of the XRT-107 table.