

CONTENTS	PAGE
FOREWORD.	i
DISTRIBUTION LIST	ii
RECORD OF CHANGES	iii
INFORMATION	
Purpose	vi
How to use the Guide.	vi
Safety.	vii
Improvement of Study Habits	viii
INFORMATION SHEETS	
1-2-1I Major Components and Relationship to the Model 28 Family . .	1
1-3-1I Technical Manual and Instruction Sheets.	5
1-4-1I Signalling Code.	8
1-5-1I Terminology and Power Law.	14
1-6-1I Gear Power Train and Internal Expansion Clutch	19
2-1-1I Main Shaft	22
2-1-2I Engaging and Disengaging the Selector Clutch, Range Finder and Distortion	25
2-1-3I Selecting and Transfer Mechanisms.	29
2-1-4I Engaging and Disengaging the Code Bar Clutch and Positioning Code Bars.	33
2-1-5I Adjustment Procedures.	36
2-2-1I Engaging and Disengaging the Function and Typebox Clutches .	39
2-2-2I Configuration of the Type Box and Vertical Positioning . . .	41
2-3-1I Horizontal Positioning	44
2-3-3I Ribbon Mechanism	48
2-3-4I Normal Spacing and Spacing Cut-out	52
2-4-1I Printing a Character	56
2-3-2I Typical Functions.	58
2-4-2I Normal and Local Carriage Return	61
2-3-5I Spacing Suppression and Signal Bell.	64
2-4-3I Letters-Figures Function	67
2-4-4I Line Feed Mechanism.	71
2-4-6I Automatic Line Feed on Carriage Return	76
2-4-5I Automatic Carriage Return and Line Feed.	79
2-4-7I Remote Keyboard Lock Mechanism	81
2-5-1I Cleaning Tanks	84
2-6-1I Troubleshooting Procedures (Automatic Typewriter)	86
3-1-1I Lockball Mechanism and Engaging the Signal Generator Clutch.	89
3-1-2I Signal Generator Mechanism	92
3-1-3I Resetting and Disengaging the Signal Generator Clutch. . . .	95
3-1-4I Repeat and Line Break Mechanism.	99
3-1-5I Local Keyboard Lock and Unlock	101
3-1-6I Character Counter.	103

3-2-1I	Troubleshooting Procedures for the Keyboard.	106
4-1-1I	Keyboard Control Knob and Engaging and Disengaging the Perforator Function Clutch	107
4-1-2I	Punch Mechanism.	114
4-2-1I	Tape Feed and Feed Hole Spacing.	117
4-3-1I	Transfer Mechanism	119
4-3-2I	Configuration of the Typewheel, Axial Positioning and Axial Correcting	121
4-3-3I	Rotary Positioning and Rotary Correcting	126
4-3-4I	Letters-Figures Shift.	134
4-4-1I	Printing Mechanism	139
4-4-3I	Ribbon Mechanism	141
4-4-2I	Power Drive Backspace.	144
4-5-1I	Typing Reperforator.	148
4-6-1I	Troubleshooting Procedures for the Typing Perforator	151
5-1-1I	Engaging and Disengaging the Transmitter Distributor Clutch.	152
5-1-2I	Tape Feed and Tape Sensing	154
5-1-3I	Start-Stop, Tight or Tangled Tape and Tape-Out Sensing Operation.	158
6-1-1I	Basic Electricity.	162
6-2-1I	AC Circuits.	165
6-3-1I	DC Circuits.	168
6-4-1I	AC and DC in the Typing Reperforator	170
6-5-1I	Selector Magnet Driver	172
6-6-1I	Teletype Panels.	173
7-1-1I	Distortion and Test Equipment.	175
7-2-1I	Overall Troubleshooting Procedures (AN/UGC-6K)	177
8-1-1I	Major Components of the AN/UGC-20 and Relationship with Model 28 Family.	180
8-2-1I	Code Bar Mechanism	182
8-2-2I	Universal Mechanism and Contact Mechanism.	184
8-2-3I	Reset, Repeat, Linebreak and Local Functions Mechanism . . .	187
8-2-4I	Distributor Mechanism.	191
8-2-5I	3-Speed Gear Mechanism	195
8-3-1I	AC and DC Circuits in the AN/UGC-20.	197
8-4-1I	Troubleshooting Procedures AN/UGC-20	199
8-4-2I	Reassembly of the AN/UGC-20.	201
9-1-1I	Similarities and Differences of Teletype Equipment	202