Bulletin No. 1093
Issue 1
March, 1941

TELETYPE

PRINTING TELEGRAPH SYSTEMS

PARTS
PERFORATOR

TELETYPE
CORPORATION
SUBSIDIARY OF
Western Electric Company
CHICAGO, U.S.A.

Bulletin No. 1093
Issue 1
March, 1941

TELETYPE

PRINTING TELEGRAPH SYSTEMS

PARTS
PERFORATOR

TELETYPE
CORPORATION
SUBSIDIARY OF
Western Electric Company
CHICAGO, U.S.A.

Printed in U.S.A.

ALPHABETICAL INDEX



122-453 CORD (ASSEM.)

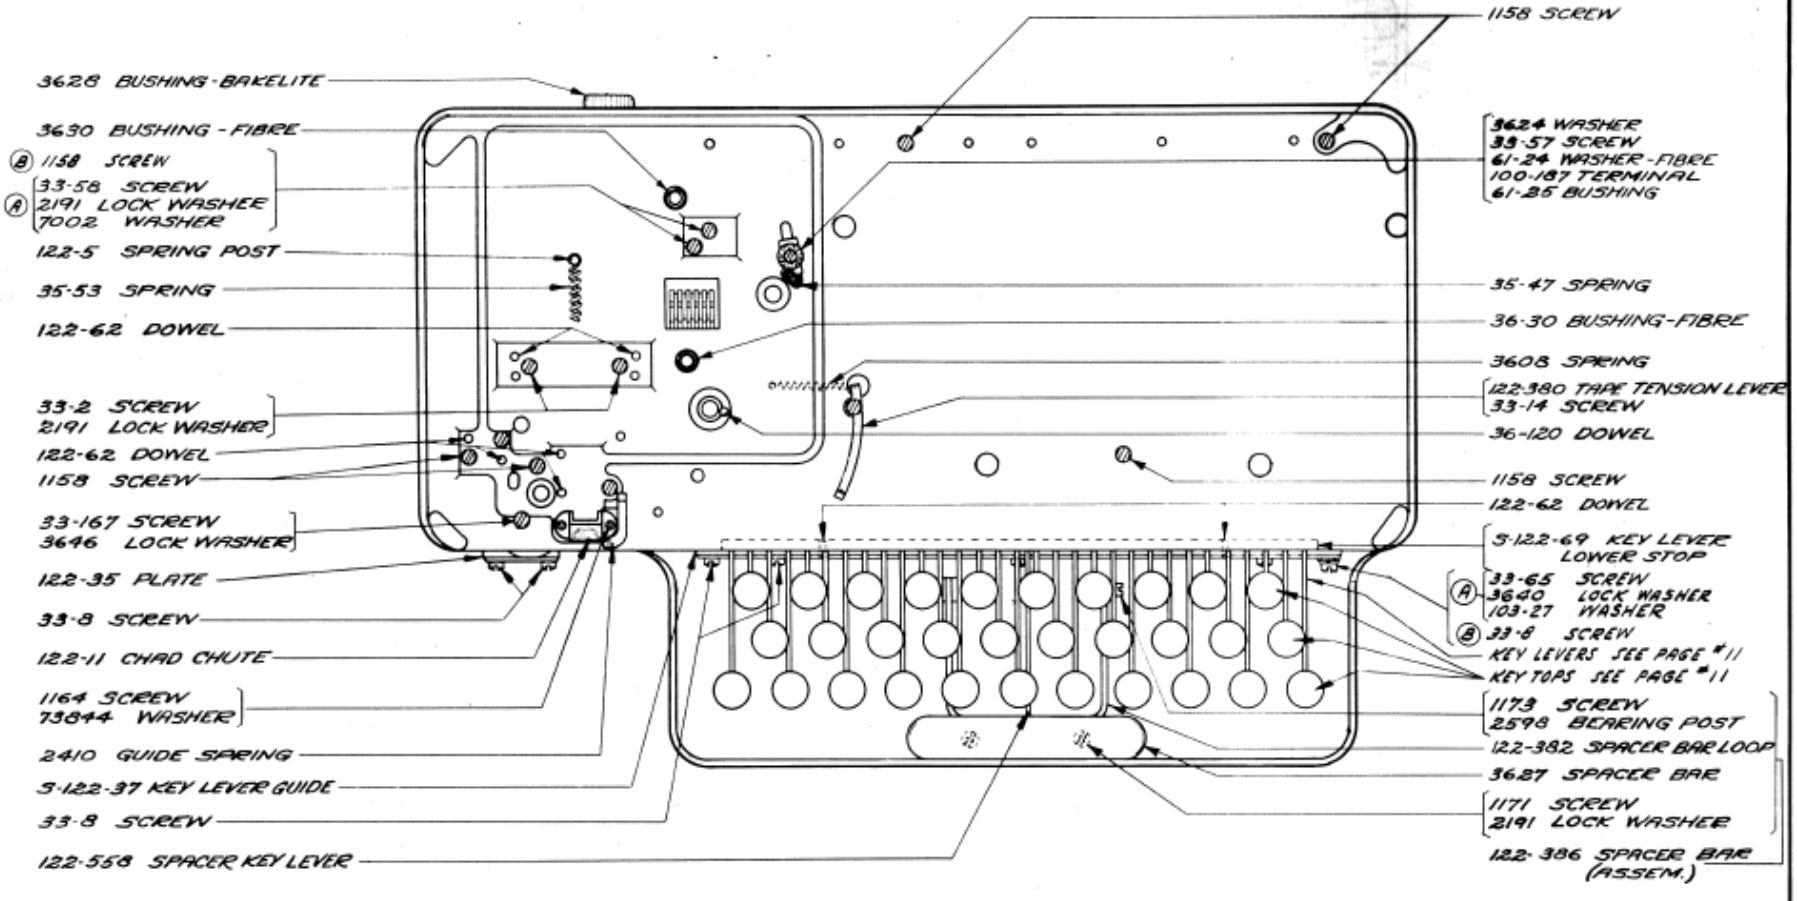

Ⓐ FOR PERFORATORS EQUIPPED WITH RAPID TAPE FEED-OUT
Ⓑ FOR PERFORATORS NOT EQUIPPED WITH RAPID TAPE FEED-OUT

BASE - TOP VIEW

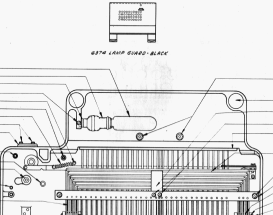

Ⓐ FOR PERFORATORS EQUIPPED WITH RAPID TAPE FEED-OUT
Ⓑ FOR PERFORATORS NOT EQUIPPED WITH RAPID TAPE FEED-OUT

BASE — BOTTOM VIEW

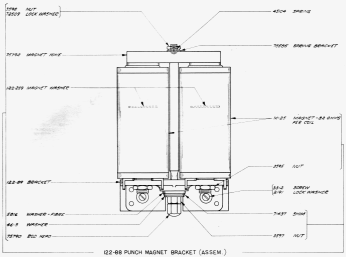

122-88 PUNCH MAGNET BRACKET (ASSEM.)

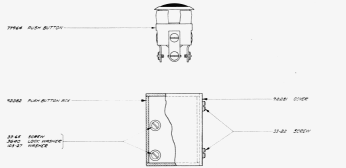

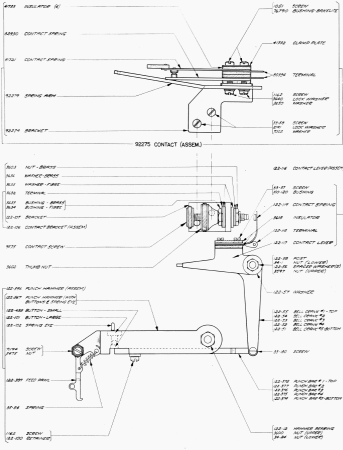
92275 CONTACT (ASSEM)
92-14 CONTACT-LOWER (ASSEM)
92-13 NUT-BRASS
92-16 WASHER-SPRING
92-12 WASHER-FIBRE
92-15 TERMINAL
92-11 SCREW
92-11-A SCREW
92-10 BUSHING
92-10-A BUSHING-BRASS
92-10-B BUSHING-FIBRE
92-9 CONTACT-SPRING
92-8 INSULATOR
92-7 CONTACT-BRACKET (ASSEM)
92-6-A TERMINAL
92-6-B CONTACT-LOWER
92-5 CONTACT-UPPER
92-4 PLUG
92-4-A PLUG-BRASS
92-4-B PLUG-BRASS (ASSEM)
92-4-C PLUG-WOOD
92-3 TUBE NUT
92-3-A HOUSING
92-2-A HOUSING-BRASS
92-2-B HOUSING-WOOD
92-2-C HOUSING-WOOD (ASSEM)
92-2-D HOUSING-WOOD (ASSEM)
92-2-E HOUSING-WOOD (ASSEM)
92-2-F HOUSING-WOOD (ASSEM)
92-2-G HOUSING-WOOD (ASSEM)
92-2-H HOUSING-WOOD (ASSEM)
92-2-I HOUSING-WOOD (ASSEM)
92-2-J HOUSING-WOOD (ASSEM)
92-2-K HOUSING-WOOD (ASSEM)
92-2-L HOUSING-WOOD (ASSEM)
92-2-M HOUSING-WOOD (ASSEM)
92-2-N HOUSING-WOOD (ASSEM)
92-2-O HOUSING-WOOD (ASSEM)
92-2-P HOUSING-WOOD (ASSEM)
92-2-Q HOUSING-WOOD (ASSEM)
92-2-R HOUSING-WOOD (ASSEM)
92-2-S HOUSING-WOOD (ASSEM)
92-2-T HOUSING-WOOD (ASSEM)
92-2-U HOUSING-WOOD (ASSEM)
92-2-V HOUSING-WOOD (ASSEM)
92-2-W HOUSING-WOOD (ASSEM)
92-2-X HOUSING-WOOD (ASSEM)
92-2-Y HOUSING-WOOD (ASSEM)
92-2-Z HOUSING-WOOD (ASSEM)
92-2-AA HOUSING-WOOD (ASSEM)
92-2-AB HOUSING-WOOD (ASSEM)
92-2-AC HOUSING-WOOD (ASSEM)
92-2-AD HOUSING-WOOD (ASSEM)
92-2-AE HOUSING-WOOD (ASSEM)
92-2-AF HOUSING-WOOD (ASSEM)
92-2-AG HOUSING-WOOD (ASSEM)
92-2-AH HOUSING-WOOD (ASSEM)
92-2-AI HOUSING-WOOD (ASSEM)
92-2-AJ HOUSING-WOOD (ASSEM)
92-2-AK HOUSING-WOOD (ASSEM)
92-2-AL HOUSING-WOOD (ASSEM)
92-2-AM HOUSING-WOOD (ASSEM)
92-2-AN HOUSING-WOOD (ASSEM)
92-2-AO HOUSING-WOOD (ASSEM)
92-2-AP HOUSING-WOOD (ASSEM)
92-2-AQ HOUSING-WOOD (ASSEM)
92-2-AR HOUSING-WOOD (ASSEM)
92-2-AS HOUSING-WOOD (ASSEM)
92-2-AT HOUSING-WOOD (ASSEM)
92-2-AU HOUSING-WOOD (ASSEM)
92-2-AV HOUSING-WOOD (ASSEM)
92-2-AW HOUSING-WOOD (ASSEM)
92-2-AX HOUSING-WOOD (ASSEM)
92-2-AY HOUSING-WOOD (ASSEM)
92-2-AZ HOUSING-WOOD (ASSEM)
92-2-BA HOUSING-WOOD (ASSEM)
92-2-BB HOUSING-WOOD (ASSEM)
92-2-BC HOUSING-WOOD (ASSEM)
92-2-BD HOUSING-WOOD (ASSEM)
92-2-BE HOUSING-WOOD (ASSEM)
92-2-BF HOUSING-WOOD (ASSEM)
92-2-BG HOUSING-WOOD (ASSEM)
92-2-BH HOUSING-WOOD (ASSEM)
92-2-BI HOUSING-WOOD (ASSEM)
92-2-BJ HOUSING-WOOD (ASSEM)
92-2-BK HOUSING-WOOD (ASSEM)
92-2-BL HOUSING-WOOD (ASSEM)
92-2-BM HOUSING-WOOD (ASSEM)
92-2-BN HOUSING-WOOD (ASSEM)
92-2-BO HOUSING-WOOD (ASSEM)
92-2-BP HOUSING-WOOD (ASSEM)
92-2-BQ HOUSING-WOOD (ASSEM)
92-2-BR HOUSING-WOOD (ASSEM)
92-2-BS HOUSING-WOOD (ASSEM)
92-2-BT HOUSING-WOOD (ASSEM)
92-2-BU HOUSING-WOOD (ASSEM)
92-2-BV HOUSING-WOOD (ASSEM)
92-2-BW HOUSING-WOOD (ASSEM)
92-2-BX HOUSING-WOOD (ASSEM)
92-2-BY HOUSING-WOOD (ASSEM)
92-2-BZ HOUSING-WOOD (ASSEM)
92-2-CA HOUSING-WOOD (ASSEM)
92-2-CB HOUSING-WOOD (ASSEM)
92-2-CC HOUSING-WOOD (ASSEM)
92-2-CD HOUSING-WOOD (ASSEM)
92-2-CE HOUSING-WOOD (ASSEM)
92-2-CF HOUSING-WOOD (ASSEM)
92-2-CG HOUSING-WOOD (ASSEM)
92-2-CH HOUSING-WOOD (ASSEM)
92-2-CI HOUSING-WOOD (ASSEM)
92-2-CJ HOUSING-WOOD (ASSEM)
92-2-CK HOUSING-WOOD (ASSEM)
92-2-CL HOUSING-WOOD (ASSEM)
92-2-CM HOUSING-WOOD (ASSEM)
92-2-CN HOUSING-WOOD (ASSEM)
92-2-CO HOUSING-WOOD (ASSEM)
92-2-CP HOUSING-WOOD (ASSEM)
92-2-CQ HOUSING-WOOD (ASSEM)
92-2-CR HOUSING-WOOD (ASSEM)
92-2-CS HOUSING-WOOD (ASSEM)
92-2-CT HOUSING-WOOD (ASSEM)
92-2-CU HOUSING-WOOD (ASSEM)
92-2-CV HOUSING-WOOD (ASSEM)
92-2-CW HOUSING-WOOD (ASSEM)
92-2-CX HOUSING-WOOD (ASSEM)
92-2-CY HOUSING-WOOD (ASSEM)
92-2-CZ HOUSING-WOOD (ASSEM)
92-2-DA HOUSING-WOOD (ASSEM)
92-2-DB HOUSING-WOOD (ASSEM)
92-2-DC HOUSING-WOOD (ASSEM)
92-2-DD HOUSING-WOOD (ASSEM)
92-2-DE HOUSING-WOOD (ASSEM)
92-2-DF HOUSING-WOOD (ASSEM)
92-2-DG HOUSING-WOOD (ASSEM)
92-2-DH HOUSING-WOOD (ASSEM)
92-2-DI HOUSING-WOOD (ASSEM)
92-2-DJ HOUSING-WOOD (ASSEM)
92-2-DK HOUSING-WOOD (ASSEM)
92-2-DL HOUSING-WOOD (ASSEM)
92-2-DM HOUSING-WOOD (ASSEM)
92-2-DN HOUSING-WOOD (ASSEM)
92-2-DO HOUSING-WOOD (ASSEM)
92-2-DP HOUSING-WOOD (ASSEM)
92-2-DQ HOUSING-WOOD (ASSEM)
92-2-DR HOUSING-WOOD (ASSEM)
92-2-DS HOUSING-WOOD (ASSEM)
92-2-DT HOUSING-WOOD (ASSEM)
92-2-DU HOUSING-WOOD (ASSEM)
92-2-DV HOUSING-WOOD (ASSEM)
92-2-DW HOUSING-WOOD (ASSEM)
92-2-DX HOUSING-WOOD (ASSEM)
92-2-DY HOUSING-WOOD (ASSEM)
92-2-DZ HOUSING-WOOD (ASSEM)
92-2-EA HOUSING-WOOD (ASSEM)
92-2-EB HOUSING-WOOD (ASSEM)
92-2-EC HOUSING-WOOD (ASSEM)
92-2-ED HOUSING-WOOD (ASSEM)
92-2-EE HOUSING-WOOD (ASSEM)
92-2-EF HOUSING-WOOD (ASSEM)
92-2-EG HOUSING-WOOD (ASSEM)
92-2-EH HOUSING-WOOD (ASSEM)
92-2-EI HOUSING-WOOD (ASSEM)
92-2-EJ HOUSING-WOOD (ASSEM)
92-2-EK HOUSING-WOOD (ASSEM)
92-2-EL HOUSING-WOOD (ASSEM)
92-2-EM HOUSING-WOOD (ASSEM)
92-2-EN HOUSING-WOOD (ASSEM)
92-2-EO HOUSING-WOOD (ASSEM)
92-2-EP HOUSING-WOOD (ASSEM)
92-2-EQ HOUSING-WOOD (ASSEM)
92-2-ER HOUSING-WOOD (ASSEM)
92-2-ES HOUSING-WOOD (ASSEM)
92-2-ET HOUSING-WOOD (ASSEM)
92-2-EU HOUSING-WOOD (ASSEM)
92-2-EV HOUSING-WOOD (ASSEM)
92-2-EW HOUSING-WOOD (ASSEM)
92-2-EX HOUSING-WOOD (ASSEM)
92-2-EY HOUSING-WOOD (ASSEM)
92-2-EZ HOUSING-WOOD (ASSEM)
92-2-FA HOUSING-WOOD (ASSEM)
92-2-FB HOUSING-WOOD (ASSEM)
92-2-FC HOUSING-WOOD (ASSEM)
92-2-FD HOUSING-WOOD (ASSEM)
92-2-FE HOUSING-WOOD (ASSEM)
92-2-FF HOUSING-WOOD (ASSEM)
92-2-FG HOUSING-WOOD (ASSEM)
92-2-FH HOUSING-WOOD (ASSEM)
92-2-FI HOUSING-WOOD (ASSEM)
92-2-FJ HOUSING-WOOD (ASSEM)
92-2-FK HOUSING-WOOD (ASSEM)
92-2-FL HOUSING-WOOD (ASSEM)
92-2-FM HOUSING-WOOD (ASSEM)
92-2-FN HOUSING-WOOD (ASSEM)
92-2-FO HOUSING-WOOD (ASSEM)
92-2-FP HOUSING-WOOD (ASSEM)
92-2-FQ HOUSING-WOOD (ASSEM)
92-2-FR HOUSING-WOOD (ASSEM)
92-2-FS HOUSING-WOOD (ASSEM)
92-2-FT HOUSING-WOOD (ASSEM)
92-2-FU HOUSING-WOOD (ASSEM)
92-2-FV HOUSING-WOOD (ASSEM)
92-2-FW HOUSING-WOOD (ASSEM)
92-2-FX HOUSING-WOOD (ASSEM)
92-2-FY HOUSING-WOOD (ASSEM)
92-2-FZ HOUSING-WOOD (ASSEM)
92-2-GA HOUSING-WOOD (ASSEM)
92-2-GB HOUSING-WOOD (ASSEM)
92-2-GC HOUSING-WOOD (ASSEM)
92-2-GD HOUSING-WOOD (ASSEM)
92-2-GE HOUSING-WOOD (ASSEM)
92-2-GF HOUSING-WOOD (ASSEM)
92-2-GG HOUSING-WOOD (ASSEM)
92-2-GH HOUSING-WOOD (ASSEM)
92-2-GI HOUSING-WOOD (ASSEM)
92-2-GJ HOUSING-WOOD (ASSEM)
92-2-GK HOUSING-WOOD (ASSEM)
92-2-GL HOUSING-WOOD (ASSEM)
92-2-GM HOUSING-WOOD (ASSEM)
92-2-GN HOUSING-WOOD (ASSEM)
92-2-GO HOUSING-WOOD (ASSEM)
92-2-GP HOUSING-WOOD (ASSEM)
92-2-GQ HOUSING-WOOD (ASSEM)
92-2-GR HOUSING-WOOD (ASSEM)
92-2-GS HOUSING-WOOD (ASSEM)
92-2-GT HOUSING-WOOD (ASSEM)
92-2-GU HOUSING-WOOD (ASSEM)
92-2-GV HOUSING-WOOD (ASSEM)
92-2-GW HOUSING-WOOD (ASSEM)
92-2-GX HOUSING-WOOD (ASSEM)
92-2-GY HOUSING-WOOD (ASSEM)
92-2-GZ HOUSING-WOOD (ASSEM)
92-2-HA HOUSING-WOOD (ASSEM)
92-2-HB HOUSING-WOOD (ASSEM)
92-2-HC HOUSING-WOOD (ASSEM)
92-2-HD HOUSING-WOOD (ASSEM)
92-2-HE HOUSING-WOOD (ASSEM)
92-2-HF HOUSING-WOOD (ASSEM)
92-2-HG HOUSING-WOOD (ASSEM)
92-2-HH HOUSING-WOOD (ASSEM)
92-2-HI HOUSING-WOOD (ASSEM)
92-2-HJ HOUSING-WOOD (ASSEM)
92-2-HK HOUSING-WOOD (ASSEM)
92-2-HL HOUSING-WOOD (ASSEM)
92-2-HM HOUSING-WOOD (ASSEM)
92-2-HN HOUSING-WOOD (ASSEM)
92-2-HO HOUSING-WOOD (ASSEM)
92-2-HP HOUSING-WOOD (ASSEM)
92-2-HQ HOUSING-WOOD (ASSEM)
92-2-HR HOUSING-WOOD (ASSEM)
92-2-HS HOUSING-WOOD (ASSEM)
92-2-HT HOUSING-WOOD (ASSEM)
92-2-HU HOUSING-WOOD (ASSEM)
92-2-HV HOUSING-WOOD (ASSEM)
92-2-HW HOUSING-WOOD (ASSEM)
92-2-HX HOUSING-WOOD (ASSEM)
92-2-HY HOUSING-WOOD (ASSEM)
92-2-HZ HOUSING-WOOD (ASSEM)
92-2-IA HOUSING-WOOD (ASSEM)
92-2-IB HOUSING-WOOD (ASSEM)
92-2-IC HOUSING-WOOD (ASSEM)
92-2-ID HOUSING-WOOD (ASSEM)
92-2-IE HOUSING-WOOD (ASSEM)
92-2-IF HOUSING-WOOD (ASSEM)
92-2-IG HOUSING-WOOD (ASSEM)
92-2-IH HOUSING-WOOD (ASSEM)
92-2-II HOUSING-WOOD (ASSEM)
92-2-IJ HOUSING-WOOD (ASSEM)
92-2-IK HOUSING-WOOD (ASSEM)
92-2-IL HOUSING-WOOD (ASSEM)
92-2-IM HOUSING-WOOD (ASSEM)
92-2-IN HOUSING-WOOD (ASSEM)
92-2-IO HOUSING-WOOD (ASSEM)
92-2-IP HOUSING-WOOD (ASSEM)
92-2-IQ HOUSING-WOOD (ASSEM)
92-2-IR HOUSING-WOOD (ASSEM)
92-2-IS HOUSING-WOOD (ASSEM)
92-2-IT HOUSING-WOOD (ASSEM)
92-2-IU HOUSING-WOOD (ASSEM)
92-2-IV HOUSING-WOOD (ASSEM)
92-2-IW HOUSING-WOOD (ASSEM)
92-2-IX HOUSING-WOOD (ASSEM)
92-2-IY HOUSING-WOOD (ASSEM)
92-2-IZ HOUSING-WOOD (ASSEM)
92-2-JA HOUSING-WOOD (ASSEM)
92-2-JB HOUSING-WOOD (ASSEM)
92-2-JC HOUSING-WOOD (ASSEM)
92-2-JD HOUSING-WOOD (ASSEM)
92-2-JE HOUSING-WOOD (ASSEM)
92-2-JF HOUSING-WOOD (ASSEM)
92-2-JG HOUSING-WOOD (ASSEM)
92-2-JH HOUSING-WOOD (ASSEM)
92-2-JI HOUSING-WOOD (ASSEM)
92-2-JJ HOUSING-WOOD (ASSEM)
92-2-JK HOUSING-WOOD (ASSEM)
92-2-JL HOUSING-WOOD (ASSEM)
92-2-JM HOUSING-WOOD (ASSEM)
92-2-JN HOUSING-WOOD (ASSEM)
92-2-JO HOUSING-WOOD (ASSEM)
92-2-JP HOUSING-WOOD (ASSEM)
92-2-JQ HOUSING-WOOD (ASSEM)
92-2-JR HOUSING-WOOD (ASSEM)
92-2-JS HOUSING-WOOD (ASSEM)
92-2-JT HOUSING-WOOD (ASSEM)
92-2-JU HOUSING-WOOD (ASSEM)
92-2-JV HOUSING-WOOD (ASSEM)
92-2-JW HOUSING-WOOD (ASSEM)
92-2-JX HOUSING-WOOD (ASSEM)
92-2-JY HOUSING-WOOD (ASSEM)
92-2-JZ HOUSING-WOOD (ASSEM)
92-2-KA HOUSING-WOOD (ASSEM)
92-2-KB HOUSING-WOOD (ASSEM)
92-2-KC HOUSING-WOOD (ASSEM)
92-2-KD HOUSING-WOOD (ASSEM)
92-2-KE HOUSING-WOOD (ASSEM)
92-2-KF HOUSING-WOOD (ASSEM)
92-2-KG HOUSING-WOOD (ASSEM)
92-2-KH HOUSING-WOOD (ASSEM)
92-2-KI HOUSING-WOOD (ASSEM)
92-2-KJ HOUSING-WOOD (ASSEM)
92-2-KK HOUSING-WOOD (ASSEM)
92-2-KL HOUSING-WOOD (ASSEM)
92-2-KM HOUSING-WOOD (ASSEM)
92-2-KN HOUSING-WOOD (ASSEM)
92-2-KO HOUSING-WOOD (ASSEM)
92-2-KP HOUSING-WOOD (ASSEM)
92-2-KQ HOUSING-WOOD (ASSEM)
92-2-KR HOUSING-WOOD (ASSEM)
92-2-KS HOUSING-WOOD (ASSEM)
92-2-KT HOUSING-WOOD (ASSEM)
92-2-KU HOUSING-WOOD (ASSEM)
92-2-KV HOUSING-WOOD (ASSEM)
92-2-KW HOUSING-WOOD (ASSEM)
92-2-KX HOUSING-WOOD (ASSEM)
92-2-KY HOUSING-WOOD (ASSEM)
92-2-KZ HOUSING-WOOD (ASSEM)
92-2-LA HOUSING-WOOD (ASSEM)
92-2-LB HOUSING-WOOD (ASSEM)
92-2-LC HOUSING-WOOD (ASSEM)
92-2-LD HOUSING-WOOD (ASSEM)
92-2-LE HOUSING-WOOD (ASSEM)
92-2-LF HOUSING-WOOD (ASSEM)
92-2-LG HOUSING-WOOD (ASSEM)
92-2-LH HOUSING-WOOD (ASSEM)
92-2-LI HOUSING-WOOD (ASSEM)
92-2-LJ HOUSING-WOOD (ASSEM)
92-2-LK HOUSING-WOOD (ASSEM)
92-2-LL HOUSING-WOOD (ASSEM)
92-2-LM HOUSING-WOOD (ASSEM)
92-2-LN HOUSING-WOOD (ASSEM)
92-2-LO HOUSING-WOOD (ASSEM)
92-2-LP HOUSING-WOOD (ASSEM)
92-2-LQ HOUSING-WOOD (ASSEM)
92-2-LR HOUSING-WOOD (ASSEM)
92-2-LS HOUSING-WOOD (ASSEM)
92-2-LT HOUSING-WOOD (ASSEM)
92-2-LU HOUSING-WOOD (ASSEM)
92-2-LV HOUSING-WOOD (ASSEM)
92-2-LW HOUSING-WOOD (ASSEM)
92-2-LX HOUSING-WOOD (ASSEM)
92-2-LY HOUSING-WOOD (ASSEM)
92-2-LZ HOUSING-WOOD (ASSEM)
92-2-MA HOUSING-WOOD (ASSEM)
92-2-MB HOUSING-WOOD (ASSEM)
92-2-MC HOUSING-WOOD (ASSEM)
92-2-MD HOUSING-WOOD (ASSEM)
92-2-ME HOUSING-WOOD (ASSEM)
92-2-MF HOUSING-WOOD (ASSEM)
92-2-MG HOUSING-WOOD (ASSEM)
92-2-MH HOUSING-WOOD (ASSEM)
92-2-MI HOUSING-WOOD (ASSEM)
92-2-MJ HOUSING-WOOD (ASSEM)
92-2-MK HOUSING-WOOD (ASSEM)
92-2-ML HOUSING-WOOD (ASSEM)
92-2-MM HOUSING-WOOD (ASSEM)
92-2-MN HOUSING-WOOD (ASSEM)
92-2-MO HOUSING-WOOD (ASSEM)
92-2-MP HOUSING-WOOD (ASSEM)
92-2-MQ HOUSING-WOOD (ASSEM)
92-2-MR HOUSING-WOOD (ASSEM)
92-2-MS HOUSING-WOOD (ASSEM)
92-2-MT HOUSING-WOOD (ASSEM)
92-2-MU HOUSING-WOOD (ASSEM)
92-2-MV HOUSING-WOOD (ASSEM)
92-2-MW HOUSING-WOOD (ASSEM)
92-2-MX HOUSING-WOOD (ASSEM)
92-2-MY HOUSING-WOOD (ASSEM)
92-2-MZ HOUSING-WOOD (ASSEM)
92-2-NA HOUSING-WOOD (ASSEM)
92-2-NB HOUSING-WOOD (ASSEM)
92-2-NC HOUSING-WOOD (ASSEM)
92-2-ND HOUSING-WOOD (ASSEM)
92-2-NE HOUSING-WOOD (ASSEM)
92-2-NF HOUSING-WOOD (ASSEM)
92-2-NG HOUSING-WOOD (ASSEM)
92-2-NH HOUSING-WOOD (ASSEM)
92-2-NI HOUSING-WOOD (ASSEM)
92-2-NJ HOUSING-WOOD (ASSEM)
92-2-NK HOUSING-WOOD (ASSEM)
92-2-NL HOUSING-WOOD (ASSEM)
92-2-NM HOUSING-WOOD (ASSEM)
92-2-NN HOUSING-WOOD (ASSEM)
92-2-NO HOUSING-WOOD (ASSEM)
92-2-NP HOUSING-WOOD (ASSEM)
92-2-NQ HOUSING-WOOD (ASSEM)
92-2-NR HOUSING-WOOD (ASSEM)
92-2-NS HOUSING-WOOD (ASSEM)
92-2-NT HOUSING-WOOD (ASSEM)
92-2-NU HOUSING-WOOD (ASSEM)
92-2-NV HOUSING-WOOD (ASSEM)
92-2-NW HOUSING-WOOD (ASSEM)
92-2-NX HOUSING-WOOD (ASSEM)
92-2-NY HOUSING-WOOD (ASSEM)
92-2-NZ HOUSING-WOOD (ASSEM)
92-2-OA HOUSING-WOOD (ASSEM)
92-2-OB HOUSING-WOOD (ASSEM)
92-2-OC HOUSING-WOOD (ASSEM)
92-2-OD HOUSING-WOOD (ASSEM)
92-2-OE HOUSING-WOOD (ASSEM)
92-2-OF HOUSING-WOOD (ASSEM)
92-2-OG HOUSING-WOOD (ASSEM)
92-2-OH HOUSING-WOOD (ASSEM)
92-2-OI HOUSING-WOOD (ASSEM)
92-2-OJ HOUSING-WOOD (ASSEM)
92-2-OK HOUSING-WOOD (ASSEM)
92-2-OL HOUSING-WOOD (ASSEM)
92-2-OM HOUSING-WOOD (ASSEM)
92-2-ON HOUSING-WOOD (ASSEM)
92-2-OO HOUSING-WOOD (ASSEM)
92-2-OP HOUSING-WOOD (ASSEM)
92-2-OQ HOUSING-WOOD (ASSEM)
92-2-OR HOUSING-WOOD (ASSEM)
92-2-OS HOUSING-WOOD (ASSEM)
92-2-OT HOUSING-WOOD (ASSEM)
92-2-OU HOUSING-WOOD (ASSEM)
92-2-OV HOUSING-WOOD (ASSEM)
92-2-OW HOUSING-WOOD (ASSEM)
92-2-OX HOUSING-WOOD (ASSEM)
92-2-OY HOUSING-WOOD (ASSEM)
92-2-OZ HOUSING-WOOD (ASSEM)
92-2-PA HOUSING-WOOD (ASSEM)
92-2-PB HOUSING-WOOD (ASSEM)
92-2-PC HOUSING-WOOD (ASSEM)
92-2-PD HOUSING-WOOD (ASSEM)
92-2-PE HOUSING-WOOD (ASSEM)
92-2-PF HOUSING-WOOD (ASSEM)
92-2-PG HOUSING-WOOD (ASSEM)
92-2-PH HOUSING-WOOD (ASSEM)
92-2-PI HOUSING-WOOD (ASSEM)
92-2-PJ HOUSING-WOOD (ASSEM)
92-2-PK HOUSING-WOOD (ASSEM)
92-2-PL HOUSING-WOOD (ASSEM)
92-2-PM HOUSING-WOOD (ASSEM)
92-2-PN HOUSING-WOOD (ASSEM)
92-2-PO HOUSING-WOOD (ASSEM)
92-2-PP HOUSING-WOOD (ASSEM)
92-2-PQ HOUSING-WOOD (ASSEM)
92-2-PR HOUSING-WOOD (ASSEM)
92-2-PS HOUSING-WOOD (ASSEM)
92-2-PT HOUSING-WOOD (ASSEM)
92-2-PU HOUSING-WOOD (ASSEM)
92-2-PV HOUSING-WOOD (ASSEM)
92-2-PW HOUSING-WOOD (ASSEM)
92-2-PX HOUSING-WOOD (ASSEM)
92-2-PY HOUSING-WOOD (ASSEM)
92-2-PZ HOUSING-WOOD (ASSEM)
92-2-QA HOUSING-WOOD (ASSEM)
92-2-QB HOUSING-WOOD (ASSEM)
92-2-QC HOUSING-WOOD (ASSEM)
92-2-QD HOUSING-WOOD (ASSEM)
92-2-QE HOUSING-WOOD (ASSEM)
92-2-QF HOUSING-WOOD (ASSEM)
92-2-QG HOUSING-WOOD (ASSEM)
92-2-QH HOUSING-WOOD (ASSEM)
92-2-QI HOUSING-WOOD (ASSEM)
92-2-QJ HOUSING-WOOD (ASSEM)
92-2-QK HOUSING-WOOD (ASSEM)
92-2-QL HOUSING-WOOD (ASSEM)
92-2-QM HOUSING-WOOD (ASSEM)
92-2-QN HOUSING-WOOD (ASSEM)
92-2-QO HOUSING-WOOD (ASSEM)
92-2-QP HOUSING-WOOD (ASSEM)
92-2-QQ HOUSING-WOOD (ASSEM)
92-2-QR HOUSING-WOOD (ASSEM)
92-2-QS HOUSING-WOOD (ASSEM)
92-2-QT HOUSING-WOOD (ASSEM)
92-2-QU HOUSING-WOOD (ASSEM)
92-2-QV HOUSING-WOOD (ASSEM)
92-2-QW HOUSING-WOOD (ASSEM)
92-2-QX HOUSING-WOOD (ASSEM)
92-2-QY HOUSING-WOOD (ASSEM)
92-2-QZ HOUSING-WOOD (ASSEM)
92-2-RA HOUSING-WOOD (ASSEM)
92-2-RB HOUSING-WOOD (ASSEM)
92-2-RC HOUSING-WOOD (ASSEM)
92-2-RD HOUSING-WOOD (ASSEM)
92-2-RE HOUSING-WOOD (ASSEM)
92-2-RF HOUSING-WOOD (ASSEM)
92-2-RG HOUSING-WOOD (ASSEM)
92-2-RH HOUSING-WOOD (ASSEM)
92-2-RI HOUSING-WOOD (ASSEM)
92-2-RJ HOUSING-WOOD (ASSEM)
92-2-RK HOUSING-WOOD (ASSEM)
92-2-RL HOUSING-WOOD (ASSEM)
92-2-RM HOUSING-WOOD (ASSEM)
92-2-RN HOUSING-WOOD (ASSEM)
92-2-RO HOUSING-WOOD (ASSEM)
92-2-RP HOUSING-WOOD (ASSEM)
92-2-RQ HOUSING-WOOD (ASSEM)
92-2-RR HOUSING-WOOD (ASSEM)
92-2-RS HOUSING-WOOD (ASSEM)
92-2-RT HOUSING-WOOD (ASSEM)
92-2-RU HOUSING-WOOD (ASSEM)
92-2-RV HOUSING-WOOD (ASSEM)
92-2-RW HOUSING-WOOD (ASSEM)
92-2-RX HOUSING-WOOD (ASSEM)
92-2-RY HOUSING-WOOD (ASSEM)
92-2-RZ HOUSING-WOOD (ASSEM)
92-2-SA HOUSING-WOOD (ASSEM)
92-2-SB HOUSING-WOOD (ASSEM)
92-2-SC HOUSING-WOOD (ASSEM)
92-2-SD HOUSING-WOOD (ASSEM)
92-2-SE HOUSING-WOOD (ASSEM)
92-2-SF HOUSING-WOOD (ASSEM)
92-2-SG HOUSING-WOOD (ASSEM)
92-2-SH HOUSING-WOOD (ASSEM)
92-2-SI HOUSING-WOOD (ASSEM)
92-2-SJ HOUSING-WOOD (ASSEM)
92-2-SK HOUSING-WOOD (ASSEM)
92-2-SL HOUSING-WOOD (ASSEM)
92-2-SM HOUSING-WOOD (ASSEM)
92-2-SN HOUSING-WOOD (ASSEM)
92-2-SO HOUSING-WOOD (ASSEM)
92-2-SP HOUSING-WOOD (ASSEM)
92-2-SQ HOUSING-WOOD (ASSEM)
92-2-SR HOUSING-WOOD (ASSEM)
92-2-SS HOUSING-WOOD (ASSEM)
92-2-ST HOUSING-WOOD (ASSEM)
92-2-SU HOUSING-WOOD (ASSEM)
92-2-SV HOUSING-WOOD (ASSEM)
92-2-SW HOUSING-WOOD (ASSEM)
92-2-SX HOUSING-WOOD (ASSEM)
92-2-SY HOUSING-WOOD (ASSEM)
92-2-SZ HOUSING-WOOD (ASSEM)
92-2-TA HOUSING-WOOD (ASSEM)
92-2-TB HOUSING-WOOD (ASSEM)
92-2-TC HOUSING-WOOD (ASSEM)
92-2-TD HOUSING-WOOD (ASSEM)
92-2-TE HOUSING-WOOD (ASSEM)
92-2-TF HOUSING-WOOD (ASSEM)
92-2-TG HOUSING-WOOD (ASSEM)
92-2-TH HOUSING-WOOD (ASSEM)
92-2-TI HOUSING-WOOD (ASSEM)
92-2-TJ HOUSING-WOOD (ASSEM)
92-2-TK HOUSING-WOOD (ASSEM)
92-2-TL HOUSING-WOOD (ASSEM)
92-2-TM HOUSING-WOOD (ASSEM)
92-2-TN HOUSING-WOOD (ASSEM)
92-2-TO HOUSING-WOOD (ASSEM)
92-2-TP HOUSING-WOOD (ASSEM)
92-2-TQ HOUSING-WOOD (ASSEM)
92-2-TR HOUSING-WOOD (ASSEM)
92-2-TS HOUSING-WOOD (ASSEM)
92-2-TT HOUSING-WOOD (ASSEM)
92-2-TU HOUSING-WOOD (ASSEM)
92-2-TV HOUSING-WOOD (ASSEM)
92-2-TW HOUSING-WOOD (ASSEM)
92-2-TX HOUSING-WOOD (ASSEM)
92-2-TY HOUSING-WOOD (ASSEM)
92-2-TZ HOUSING-WOOD (ASSEM)
92-2-UA HOUSING-WOOD (ASSEM)
92-2-UB HOUSING-WOOD (ASSEM)
92-2-UC HOUSING-WOOD (ASSEM)
92-2-UD HOUSING-WOOD (ASSEM)
92-2-UE HOUSING-WOOD (ASSEM)
92-2-UF HOUSING-WOOD (ASSEM)
92-2-UG HOUSING-WOOD (ASSEM)
92-2-UH HOUSING-WOOD (ASSEM)
92-2-UI HOUSING-WOOD (ASSEM)
92-2-UJ HOUSING-WOOD (ASSEM)
92-2-UK HOUSING-WOOD (ASSEM)
92-2-UL HOUSING-WOOD (ASSEM)
92-2-UM HOUSING-WOOD (ASSEM)
92-2-UN HOUSING-WOOD (ASSEM)
92-2-UO HOUSING-WOOD (ASSEM)
92-2-UP HOUSING-WOOD (ASSEM)
92-2-UQ HOUSING-WOOD (ASSEM)
92-2-UR HOUSING-WOOD (ASSEM)
92-2-US HOUSING-WOOD (ASSEM)
92-2-UT HOUSING-WOOD (ASSEM)
92-2-UU HOUSING-WOOD (ASSEM)
92-2-UV HOUSING-WOOD (ASSEM)
92-2-UW HOUSING-WOOD (ASSEM)
92-2-UX HOUSING-WOOD (ASSEM)
92-2-UY HOUSING-WOOD (ASSEM)
92-2-UZ HOUSING-WOOD (ASSEM)
92-2-VA HOUSING-WOOD (ASSEM)
92-2-VB HOUSING-WOOD (ASSEM)
92-2-VC HOUSING-WOOD (ASSEM)
92-2-VD HOUSING-WOOD (ASSEM)
92-2-VE HOUSING-WOOD (ASSEM)
92-2-VF HOUSING-WOOD (ASSEM)
92-2-VG HOUSING-WOOD (ASSEM)
92-2-VH HOUSING-WOOD (ASSEM)
92-2-VI HOUSING-WOOD (ASSEM)
92-2-VJ HOUSING-WOOD (ASSEM)
92-2-VK HOUSING-WOOD (ASSEM)
92-2-VL HOUSING-WOOD (ASSEM)
92-2-VM HOUSING-WOOD (ASSEM)
92-2-VN HOUSING-WOOD (ASSEM)
92-2-VO HOUSING-WOOD (ASSEM)
92-2-VP HOUSING-WOOD (ASSEM)
92-2-VQ HOUSING-WOOD (ASSEM)
92-2-VR HOUSING-WOOD (ASSEM)
92-2-VS HOUSING-WOOD (ASSEM)
92-2-VT HOUSING-WOOD (ASSEM)
92-2-VU HOUSING-WOOD (ASSEM)
92-2-VV HOUSING-WOOD (ASSEM)
92-2-VW HOUSING-WOOD (ASSEM)
92-2-VX HOUSING-WOOD (ASSEM)
92-2-VY HOUSING-WOOD (ASSEM)
92-2-VZ HOUSING-WOOD (ASSEM)
92-2-WA HOUSING-WOOD (ASSEM)
92-2-WB HOUSING-WOOD (ASSEM)
92-2-WC HOUSING-WOOD (ASSEM)
92-2-WD HOUSING-WOOD (ASSEM)
92-2-WE HOUSING-WOOD (ASSEM)
92-2-WF HOUSING-WOOD (ASSEM)
92-2-WG HOUSING-WOOD (ASSEM)
92-2-WH HOUSING-WOOD (ASSEM)
92-2-WI HOUSING-WOOD (ASSEM)
92-2-WJ HOUSING-WOOD (ASSEM)
92-2-WK HOUSING-WOOD (ASSEM)
92-2-WL HOUSING-WOOD (ASSEM)
92-2-WM HOUSING-WOOD (ASSEM)
92-2-WN HOUSING-WOOD (ASSEM)
92-2-WO HOUSING-WOOD (ASSEM)
92-2-WP HOUSING-WOOD (ASSEM)
92-2-WQ HOUSING-WOOD (ASSEM)
92-2-WR HOUSING-WOOD (ASSEM)
92-2-WS HOUSING-WOOD (ASSEM)
92-2-WT HOUSING-WOOD (ASSEM)
92-2-WU HOUSING-WOOD (ASSEM)
92-2-WV HOUSING-WOOD (ASSEM)
92-2-WW HOUSING-WOOD (ASSEM)
92-2-WX HOUSING-WOOD (ASSEM)
92-2-WY HOUSING-WOOD (ASSEM)
92-2-WZ HOUSING-WOOD (ASSEM)
92-2-XA HOUSING-WOOD (ASSEM)
92-2-XB HOUSING-WOOD (ASSEM)
92-2-XC HOUSING-WOOD (ASSEM)
92-2-XD HOUSING-WOOD (ASSEM)
92-2-XE HOUSING-WOOD (ASSEM)
92-2-XF HOUSING-WOOD (ASSEM)
92-2-XG HOUSING-WOOD (ASSEM)
92-2-XH HOUSING-WOOD (ASSEM)
92-2-XI HOUSING-WOOD (ASSEM)
92-2-XJ HOUSING-WOOD (ASSEM)
92-2-XK HOUSING-WOOD (ASSEM)
92-2-XL HOUSING-WOOD (ASSEM)
92-2-XM HOUSING-WOOD (ASSEM)
92-2-XN HOUSING-WOOD (ASSEM)
92-2-XO HOUSING-WOOD (ASSEM)
92-2-XP HOUSING-WOOD (ASSEM)
92-2-XQ HOUSING-WOOD (ASSEM)
92-2-XR HOUSING-WOOD (ASSEM)
92-2-XS HOUSING-WOOD (ASSEM)
92-2-XT HOUSING-WOOD (ASSEM)
92-2-XU HOUSING-WOOD (ASSEM)
92-2-XV HOUSING-WOOD (ASSEM)
92-2-XW HOUSING-WOOD (ASSEM)
92-

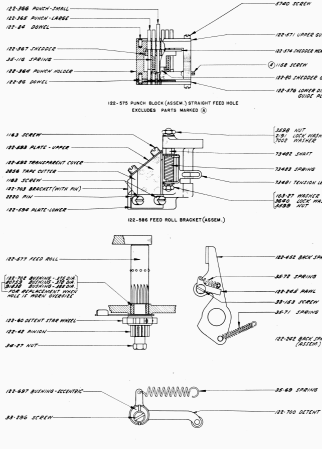
122-388 PUNCH-SMALL
122-387 PUNCH-LARGE
121-84 DOWEL
122-383 CHECKER
321-112 SPRING
122-384 PUNCH HOLDER
122-82 DOWEL
2740 SCREW
122-371 UPPER GUIDE PLATE
121-574 CHECKER MOUNTING STUD
4-1/8 SCREW
122-85 CHECKER GUIDE
122-370 LOWER GUIDE & GUIDE PLATES
122-575 PUNCH BLOCK (ASSEM.) STRAIGHT FEED HOLE
EXCLUDES PARTS MARKED (A)
1/4-3 SCREW
122-688 PLATE-UPPER
122-689 TRANSLUCENT COVER
2836 TAPE CUTTER
1/4-2 SCREW
122-763 BRACKET (WITH PIN)
2220 PIN
122-594 PLATE-LOWER
1/2-58 NUT
E.R. LOCK WASHER
1/2-5 WASHER
122-43 SHAFT
122-42 SPRING
122-41 TENSION LEVER
122-77 WEDGE
MARS LOCK WASHER
3/8-58 NUT
122-586 FEED ROLL BRACKET (ASSEM.)
122-577 FEED ROLL
122-762 BUSHING-1/2 O.D.
122-761 BUSHING-1/2 O.D.
122-760 BUSHING-1/2 O.D.
FOR ADJUSTABLE SHAFT
ALL 7/8 MORE SHORTER
122-40 OUTSIDE STAR WHEEL
122-42 PINION
24-27 NUT
122-692 BACK SPACER
122-73 SPRING
122-268 PAWL
122-123 SCREW
122-71 SPRING
122-268 BACK SPACER (ASSEM.)
122-697 BUSHING-ECCENTRIC
88-286 SCREW
122-63 SPRING
122-760 DETENT

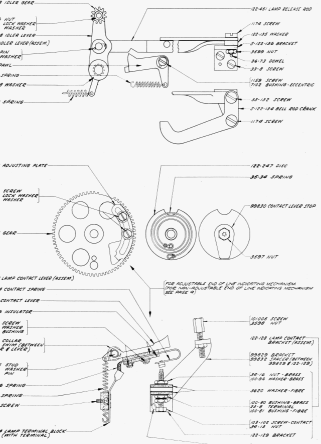
32-47 SLIDE BARS
34-25 VOLT
32-48 LOCK WASHER
37-28 PULLEY
32-48 SLIDE LEVER
8028 SLIDE LEVER (SECTOR)
5242 NUT
5247 WASHER
703 PANEL
33-26 SPRING
32-50 WASHER
32-49 SPRING
32-43 LAMP RELEASE ROD
1176 SCREW
32-52 WASHER
2-12-1A BRACKET
5280 NUT
34-13 DOWEL
37-2 SCREW
1126 SCREW
2-12-1B BUSHING ASSEMBLY
32-51 SCREW
2-12-1A BELL CRANK
1176 SCREW
8026 ADJUSTING PLATE
76-67 SCREW
8042 LOCK WASHER
32-51 WASHER
8027 GEAR
32-247 SLIDE
36-34 SPRING
8023 CONTACT LEVER STUD
3287 NUT
THE ADJUSTABLE END OF LAMP INDEXING MECHANISM
AND NON-ADJUSTABLE END OF LAMP INDEXING MECHANISM
SEE PAGE 9
CU-483 LAMP CONTACT LEVER (ASSEM)
32-49 CONTACT SPRING
8043 CONTACT LEVER
32-38 INSULATOR
5740 SCREW
5249 WASHER
32-39 BUSHING
8022 COLLAR
(PLACE BETWEEN CONTACT
PILLAR & LEVER)
8022 STUD
5247 WASHER
5242 NUT
32-50 SPRING
32-8 SPRING
1148 SCREW
CU-1008 LAMP TERMINAL BLOCK
(WITH TERMINAL)
32-50 SCREW
3288 NUT
32-50 LAMP CONTACT
BRACKET (ASSEM)
8023 BUSHING
8022 COLLAR
(PLACE BETWEEN
BRACKET & 32-50)
32-6 NUT-BRASS
32-34 WASHER BRASS
3282 WASHER-FIBRE
32-51 BUSHING-BRASS
32-6 TERMINAL
32-5 BUSHING-FIBRE
32-50 SCREW-CONTACT
32-13 NUT
32-13 BRACKET
32-13 SCREW
5247 LOCK WASHER

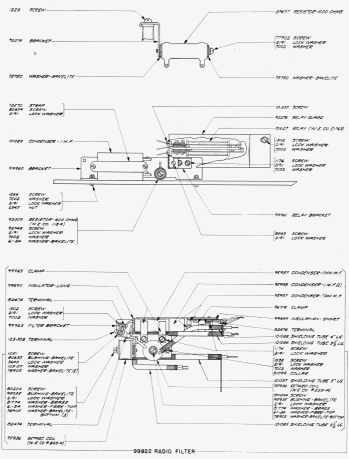
1223 SCREW
1229 BRACKET
1230 WASHER-BRACKET
1227 STAR
1228 WASHER
E-11 LOCK WASHER
1226 CONDENSER-.1 M.F.
1225 BRACKET
1224 SCREW
1226 WASHER
E-11 LOCK WASHER
1227 NUT
1223 RESISTOR-400 OHMS
1224 SCREW
E-11 LOCK WASHER
E-28 WASHER
E-28 WASHER-BRACKET
1227 STAR
1228 WASHER
E-11 LOCK WASHER
1227 NUT
1223 RESISTOR-400 OHMS
1224 SCREW
E-11 LOCK WASHER
E-28 WASHER
E-28 WASHER-BRACKET
1223 SCREW
1228 WASHER
E-11 LOCK WASHER
1227 NUT
1223 RESISTOR-400 OHMS
1224 SCREW
E-11 LOCK WASHER
E-28 WASHER
E-28 WASHER-BRACKET
1223 RESISTOR-400 OHMS
1224 SCREW
E-11 LOCK WASHER
E-28 WASHER
E-28 WASHER-BRACKET
1224 SCREW
1228 WASHER
E-11 LOCK WASHER
1227 NUT
1223 RESISTOR-400 OHMS
1224 SCREW
E-11 LOCK WASHER
E-28 WASHER
E-28 WASHER-BRACKET

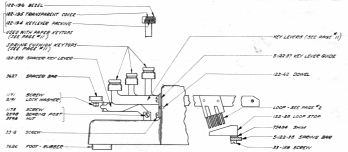



6371 TAPE REEL (ASSEM)-BLACK







78604 YOKE SUSPENSION (ASSEM.)

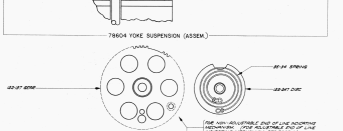

83973 RADIO INTERFERENCE FILTER

6377 COPYHOLDER (ASSEM)-BLACK

Description	KEYTOPS				KEY LEVERS	
	TEXTURE		COMBINATIONS		LIFTS CHARGE	
	#89410 Set of Spring Cushion Keytops	#89800 Set of Paper Keytops	#71430 Set of Spring Cushion Keytops	#89810 Set of Paper Keytops	For Spring Cushion Keytops	For Paper Keytops
A	89414	89427			79933	
B	89415	89428	78946	128-499	78934	122-596
C	89423	89436	78947	122-410	78935	122-597
D	89415	89428	78948	128-421	77719	122-598
E	78930	128-423	78949	128-422	78936	122-599
F	89416	89429	78950	128-423	78937	122-601
G	89417	89430	78951	122-321	78938	122-602
H	89418	89431	78952	122-425	77718	122-603
I	78924	122-427	78953	122-426	77717	122-604
J	89419	89432	78954	122-427	77712	122-605
K	89420	89433	78955	121-162	78919	122-606
L	89421	89434	78956	128-429	78920	122-607
M	78926	128-431	78957	122-430	77710	122-608
N	89422	89435	78958	128-431	78921	122-209
O	78940	122-479	78959	122-432	77711	122-210
P	78941	128-479	78960	128-432	78922	122-211
Q	78942	122-478	78961	122-478	78923	122-212
R	78943	128-478	78962	128-478	78924	122-213
S	78944	122-478	78963	122-478	78925	122-214
T	78945	128-478	78964	128-478	78926	122-215
U	78946	122-479	78965	122-480	77713	122-216
V	78947	128-481	78966	128-481	78927	122-217
W	78948	122-480	78967	122-482	78928	122-218
X	78949	128-483	78968	128-483	78929	122-219
Y	89424	89435	78969	122-483	77714	122-220
Z	78930	128-432	78970	122-484	100106	122-221
1/2	78931	122-433	78971	128-484	78930	122-222
CAP. RET.	78932	128-433	78972	122-485	78931	122-223
LINE FEED	78933	128-434	78973	128-485	78932	122-224
BLANK	89425	89439	78974	128-431	78931	122-220

8-35	Magnet - 42 ohms, 3	102-57	Washer, 4	102-172	(S 1), 11
8-36	Terminal, 5-3	102-58	Washer, 4	102-173	(S 1), 11
8-37	Screw (8-32 x 1/4), 1-2,	102-59	Detent Star Wheel, 5	102-174	(S 1), 11
	2, 3, 4, 5, 6, 7, 8,	102-60	Washer, 5-3	102-175	(S 1), 11
	9, 4-1	102-61	Dowel, 5-3	102-176	(S 1), 11
8-38	Screw (8-32 x 1/2), 4	102-62	Spring Post, 2	102-177	(S 1), 11
8-39	Screw (8-32 x 3/4), 3	102-63	Spring Post, 2	102-178	(S 1), 11
8-40	Screw (8-32 x 7/8), 1	102-64	Eye Lever Lower Stop,	102-179	(S 1), 11
8-41	Screw (8-32 x 1/2), 1		10	102-180	(S 1), 11
8-42	Screw (8-32 x 7/8), 4	102-65	Sander Guide, 5	102-181	(S 1), 11
8-43	Screw (8-32 x 1/2), 1	102-66	Dowel, 1	102-182	(S 1), 11
8-44	Screw (8-32 x 3/4), 2	102-67	Dowel, 1	102-183	(S 1), 11
8-45	Screw (8-32 Knurled), 2	102-68	Spun Washer Bracket	102-184	Screw No. Lever, 1,6
8-46	Screw (4-40 Knurled), 6		(Assem.), 3	102-185	Punch Bracket (with
8-47	Screw (8-32 x 1/2), 1	102-69	Washer, 3		Screws & Guide
8-48	Screw (8-32 x 1/2), 2	102-70	Lever Pivotal Block		Assem.), 4
8-49	Screw (8-32 x 1/2), 2		(with Assem.), 9	102-71	Right Guide Plate, 4
8-50	Screw (8-32 x 3/4), 1	102-71	Dowel, 1	102-72	Lever Spring Retain. Pin,
8-51	Screw (8-32 x 3/4), 1	102-72	Retainer, 2		1
8-52	Screw (8-32 x 1/2), 1	102-73	Lever Pivot Screw, 4	102-73	Punch Lock (Assem.), 5
8-53	Screw (4-40 Knurled), 5	102-74	Lever Pivot, 4	102-74	Lower Pin & Guide
8-54	Screw (8-32 x 1/2), 1	102-75	Contact Bracket (Assem.),		Plates, 5
8-55	Screw (8-32 x 1/2), 1		1	102-75	Lever Spring, 1
8-56	Screw (8-32 x 1/2), 6,9	102-76	Dowel, 1	102-76	Punch Spring (2), 11
8-57	Screw (1/4-20 Hex.), 2	102-77	Contact Lever (Assem.), 4	102-77	Punch Spring (2), 11
8-58	Screw (1/4-20 Hex.), 2	102-78	Contact Lever, 4	102-78	Feed Roll Bracket
8-59	Nut (1-40 Hex.), 2	102-79	Terminal, 4		(Assembly), 1
8-60	Nut, 2	102-80	Contact Screw, 4	102-79	Lever Spring Screw, 5
8-61	Eye Lever Spring,	102-81	Contact Spring, 4	102-80	Plate - Spring, 5
8-62	Spring, 6-7	102-82	Insulator, 4	102-81	Plate - Lever, 5
8-63	Spring, 6	102-83	Contact Bracket (Assem.),	102-82	Plate - Lever, 5
8-64	Spring, 1		1	102-83	Key Lever, 11
8-65	Spring, 1	102-84	Bracket, 6,9	102-84	Key Lever, 11
8-66	Spring, 1	102-85	Washer, 1	102-85	Key Lever, 11
8-67	Nut (4-36 Hex.), 10	102-86	Bracket, 6	102-86	Key Lever, 11
8-68	Spring, 1	102-87	Dowel, 1	102-87	Key Lever, 11
8-69	Spring, 1	102-88	Dowel, 1	102-88	Key Lever, 11
8-70	Spring, 1	102-89	Eye Lever Pashing, 6	102-89	Key Lever, 11
8-71	Nut (8-32 Flange, 1	102-90	Transport Dowel, 6	102-90	Key Lever, 11
8-72	Dowel, 1	102-91	Dowel, 1	102-91	Key Lever, 11
8-73	Dowel, 1	102-92	Feed Lever (Assem.), 5	102-92	Key Lever, 11
8-74	Dowel, 1	102-93	Dowel, 1	102-93	Key Lever, 11
8-75	Washer - Fibre, 1,7	102-94	Stop, 5	102-94	Key Lever, 11
8-76	Washer, 1	102-95	Feed Lever, 3	102-95	Key Lever, 11
8-77	Washer - Brass, 6,8	102-96	Spring, 5	102-96	Key Lever, 11
100-61	Washer - Fibre, 2,9	102-97	Stop, 5	102-97	Key Lever, 11
100-62	Washer, Brass, 2,9	102-98	Spring, 5	102-98	Key Lever, 11
100-63	Dowel, 1	102-99	Punch Set Screw, Bottom, 4	102-99	Key Lever, 11
100-76	Cord Terminal Block, 2	102-100	Punch Bar #1, 4	102-100	Key Lever, 11
102-16	Terminal, 1	102-101	Punch Bar #2, 4	102-101	Key Lever, 11
102-17	Washer, 1,2,3,4,5	102-102	Punch Bar #3, 4	102-102	Key Lever, 11
102-18	Screw (8-32 Knurled), 5,3	102-103	Punch Bar #4 - Top, 4	102-103	Key Lever, 11
102-19	Spring Post, 1	102-104	Punch Bar Set Screw,	102-104	Key Lever, 11
102-20	Dial Plate, 1		Bottom, 4	102-105	Key Lever, 11
102-21	Knob Assembly, 4	102-105	Contact Lever, 3	102-106	Key Lever, 11
102-22	Dowel #1, 4	102-106	Contact Spring, 3	102-107	Key Lever, 11
8-102-23	Dowel #2, 2	102-107	Contact Screw, 3	102-108	Key Lever, 11
8-102-24	Dowel #3, 2	102-108	Feed Pawl, 5	102-109	Key Lever, 11
8-102-25	Dowel #4, 2	102-109	Punch Set Lever (Assem.),	102-110	Key Lever, 11
8-102-26	Dowel #5, 2	102-110	Punch Lever (Assem.), 4	102-111	Key Lever, 11
8-102-27	Dowel #6, 2		Lower Bracket	102-112	Key Lever, 11
102-28	Feed Lever - Front, 4	102-111	(Pin, 1)	102-113	Key Lever, 11
102-29	Bearing, 2	102-112	(Pin, 1)	102-114	Key Lever, 11
102-30	Bearing, 2	102-113	(Pin, 1)	102-115	Key Lever, 11
102-31	Shaft, 4	102-114	(Pin, 1)	102-116	Key Lever, 11
102-32	Lug Stop, 7,6	102-115	(Pin, 1)	102-117	Key Lever, 11
102-33	Dowel, 1,4	102-116	(Pin, 1)	102-118	Key Lever, 11
102-34	Lever Lower Guide, 1,6	102-117	(Pin, 1)	102-119	Key Lever, 11
102-35	Spring Post, 6,8	102-118	(Pin, 1)	102-120	Key Lever, 11
8-102-36	Bearing, 2	102-119	(Pin, 1)	102-121	Key Lever, 11
102-37	Dowel, 1	102-120	(Pin, 1)	102-122	Key Lever, 11
102-38	Lever Lower Guide, 1,6	102-121	(Pin, 1)	102-123	Key Lever, 11
8-102-39	Bearing, 2	102-122	(Pin, 1)	102-124	Key Lever, 11
102-40	Dowel, 1	102-123	Dowel	102-125	Key Lever, 11
102-41	Dowel, 1	102-124	Bracket Assembly	102-126	Key Lever, 11
102-42	Washer, 1		Lower Bracket	102-127	Key Lever, 11
102-43	Washer - Fibre, 1,7	102-125	Dowel, 1	102-128	Key Lever, 11
102-44	Washer, 1	102-126	Spring, 1	102-129	Key Lever, 11
102-45	Washer - Brass, 6,8	102-127	Stop, 1	102-130	Key Lever, 11
100-61	Washer - Fibre, 2,9	102-128	Spring, 1	102-131	Key Lever, 11
100-62	Washer, Brass, 2,9	102-129	Spun Washer, 1	102-132	Key Lever, 11
100-63	Dowel, 1	102-130	Wooden Pillar, 6	102-133	Key Lever, 11
100-76	Cord Terminal Block, 2	102-131	Wooden Pillar, 6	102-134	Key Lever, 11
102-16	Terminal, 1	102-132	Dowel, 1	102-135	Key Lever, 11
102-17	Washer, 1,2,3,4,5	102-133	Punch - Small, 2	102-136	Key Lever, 11
102-18	Screw (8-32 Knurled), 5,3	102-134	Punch - Big, 2	102-137	Key Lever, 11
102-19	Spring Post, 1	102-135	Punch Set Screw, Bottom, 4	102-138	Key Lever, 11
102-20	Dial Plate, 1	102-136	Punch Bar #1, 4	102-139	Key Lever, 11
102-21	Knob Assembly, 4	102-137	Punch Bar #2, 4	102-140	Key Lever, 11
102-22	Dowel #1, 4	102-138	Punch Bar #3, 4	102-141	Key Lever, 11
8-102-23	Dowel #2, 2	102-139	Punch Bar #4 - Top, 4	102-142	Key Lever, 11
8-102-24	Dowel #3, 2	102-140	Punch Bar Set Screw,	102-143	Key Lever, 11
8-102-25	Dowel #4, 2		Bottom, 4	102-144	Key Lever, 11
8-102-26	Dowel #5, 2	102-141	Contact Lever, 3	102-145	Key Lever, 11
8-102-27	Dowel #6, 2	102-142	Contact Spring, 3	102-146	Key Lever, 11
102-28	Feed Lever - Front, 4	102-143	Contact Screw, 3	102-147	Key Lever, 11
102-29	Bearing, 2	102-144	Feed Pawl, 5	102-148	Key Lever, 11
102-30	Bearing, 2	102-145	Punch Set Lever (Assem.),	102-149	Key Lever, 11
102-31	Shaft, 4	102-146	Punch Lever (Assem.), 4	102-150	Key Lever, 11
102-32	Lug Stop, 7,6		Upper Bracket	102-151	Key Lever, 11
102-33	Dowel, 1,4	102-147	(Pin, 1)	102-152	Key Lever, 11
102-34	Lever Lower Guide, 1,6	102-148	(Pin, 1)	102-153	Punch Bracket (with Pin), 5
102-35	Spring Post, 6,8	102-149	(Pin, 1)	102-154	Punch Bracket (Assem.)
8-102-36	Bearing, 2	102-150	(Pin, 1)		(Pin Small), 11
102-37	Dowel, 1	102-151	(Pin, 1)	102-154	Pin, 11
102-38	Lever Lower Guide, 1,6	102-152	(Pin, 1)	102-155	Terminal, 1
8-102-39	Bearing, 2	102-153	(Pin, 1)	102-156	Screw (8-32 x 1/2), 7
102-40	Dowel, 1	102-154	(Pin, 1)	102-157	Screw (8-32 x 1/2), 1
102-41	Dowel, 1	102-155	(Pin, 1)	102-158	Screw (8-32 x 1/2), 1
102-42	Washer, 1	102-156	(Pin, 1)	102-159	Screw (8-32 x 1/2), 6
102-43	Washer - Fibre, 1,7	102-157	(Pin, 1)	1158	Screw (8-32 x 5/16),
102-44	Washer, 1	102-158	(Pin, 1)		1
102-45	Washer - Brass, 6,8	102-159	(Pin, 1)	1159	Screw (8-32 x 1/2), 6
100-61	Washer - Fibre, 2,9	102-160	(Pin, 1)	1160	Screw (8-32 x 1/2), 1
100-62	Washer, Brass, 2,9	102-161	(Pin, 1)	1161	Screw (8-32 x 3/4), 1
100-63	Dowel, 1	102-162	(Pin, 1)	1164	Screw (8-32 x 3/16),
100-76	Cord Terminal Block, 2	102-163	(Pin, 1)		1
102-16	Terminal, 1	102-164	(Pin, 1)	1171	Screw (8-32 x 5/16),
102-17	Washer, 1,2,3,4,5	102-165	(Pin, 1)		1
102-18	Screw (8-32 Knurled), 5,3	102-166	(Pin, 1)	1172	Screw (8-32 x 1/2), 6
102-19	Spring Post, 1	102-167	(Pin, 1)	1173	Screw (8-32 Knurled),
102-20	Dial Plate, 1	102-168	(Pin, 1)		1
102-21	Knob Assembly, 4	102-169	(Pin, 1)		
102-22	Dowel #1, 4	102-170	(Pin, 1)		
8-102-23	Dowel #2, 2	102-171	(Pin, 1)		
8-102-24	Dowel #3, 2				
8-102-25	Dowel #4, 2				
8-102-26	Dowel #5, 2				
8-102-27	Dowel #6, 2				
102-28	Feed Lever - Front, 4				
102-29	Bearing, 2				
102-30	Bearing, 2				
102-31	Shaft, 4				
102-32	Lug Stop, 7,6				
102-33	Dowel, 1,4				
102-34	Lever Lower Guide, 1,6				
102-35	Spring Post, 6,8				
8-102-36	Bearing, 2				
102-37	Dowel, 1				
102-38	Lever Lower Guide, 1,6				
8-102-39	Bearing, 2				
102-40	Dowel, 1				
102-41	Dowel, 1				
102-42	Washer, 1				
102-43	Washer - Fibre, 1,7				
102-44	Washer, 1				
102-45	Washer - Brass, 6,8				
100-61	Washer - Fibre, 2,9				
100-62	Washer, Brass, 2,9				
100-63	Dowel, 1				
100-76	Cord Terminal Block, 2				
102-16	Terminal, 1				
102-17	Washer, 1,2,3,4,5				
102-18	Screw (8-32 Knurled), 5,3				
102-19	Spring Post, 1				
102-20	Dial Plate, 1				
102-21	Knob Assembly, 4				
102-22	Dowel #1, 4				
8-102-23	Dowel #2, 2	

NUMERICAL INDEX

1176 Screw (4-40 x 5/16), 7
1223 Screw (8-32 x 5/8), 7
1262 Screw (8-32 x 3/4), 7
1263 Screw (8-32 x 1/2), 7
1264 Screw (8-32 x 1/4), 7
1265 Screw (8-32 x 3/8), 7
1271 Screw (8-32 x 3/4), 7
1272 Lock Washer, 1/2,3/4,5/4, 7
2 Screw, 7
2280 Screw, 7
2287 Washer, 6,9
2288 Pin, 6,9
2289 Washer, 6
2290 Spring Bushing, 3
2292 Bearing Post, 1,6
2293 Rod (8-32 Rod), 6
2294 Tube Cotter, 6
2295 Rod (8-32 Rod), 3
2296 Nut (1/4-40 Hex.), 3,4
2298 Nut (8-40 Hex.), 2,3,5,6, 7
2299 Nut (4-40 Hex.), 2,3,5,6, 7
2300 Nut (1/4-40 Hex.), 4
2301 Nut (1/4-40 Hex.), 4
2302 Nut (8-32 Hex.), 4
2303 Nut (1/4-40 Hex.-Brass),4
2304 Washer, 4
2305 Insulator, 4
2306 Washer - Fiber, 6,9
2307 Washer, 1,3,6
2308 Washer - Fiber, 6
2309 Pin - Rubber, 3,6
2310 Spacer Bar, 1,6
2320 Bushing - Bakelite, 1,2
2321 Bushing - Fiber
2322 Bushing, 1
2324 Bushing - Brass, 4
2325 Bushing - Brass, 4
2326 Washer Fiber, 4
2327 Washer, 4
2328 Screw-Cap (1/4 W.F.), 3
2340 Lock Washer, 1,3,4,5,6,7, 9
2342 Lock Washer, 1
2352 Washer, 4
2353 Washer, 4
2354 Nut (1/4-40 Hex.), 4
2355 Screw (1/4-40 Hex.), 5,6,9
2356 Washer - Fiber, 4
2357 Nut (8-32 Hex.)
2358 Washer - Fiber, 4, 6
2359 Spiral Pin - Steel, 6
2371 Tape Reel (Assem.) - Black, 6
Black, 6
2373 Lamp Guard - Black, 2
2375 Stop - Black, 6
2376 Spring - Black, 6
2377 Insulator (Assem.) - Black, 10
2380 Bearing Post, 2
2382 Washer, 1,2,5,7,9,10
2383 Tube - Electronic, 6
2384 Tube
2385 Washer, 1,2,5,7,9
2386 Washer, 1,2,5,7,9
2387 Washer, 1,2,5,7,9
2711 Key Lever, 11
2712 Key Lever, 11
2713 Key Lever, 11
2714 Key Lever, 11
2715 Key Lever, 11
2716 Key Lever, 11
2717 Key Lever, 11
2718 Key Lever, 11
2719 Key Lever, 11
2720 Key Lever, 11

NUMERICAL INDEX

ADDITIONS TO BULLETIN NO. 1093, ISSUE 1
LAMPS - PERFORATOR

The design of the end-of-line indicating mechanism shown on page 6 has been changed to provide a slight yield in the mounting of the 99829 bracket. The following sketch shows new parts introduced by this change: