

★
NAVSHIPS 0969-125-0120

VOLUME II of II
TECHNICAL MANUAL
for
OSCILLOSCOPE
AN/USM-281A

DEPARTMENT OF THE NAVY
NAVAL ELECTRONIC SYSTEMS COMMAND

★

Approval Date: 6 January 1969

TABLE OF CONTENTS

Paragraph	Page
SECTION 3 - OPERATION	
3-1. General	3-1
3-2. Functional Operation	3-1
a. Oscilloscope Assembly Operational Description	3-1
b. Time Base and Delay Generator Operational Description	3-1
c. Dual Channel Vertical Amplifier Operational Description	3-1
3-3. Description of Controls and Connectors	3-2
a. Front-Panel Controls and Connectors	3-2
b. Rear-Panel Controls and Connectors	3-2
3-4. Operating Procedures	3-26
3-5. Turn-On and Adjustment Procedure	3-26
3-6. Dual Channel Vertical Amplifier Operating Procedures	3-32
a. Single or Dual Channel Operation	3-32
b. A+B Operation	3-33
c. XY Operation	3-34
3-7. Time Base and Delay Generator Operation	3-35
a. Main Sweep Operation	3-36
b. Mixed Sweep Operation	3-37
c. Delayed Sweep Operation	3-38
d. Single Sweep Operation	3-42
3-8. Operator's Maintenance	3-42
a. Operating Checks and Adjustments	3-42
b. Preventive Maintenance	3-42
c. Emergency Maintenance	3-43

LIST OF ILLUSTRATIONS

Figure	Page
SECTION 3 - OPERATION	
3-1. Front-Panel Controls and Connectors	3-3
3-2. Rear-Panel Controls and Connectors	3-24
3-3. Fuse Location Diagram	3-44


LIST OF TABLES

Table

Page

SECTION 3 - OPERATION

3-1.	Front-Panel Operating Controls and Connectors	3 - 2
3-2.	Rear-Panel Operating Controls and Connectors	3 - 25
3-3.	Turn-On and Adjustment Procedure	3 - 26
3-4.	Single or Dual Channel Operating Procedure	3 - 32
3-5.	A+B Operating Procedure	3 - 33
3-6.	XY Operating Procedure	3 - 34
3-7.	Main Sweep Operating Procedure	3 - 36
3-8.	Mixed Sweep Operating Procedure	3 - 37
3-9.	Delayed Sweep Operating Procedure	3 - 38
3-10.	Rise Time Measurement Procedure	3 - 39
3-11.	Time Differential Measurement Procedure	3 - 41
3-12.	Single Sweep Operating Procedure.	3 - 42

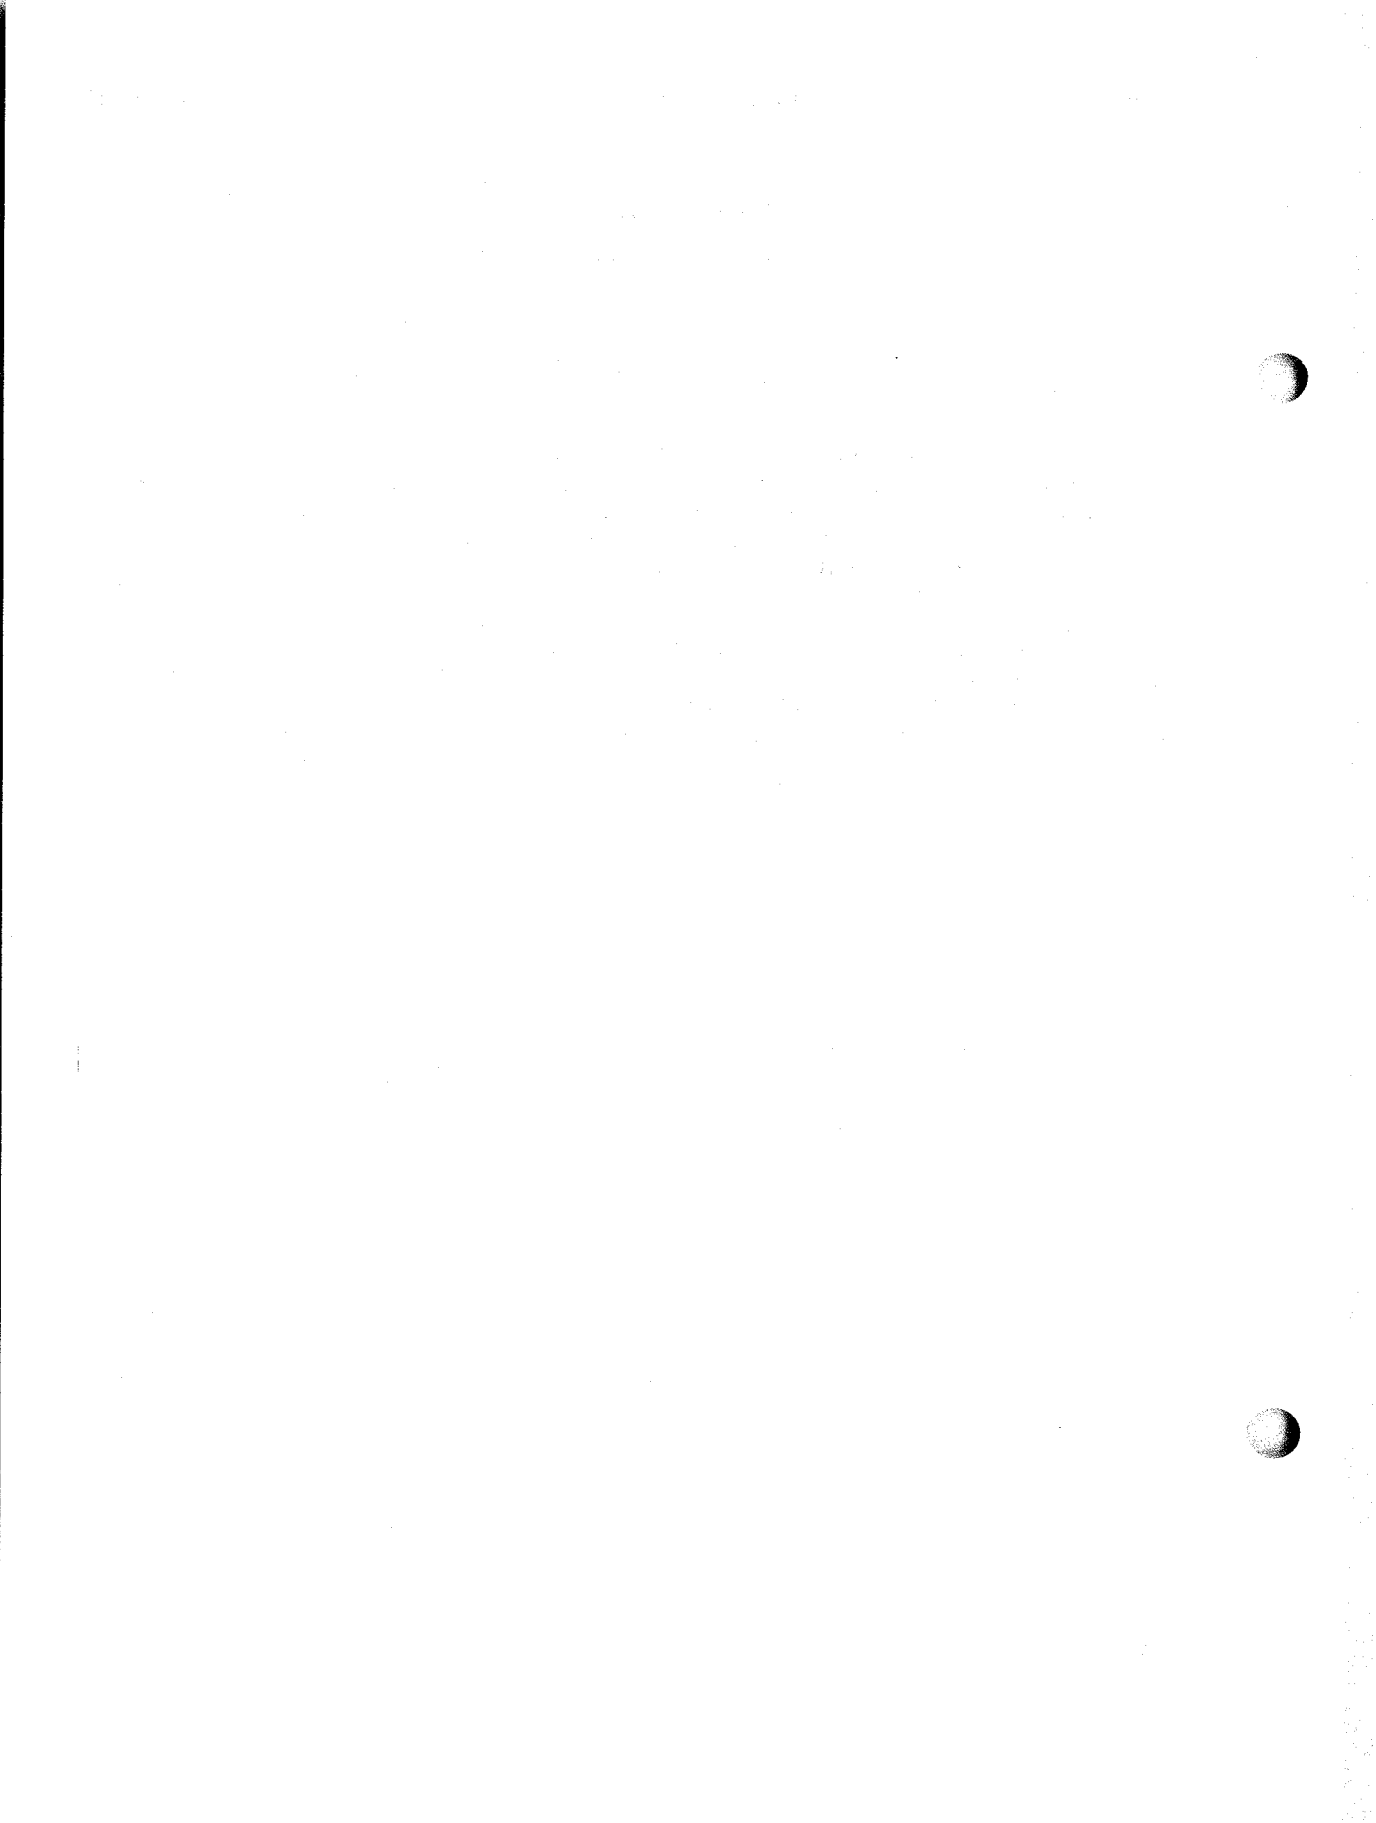

SECTION 3

OPERATION

3-1. GENERAL.

This section contains information necessary for the operation of the AN/USM-281A Oscilloscope and includes an operational description, a description of the operating controls and connectors and operating procedures for the instrument. The operator should be thoroughly familiar with this section before attempting to operate the instrument.

3-2. FUNCTIONAL OPERATION.

The AN/USM-281A Oscilloscope is a direct coupled, wideband oscilloscope that provides a visual display of simple and complex waveforms. In addition to observing waveforms, the oscilloscope provides the user with the capability of accurately measuring rise time of any portion of a waveform, waveform magnitude, time difference between any two points on a displayed waveform and accurate time comparison of two separate waveforms.

a. OSCILLOSCOPE ASSEMBLY OPERATIONAL DESCRIPTION. - The oscilloscope assembly provides the circuitry (low voltage and high voltage power supplies) for projecting a beam onto the CRT screen and the controls to adjust intensity, focus (sharpness) and horizontal position of the beam on the CRT. This unit also contains a horizontal amplifier (with front-panel controls for accepting an internal or external signal) to amplify the selected time base signal and provide a linear deflection voltage to the horizontal plates of the CRT. The oscilloscope assembly also contains the power switch, scale illumination control and two calibrator output jacks.

b. TIME BASE AND DELAY GENERATOR OPERATIONAL DESCRIPTION. - The time base and delay generator plug-in assembly receives operating power from the oscilloscope low voltage supply through a connector on the rear of the plug-in unit. This assembly generates the accurate main time base and delay time base voltages used for horizontal deflection during normal (internal) operation. Front-panel controls provide a choice of four modes of operation: main sweep only, mixed sweep, delayed sweep and single sweep. With the sweep mode selected, a concentric front-panel provides a choice of 23 sweep speeds for the main sweep, and 18 sweep speeds for the delayed sweep. The time base assembly also provides controls for selecting automatic (free-running or triggered by a signal above 50 Hz) or triggered time base, trigger source, polarity, level, frequency range and a calibrated ten-turn control for precise measurement of the delay time to the start of the delayed sweep.

c. DUAL CHANNEL VERTICAL AMPLIFIER OPERATIONAL DESCRIPTION. - The dual channel vertical amplifier plug-in assembly receives operating power from the oscilloscope low voltage power supply through a connector on the time base and delay generator plug-in assembly. The dual channel vertical amplifier contains two separate frequency-compensated dc amplifiers capable of displaying from dc to 50 MHz with 3% accuracy. Front-panel controls provide three types of operation: a single trace using either channel, a single trace algebraically combining the inputs of the two separate channels and three modes of dual-trace operation. The dual-trace modes available are: a dual trace

displayed on alternate sweeps and triggered by the composite input signal, a dual trace displayed on alternate sweeps and triggered by the B channel input signal only and a dual trace displayed on a chopped sweep that switches at a 400 kHz rate and is triggered by the B channel input signal. Front-panel polarity switches provide for inverting the waveform on either channel when displayed separately or alternately and allow the operator to choose the algebraic combination (A+B, -A+B, -A-B, +A-B) of the two waveforms displayed on a single trace. Controls are also provided for vertically positioning each trace; dc balance of each channel separately, and dc balance of the combined channels; calibrated input attenuation of each channel; X5 magnification and input coupling selection (ac or dc).

3-3. DESCRIPTION OF CONTROLS AND CONNECTORS.

a. FRONT-PANEL CONTROLS AND CONNECTORS. - Figure 3-1 identifies all front-panel controls and connectors. Table 3-1 lists the description and function of these controls.

b. REAR-PANEL CONTROLS AND CONNECTORS. - Figure 3-2 identifies rear-panel controls and connectors. Table 3-2 lists the description and function of these controls.

TABLE 3-1. FRONT-PANEL OPERATING CONTROLS AND CONNECTORS

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 1	HORIZONTAL POSITION (fine) control	Variable resistor A1R218	Used for fine adjustment of display's horizontal position.
3-1, 2	HORIZONTAL POSITION (coarse) control	Variable resistor A1R221	Used for coarse adjust- ment of display's horizontal position.
3-1, 3	Horizontal MAGNIFIER switch	Three-position Rotary switch A1S203	This switch determines gain of the horizontal amplifier and is used to magnify or expand the trace. Position func- tions are as follows: X1: Provides a normal 10 div sweep (for 10 v input). X5: Expands trace to 5 times normal (provides 50 div of deflection for 10 v input). X10: Expands trace to 10 times normal (pro- vides 100 div of deflec- tion for 10 v input).

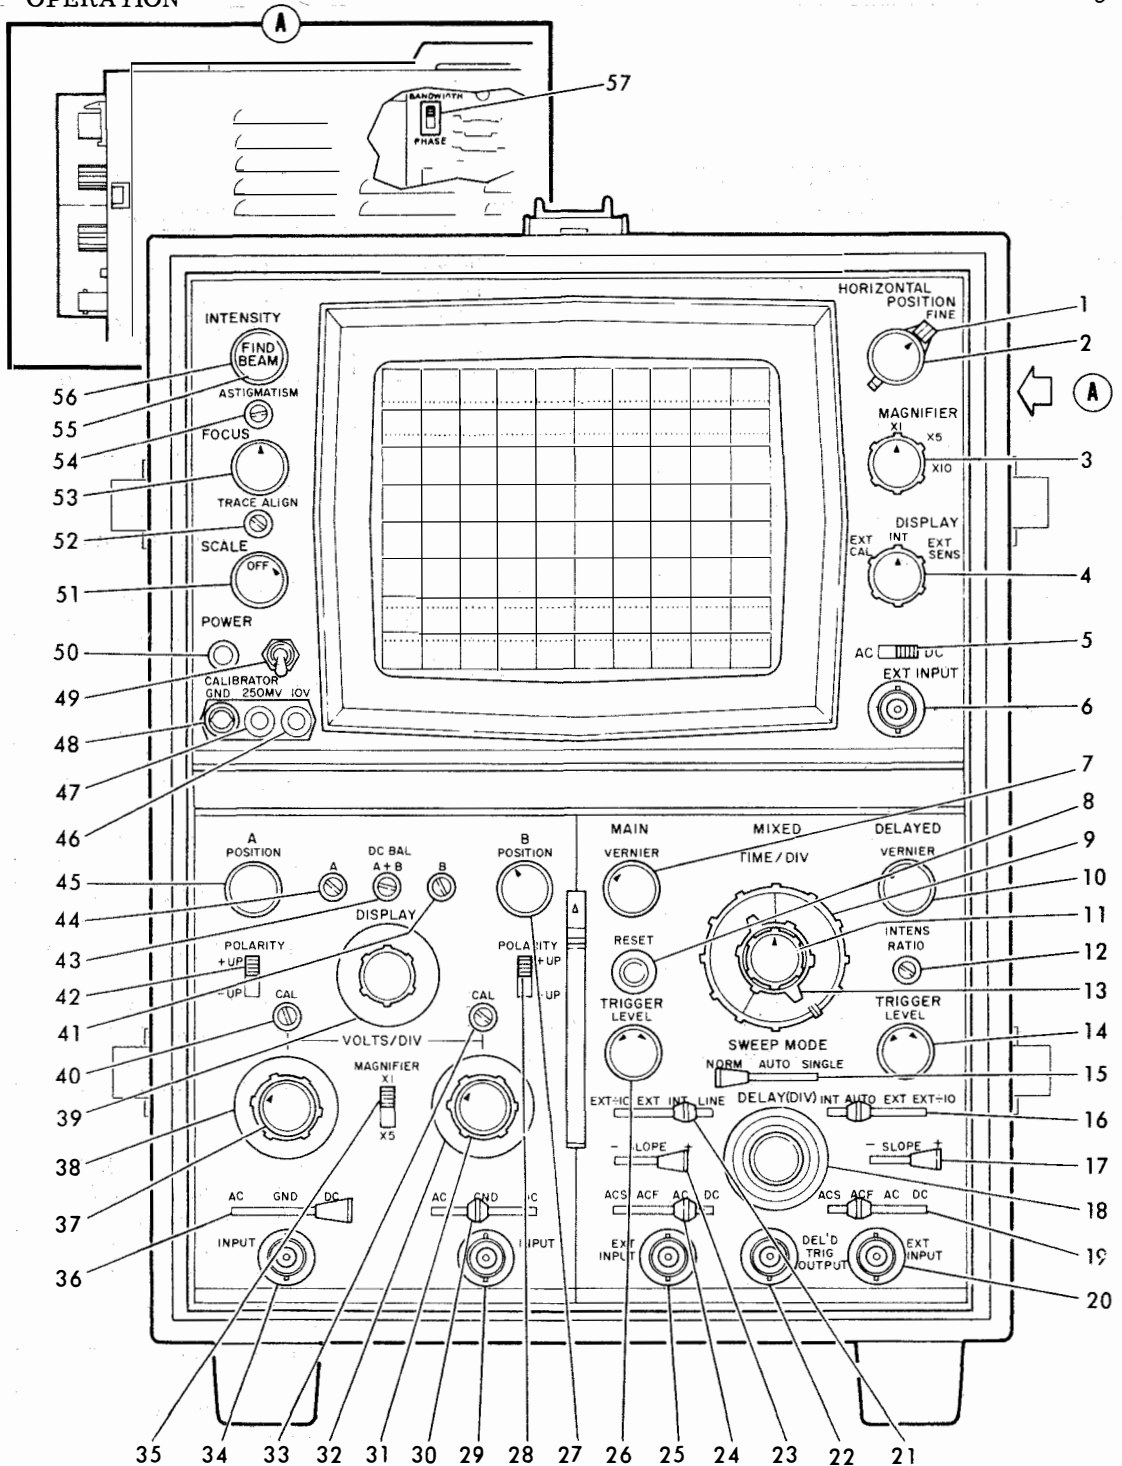


Figure 3-1. Front-Panel Controls and Connectors

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 4	Horizontal DISPLAY switch	Ganged three- position rotary switch A1S101 and variable resistor A1R211	<p>This switch determines which time base signal is applied to the horizontal amplifier. Position functions are as follows:</p> <p>INT: Connects horizontal amplifier input to internal time base and delay generator.</p> <p>EXT CAL: Connect horizontal amplifier input to EXT INPUT connector.</p> <p>EXT SENS: Connects horizontal amplifier input to EXT INPUT connector through variable resistor. When control is rotated ccw from EXT CAL to INT, input signal is increasingly attenuated.</p>
3-1, 5	Horizontal amplifier external input coupling switch (AC DC)	Two-position slide switch A1S201	<p>This switch selects type of coupling for an external signal. Position functions are as follows:</p> <p>AC: Connects EXT INPUT connector (6) to DISPLAY switch (4) through capacitor to block dc component of external signal.</p> <p>DC: Connects EXT INPUT connector directly to DISPLAY switch.</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 6	Horizontal am- plifier EXT INPUT connector	BNC connector A1J201	Connector for coupling an external signal to horizontal amplifier.
3-1, 7	MAIN VERNIER control	Variable resistor A3R235 with switch	This control is the vernier adjustment of the main sweep speed. Position functions are as follows: CAL: Allows main sweep time to be read directly from main TIME/DIV switch (13). Rotated ccw from CAL: Provides continuous adjustment of sweep time between the cali- brated steps of the main TIME/DIV switch (13).
3-1, 8	RESET push- button-indicator	Pushbutton and indicator lamp A3S201 and A3DS201	When SWEEP MODE (15) is set to SINGLE trace, pressing RESET pushbutton arms sweep circuit and allows trace to start on next trigger signal. The sweep circuit must be reset between each trace. Neon indicator lights when sweep is reset and trace armed.
3-1, 9	DELAYED TIME/ DIV switch	19-position rotary switch A3S503	Selects delayed sweep speed. Interlocked with main TIME/DIV switch (13) so that delayed sweep is always faster than main sweep.
3-1, 10	DELAYED VERNIER control	Variable resistor A3R420 with switch	This control is the vernier adjustment of the delayed sweep

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 10 (Cont)			<p>speed. Position functions are as follows:</p> <p>CAL: Allows delayed sweep time to be read directly from delayed TIME/DIV switch (9).</p> <p>Rotated ccw from CAL: Provides continuous adjustment of sweep time between the calibrated steps of the delayed TIME/DIV switch (9).</p>
3-1, 11	Sweep display switch	Three-position rotary switch A3S502	<p>Determines the type of sweep to be displayed. Position functions are as follows:</p> <p>MAIN: Displays main sweep only. If delayed TIME/DIV switch (9) is rotated ccw from OFF, a portion of the main sweep is intensified.</p> <p>MIXED: In this position the first portion of the trace is produced by the main sweep and the last part of the sweep is produced by the delayed sweep. The DELAY (DIV) control (18) determines at what point the delayed sweep starts.</p> <p>DELAYED: Delayed sweep only is displayed at a time delay determined by the setting of the DELAY (DIV) (18) and main TIME/DIV</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 11 (Cont)			switch (13). Delay time is the product of these two switches.
3-1, 12	INTENS RATIO control	Variable resistor A3R525	Determines intensity difference (contrast) between main and delayed sweep.
3-1, 13	Main TIME/ DIV switch	23-position rotary switch A3S501	Selects main sweep speed. Interlocked with delayed TIME/DIV switch (9) so that main sweep is always slower than delayed sweep.
3-1, 14	Delayed TRIGGER LEVEL control	Variable resistor A3R313	Determines voltage level on waveform at which delayed sweep is triggered. Variable from -5 volts to +5 volts. This control does not function when the delayed trigger source switch (16) is set to AUTO.
3-1, 15	SWEEP MODE switch	Three-position lever switch A3S104	This switch determines the type of main sweep operation. Position functions are as follows: NORM: Provides a sweep only when a trigger signal is present. Used when trigger frequency is less than 50 Hz or when triggering signal is erratic. AUTO: Provides a free-running sweep when no trigger signal is present and a triggered sweep if a trigger signal with a frequency of

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 15 (Cont)			<p>50 Hz or greater is present. This is the normal operating position for this control.</p> <p>SINGLE: Provides only one sweep when triggered. Must be manually reset before each sweep.</p>
3-1, 16	<p>Delayed trigger source switch (INT AUTO EXT EXT ÷ 10)</p>	<p>Four-position lever switch A3S301</p>	<p>This switch selects the triggering source for the delayed time base generator. Position functions are as follows:</p> <p>INT: Connects delayed time base triggering circuitry to an internal trigger signal derived from the vertical input signal. In this position the delayed sweep starts on the first trigger pulse received after the delay time.</p> <p>AUTO: In this position the delayed sweep starts immediately at the expiration of the delay time. The delayed TRIGGER LEVEL, (14) delayed SLOPE (17), and the delayed trigger coupling (19) do not function when this switch is in the AUTO position. This is the normal operating position for this switch.</p> <p>EXT: Connects delayed time base triggering circuitry directly to delayed EXT INPUT connector (20). This</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 16 (Cont)			<p>position is used to trigger delayed time base from an external trigger signal of less than 10 v peak-to-peak. Delayed sweep starts on the first trigger pulse received after delay time.</p> <p>EXT-10: Connects delayed time base triggering circuitry to delayed EXT INPUT connector (20) through an X10 attenuator. This position is used if the external trigger signal is greater than 10 v peak-to-peak.</p>
3-1, 17	Delayed SLOPE switch	Two-position lever switch A3S303	<p>This switch determines on which slope of the triggering signal the delayed time base starts. This switch does not function when the delayed trigger source switch (16) is set to AUTO. Position functions are as follows:</p> <p>- : In this position the delayed sweep starts on the negative-going (downward) portion of the triggering signal at a trigger level determined by the setting of the delayed TRIGGER LEVEL control (14).</p> <p>+ : In this position the delayed sweep starts on the positive-going (upward) portion of the</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 17 (Cont)			triggering signal at a trigger level determined by the setting of the delayed TRIGGER LEVEL control (14).
3-1, 18	DELAY (DIV) control	Ten-turn variable resistor A3R471	This control in combination with the main TIME/DIV switch (13) determines the delay time before the start of the delayed time base. The delay time is the product of the setting of these two controls. For example: A DELAY (DIV) setting of 4.00 and a main TIME/DIV setting of 1 MSEC/DIV would produce a delay time of 4.00 x 1 msec or 4 msec.
3-1, 19	Delayed trigger coupling switch	Four-position lever switch A3S302	<p>This switch determines the type of trigger coupling for the delayed time base generator. This switch does not function when the delayed trigger source switch (16) is set to AUTO. Position functions are as follows:</p> <p>ACS: The ac slow position attenuates signals above approximately 30 kHz. This position is used to remove an undesirable high frequency component from the trigger signal.</p> <p>ACF: The ac fast position attenuates signals below 15 kHz. This position is used</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 19 (Cont)			<p>to remove the low frequency component (such as 60 Hz ripple) from the trigger signal.</p> <p>AC: The AC position blocks the dc level of the trigger signal. This position is used on frequencies above 20 Hz when it is desirable to remove the dc component from the trigger signal.</p> <p>DC: The DC position accepts all trigger frequencies from dc to 90 MHz.</p>
3-1, 20	Delayed EXT INPUT connector	BNC connector A3J301	Connector is used for applying an external triggering signal to the delayed time base generator.
3-1, 21	Main trigger source switch (EXT ÷ 10 EXT INT LINE)	Four-position lever switch A3S101	<p>This switch selects the triggering source for the main time base generator. Position functions are as follows:</p> <p>EXT ÷ 10: Connects main EXT INPUT connector (25) to main time base triggering circuitry through an X10 attenuator. This trigger source is used if external trigger signal is greater than 10 v peak-to-peak.</p> <p>EXT: Connects main time base triggering circuitry directly to main EXT INPUT connector (25). This position is</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 21 (Cont)			<p>used to trigger main time base generator from an external trigger source of less than 10 v peak-to-peak.</p> <p>INT: Connects main time base triggering circuitry to an internal trigger signal derived from the vertical input signal. This is the normal operating position for this control.</p> <p>LINE: Connects main time base triggering circuitry to a trigger signal taken from the power line waveform. This position is useful for observing a waveform that is a multiple of the line frequency.</p>
3-1, 22	DEL'D TRIG OUTPUT connector	BNC connector A3J301	This connector provides a positive trigger signal output each time the delayed sweep circuit is armed. This output is used to trigger external equipment.
3-1, 23	Main SLOPE switch	Two-position lever switch A3S103	<p>This switch determines on which slope of the triggering signal the main time base starts. Position functions are as follows:</p> <p>-: In this position the main sweep starts on the negative-going (downward) portion of the triggering signal at a trigger level determined by the setting of</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 23 (Cont)			the main TRIGGER LEVEL control (26). +: In this position the main sweep starts on the positive-going (upward) portion of the triggering signal at a trigger level determined by the setting of the main TRIGGER LEVEL control (26).
3-1, 24	Main trigger coupling switch (ACS ACF AC DC)	Four-position lever switch A3S102	This switch determines the type of trigger coupling for the main time base. Position functions are as follows: ACS: The ac slow position attenuates signals above approximately 30 kHz. This position is used to remove an undesirable high frequency component from the trigger signal. ACF: The ac fast position attenuates signals below 15 kHz. This position is used to remove the low frequency component (such as 60 Hz ripple) from the trigger signal. AC: The AC position blocks the dc level of the trigger signal. This position is used on frequencies above 20 Hz when it is desirable to remove the dc component from the trigger signal.

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 24 (Cont)			DC: The DC position accepts all trigger frequencies from dc to 90 MHz. This is the normal coupling position.
3-1, 25	Main EXT INPUT connector	BNC connector A3J101	Connector is used for applying an external triggering signal to the main time base generator.
3-1, 26	Main TRIGGER LEVEL control	Variable resistor A3R121	Determines voltage level on waveform at which main sweep is triggered. Variable from -5 volts to +5 volts.
3-1, 27	Channel B POSITION control	Variable resistor A2R438	Determines the vertical position of the channel B trace.
3-1, 28	Channel B POLARITY switch	Two-position slide-switch A3S401	<p>Selects polarity of channel B vertical display. Position functions are as follows:</p> <p>+UP: Displays positive portion of the channel B input waveform up, or in the normal position.</p> <p>-UP: Displays negative portion of the channel B input waveform up, or in the inverted position.</p>
3-1, 29	Channel B INT connector	BNC connector A2J201	Input connector for channel B vertical amplifier.

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 30	Channel B input coupling switch (AC GND DC)	Three-position lever switch A2S201	<p>This switch selects the type of coupling for the channel B vertical amplifier. Position functions are as follows:</p> <p>AC: Capacitively couples the channel B input signal to the channel B vertical amplifier. This position is used to block the dc component of a waveform on signals from 2 Hz to 50 MHz.</p> <p>GND: Removes the input signal and grounds the channel B vertical amplifier. This position is used for adjusting dc balance and for accurately positioning the channel B trace prior to measuring dc waveforms.</p> <p>DC: Directly couples the channel B input signal to the channel B vertical amplifier. This position is used for viewing dc waveforms or long duration pulses.</p>
3-1, 31	Channel B vernier VOLTS/ DIV control	Variable resistor A2R409	<p>Provides for continuous adjustment of channel B amplitude between calibrated positions of channel B VOLTS/DIV switch (32). Position functions are as follows:</p> <p>CAL: Allows vertical amplitude to be determined from channel B VOLTS/DIV switch (32) setting.</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 31 (Cont)			Rotated ccw from CAL: Provides continuous amplitude adjustment between calibrated steps of channel B VOLTS/DIV switch (32).
3-1, 32	Channel B VOLTS/DIV switch	12-position rotary switch A2S202	Provides 12 positions of calibrated input attenuation for the channel B amplifier. Input voltage is deter- mined by multiplying the number of divisions of deflection by the setting of this switch.
3-1, 33	Channel B CAL adjust	Variable resistor A2A3R408	Adjusts channel B vertical amplitude to agree with setting of channel B VOLTS/DIV switch (32).
3-1, 34	Channel A INPUT connector	BNC Connector A2J101	Input connector for channel A vertical amplifier.
3-1, 35	Vertical MAGNIFIER (X1 X5)	Two-position slide switch A2S1101	Provides for expanding the vertical trace. Posi- tion functions are as follows: X1: Provides a normal trace. X5: Expands vertical trace to five times its normal level. This extends the most sen- sitive range to 1 mv/div.

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 36	Channel A input coupling switch (AC GND DC)	Three-position lever switch A2S101	<p>This switch selects the type of coupling for the channel A vertical amplifier. Position functions are as follows:</p> <p>AC: Capacitively couples the channel A input signal to the channel A vertical amplifier. This position is used to block the dc component of a waveform on signals from 2 Hz to 50 MHz.</p> <p>GND: Removes the input signal and grounds the channel A vertical amplifier. This position is used for adjusting dc balance and for accurately positioning the channel A trace prior to measuring dc waveforms.</p> <p>DC: Directly couples the channel A input signal to the channel A vertical amplifier. This position is used for viewing dc waveforms or long duration pulses.</p>
3-1, 37	Channel A vernier VOLTS/DIV control	Variable resistor A2R309	Provides continuous adjustment of channel A amplitude between calibrated positions of channel A VOLTS/DIV switch (38). Position functions are as follows:

TABLE 3-1. (Continued)

FIG NO. INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 37 (Cont)			<p>CAL: Allows vertical amplitude to be determined from channel A VOLTS/DIV switch (38) setting.</p> <p>Rotated ccw from CAL: Provides continuous amplitude adjustment between calibrated steps of channel A VOLTS/DIV switch (38).</p>
3-1, 38	Channel A VOLTS/DIV switch	12-position rotary switch A2S102	Provides 12 positions of calibrated input attenuation for the channel A amplifier. Input voltage is determined by multiplying the number of divisions of deflection by the setting of this switch.
3-1, 39	Vertical DIS- PLAY switch	Six-position rotary switch A2S302	<p>Selects type of vertical display to be used. Position functions are as follows:</p> <p>ALT B TRIGGER: Produces two traces displayed on alternate sweeps and allows the operator to observe the channel A and B inputs simultaneously. A trigger signal derived from the channel B input signal is sent to the time base generator to trigger each sweep from the same signal. This position is used with faster sweep speeds for accurate time comparison of the two input signals.</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 39 (Cont)			<p>CHOP B TRIGGER: Produces two displays on the same sweep by switching each channel on and off at a 400 kHz rate. A trigger signal derived from the channel B input signal is sent to the time base generator to trigger the sweep. This position is used for viewing channels A and B simultaneously at slower sweep speeds. At higher sweep speeds this mode produces spaces in each trace during the time the channel is switched off.</p> <p>B: Displays the channel B input signal only.</p> <p>A: Displays the channel A input signal only.</p> <p>A+B: Combines the channel A and B inputs and displays the algebraic sum or difference on a single trace. In this mode, the POLARITY switches (28 and 42) determine the algebraic combination of the two waveforms. For example: A channel A POLARITY setting of -UP and a channel B POLARITY setting of -UP produces the sum of the inverted displays of $-A(+)-B$.</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 39 (Cont)			<p>ALT: Produces two traces displayed on alternate sweeps and allows the operator to observe the channel A and B inputs simultaneously. The internal trigger signal sent to the time base generator is derived from the combined channel inputs. This mode is used for viewing faster sweeps when time comparison of the two waveforms is not important.</p>
3-1, 40	Channel A CAL adjust	Variable resistor A2A3R308	<p>Adjusts channel A vertical amplitude to agree with setting of channel A VOLTS/DIV switch (38).</p>
3-1, 41	DC BAL B adjust	Variable resistor A2R224	<p>Adjusts dc balance between push-pull stages of channel B input amplifier so that no vertical shift occurs when input polarity is switched.</p>
3-1, 42	Channel A POLARITY	Two-position slide switch A2S301	<p>Selects polarity of channel A vertical display. Position functions are as follows:</p> <p>+UP: Displays positive portion of the channel A input waveform up, or in the normal position.</p> <p>-UP: Displays negative portion of the channel A input waveform up, or in the inverted position.</p>

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 43	DC BAL A+B adjust	Variable resistor A2R354	Adjusts dc balance between channels A and B so that no vertical shift occurs when DISPLAY (39) is switched from A or B to A+B.
3-1, 44	DC BAL A adjust	Variable resistor A2R124	Adjusts dc balance between push-pull stages of channel A input amplifier so that no vertical shift occurs when input polarity is switched.
3-1, 45	Channel A POSITION control	Variable resistor A2R338	Determines the vertical position of the channel A trace.
3-1, 46	CALIBRATOR 10V jack	Banana jack A1J103	Provides a 1 kHz 10v peak-to-peak output that may be used for divider probe compensation.
3-1, 47	CALIBRATOR 250MV jack	Banana jack A1J102	Provides a 1 kHz 250mv peak-to-peak output that may be used for calibrating vertical amplifier.
3-1, 48	CALIBRATOR GND jack	Banana jack A1J104	Provides a ground connection point.
3-1, 49	POWER switch	DPST toggle A1S401	Applies ac power to oscilloscope. When opened, breaks both hot and neutral input power lines.
3-1, 50	POWER on indicator	Indicating light A1DS401	Lights when POWER switch is closed and the +23 vdc power supply is operating.

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 51	SCALE illumi- nation control	Variable resistor A1R350	Controls scale illumi- nation.
3-1, 52	TRACE ALIGN control	Variable resistor A1R334	Rotates trace around horizontal axis, and is used to align the hori- zontal trace exactly with the horizontal graticule.
3-1, 53	FOCUS control	Variable resistor A1R344	Adjusts beam for sharpest trace.
3-1, 54	ASTIGMATISM control	Variable resistor A1R347	Used in conjunction with FOCUS control (53) to adjust for roundness of writing beam.
3-1, 55	FIND BEAM pushbutton	DPDT pushbutton -switch A1S102	If intensity or position- ing controls are im- properly set or if beam is driven off the screen by a high dc level input signal, pressing the FIND BEAM pushbutton returns the trace to the screen. The positioning controls can then be adjusted to center the beam so that the trace will remain on the screen when FIND BEAM is released.
3-1, 56	INTENSITY control	Variable resistor A1R106	Adjusts brightness of CRT beam.
3-1, 57	PHASE BANDWIDTH switch	Slide switch A1S202	Selects between normal operation and XY opera- tion. Position functions are as follows:

TABLE 3-1. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-1, 57			<p>BANDWIDTH: Allows the horizontal amplifier to function normally. Switch must be in this position at all times except when making XY phase comparisons.</p> <p>PHASE: Delays the horizontal signal the same amount of time as the vertical input signal. Set the switch to PHASE only when making XY comparisons.</p>

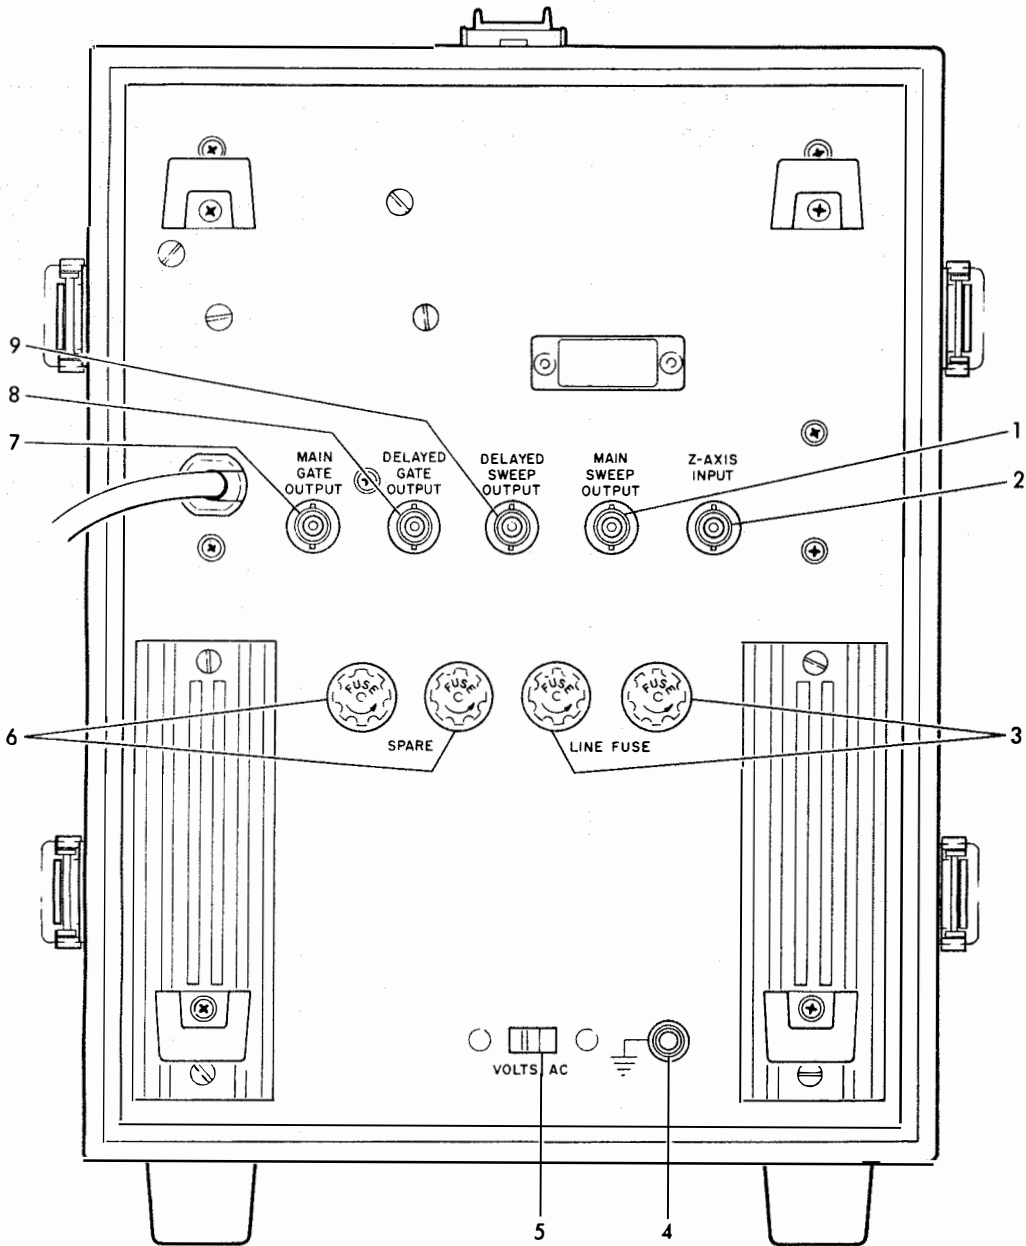


Figure 3-2. Rear-Panel Controls and Connectors

TABLE 3-2. REAR-PANEL OPERATING CONTROLS AND CONNECTORS

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-2, 1	MAIN SWEEP OUTPUT connector	BNC Connector A1J105	Provides a main sweep output for driving external equipment.
3-2, 2	Z-AXIS INPUT connector	BNC Connector A1J101	Connector for accepting CRT beam intensity modulation signal.
3-2, 3	LINE FUSE	Fuse holders with fuses A1F401 and A1F402	Two 1.6 amp slow-blow fuses provide overload protection when opera- ting on 115 vac. When operating on 230 vac these two fuses must be replaced with two 0.8 amp slow-blow fuses to maintain overload pro- tection.
3-2, 4	Ground connector	Binding post A1J402	Provides a chassis ground connection point.
3-2, 5	VOLTS AC line voltage select switch	Two-position slide switch A1S402	Provides for selection of external power source. Position functions are as follows: 115: Selects the trans- former coupling for operating on a 115 vac power source. 230: Selects the trans- former coupling for operating on a 230 vac power source.
3-2, 6	SPARE	Fuse holders	Contain two spare fuses.
3-2, 7	MAIN GATE OUTPUT connector	BNC Connector A1J108	Provides a main gate output for triggering external equipment.

TABLE 3-2. (Continued)

FIG NO. / INDEX NO.	CONTROL OR CONNECTOR	DESCRIPTION	FUNCTION
3-2, 8	DELAYED GATE OUTPUT connector	BNC Connector A1J107	Provides a delayed gate output for triggering external equipment.
3-2, 9	DELAYED SWEEP OUTPUT connector	BNC Connector A1J106	Provides a delayed sweep output for driving external equipment.

3-4. OPERATING PROCEDURES.

Operating procedures for the AN/USM-281A Oscilloscope consist of turn-on and adjustment, vertical amplifier operating procedures and time base and delay generator operating procedures. These procedures are described in the following paragraphs.

3-5. TURN-ON AND ADJUSTMENT PROCEDURE.

Perform the complete turn-on and adjustment procedure when the AN/USM-281A Oscilloscope is turned on for the first time. After the oscilloscope has been in use, it is not necessary to repeat the initial control settings and the adjustment portions of the procedure each time the unit is turned on. However, the adjustment procedures should be performed periodically to insure the accuracy of the instrument. Table 3-3 lists the turn-on and adjustment procedure for the oscilloscope.

TABLE 3-3. TURN-ON AND ADJUSTMENT PROCEDURE

STEP	PROCEDURE
	<p>Note</p> <p>Perform steps 1 thru 3 before energizing the oscilloscope for the first time. Once the oscilloscope has been in use it should not be necessary to repeat steps 1 thru 3 unless the front-panel controls have been completely misadjusted.</p>

TABLE 3-3. (Continued)

STEP	PROCEDURE
1	<p data-bbox="430 420 793 447"><u>INITIAL CONTROL SETTINGS</u></p> <p data-bbox="430 471 1046 498">Position oscilloscope assembly controls as follows:</p> <ul data-bbox="467 525 1211 684" style="list-style-type: none"><li data-bbox="467 525 1211 578">a. Set INTENSITY, FOCUS, and HORIZONTAL POSITION to center of rotation.<li data-bbox="467 606 916 633">b. Set horizontal MAGNIFIER to X1.<li data-bbox="467 660 1211 687">c. Rotate horizontal DISPLAY fully counterclockwise to INT. <p data-bbox="790 738 845 766" style="text-align: center;">Note</p> <p data-bbox="467 789 1232 875">Insure that horizontal DISPLAY control engages switch when set to INT. If switch is not engaged, the internal time base signal is disconnected from the horizontal amplifier.</p> <ul data-bbox="467 902 1033 988" style="list-style-type: none"><li data-bbox="467 902 703 930">d. Set POWER off.<li data-bbox="467 957 1033 984">e. Set PHASE BANDWIDTH to BANDWIDTH. <p data-bbox="790 1039 845 1066" style="text-align: center;">Note</p> <p data-bbox="467 1092 1229 1177">To gain access to PHASE BANDWIDTH switch, set oscilloscope on rear end, release 4 latches at rear of oscilloscope, and lift cover straight up. See Figure 3-1 for location of switch.</p>
2	<p data-bbox="430 1226 1140 1253">Position time base and delay generator controls as follows:</p> <ul data-bbox="467 1281 1163 1521" style="list-style-type: none"><li data-bbox="467 1281 1163 1308">a. Set MAIN VERNIER and DELAYED VERNIER to CAL.<li data-bbox="467 1335 841 1363">b. Set sweep display to MAIN.<li data-bbox="467 1390 889 1417">c. Set delayed TIME/DIV to OFF.<li data-bbox="467 1445 854 1472">d. Set SWEEP MODE to AUTO.<li data-bbox="467 1499 895 1526">e. Set main trigger source to INT.

TABLE 3-3. (Continued)

STEP	PROCEDURE
3	<p>Position dual channel vertical amplifier controls as follows:</p> <ul style="list-style-type: none"> a. Set A POSITION and B POSITION to center of rotation. b. Set vertical DISPLAY to A. c. Set channel A and B input coupling to GND. d. Set vertical MAGNIFIER to X1. <p><u>TURN-ON</u></p> <p style="text-align: center;">CAUTION</p> <p>Prior to connecting oscilloscope to power source, insure that the VOLTS AC switch on the rear of the instrument is set to the proper voltage and that the four rear-panel fuses are the proper value (1.6 amp slow-blow for 115 vac operation, 0.8 amp slow-blow for 230 vac operation).</p>
4	<p>Connect oscilloscope power cord to power source .</p> <p style="text-align: center;">WARNING</p> <p>If power cord adapter is used, insure that adapter lead is grounded.</p>
5	<p>Set POWER switch on. POWER on indicator lights. Trace should appear in approximately 15 seconds.</p> <p style="text-align: center;">Note</p> <p>If trace does not appear after waiting sufficient time for warm-up, press FIND BEAM pushbutton and adjust positioning controls to center trace with FIND BEAM depressed. If trace disappears when FIND BEAM is released, increase INTENSITY until trace reappears.</p>
6	<p>When trace appears, adjust INTENSITY for desired brightness and HORIZONTAL POSITION and A POSITION controls to center trace.</p>
7	<p>Rotate horizontal DISPLAY clockwise to EXT CAL. Spot appears on CRT.</p>

TABLE 3-3. (Continued)

STEP	PROCEDURE
8	Center spot with HORIZONTAL POSITION and A POSITION controls.
9	Adjust FOCUS for sharpest spot. If spot is not round, adjust ASTIGMATISM and FOCUS as required to produce clear round spot.
10	Rotate horizontal DISPLAY counterclockwise to INT. Trace reappears.
	<p style="text-align: center;">Note</p> <p>Wait a minimum of 15 minutes before performing the remaining adjustments. These adjustments should be performed when the instrument is energized for the first time after receipt and should be performed periodically to insure accurate voltage measurements. It should not be necessary to repeat these procedures each time the instrument is used.</p>
	<p style="text-align: center;"><u>INTENSITY RATIO ADJUSTMENT</u></p>
11	Set DELAY(DIV) to 2.
12	Set main TIME/DIV to 50 USEC.
13	Rotate delayed TIME/DIV counterclockwise to 5 USEC. An intensified trace appears approximately 2 divisions from left side of screen.
14	If required, adjust INTENS RATIO for desired intensity contrast between main and delayed sweeps.
15	Rotate delayed TIME/DIV clockwise to OFF.
	<p style="text-align: center;"><u>VERTICAL AMPLIFIER CHANNEL A AND CHANNEL B DC BALANCE</u></p>
	<p style="text-align: center;">Note</p> <p>Insure that channel A and B input coupling switches are set to GND before performing dc balance adjustment.</p>
16	Set channel A and channel B POLARITY to +UP.

TABLE 3-3. (Continued)

STEP	PROCEDURE
17	Using A POSITION control, position the trace exactly on the center horizontal graticule.
18	Set channel A POLARITY to -UP and observe trace.
19	If trace shifted position vertically when POLARITY was switched, adjust DC BAL A adjust screw to return trace approximately 1/2 the distance from its present position to the center graticule.
20	Set channel A POLARITY to +UP and repeat steps 17 thru 20 as required until no visible shift in trace occurs when switching channel A POLARITY between the +UP and -UP positions.
21	Set vertical DISPLAY to B.
22	Using B POSITION control, position the trace exactly on the center horizontal graticule.
23	Set channel B POLARITY to -UP and observe trace.
24	If trace shifted position vertically when polarity was switched, adjust DC BAL B adjust screw to return trace approximately 1/2 the distance from its present position to the center graticule.
25	Set channel B POLARITY to +UP and repeat steps 22 thru 25 as required until no visible shift in trace occurs when switching channel B POLARITY between the +UP and -UP positions.
	<u>VERTICAL AMPLIFIER SENSITIVITY ADJUSTMENT.</u>
26	Set channel B input coupling to AC.
27	Rotate channel B vernier VOLTS/DIV control fully clockwise to CAL.
28	Set channel B VOLTS/DIV to .005.
29	Set vertical MAGNIFIER to X1.
30	Connect 10:1 divider probe to channel B INPUT connector.
31	Connect divider probe to CALIBRATOR 250MV output jack.

TABLE 3-3. (Continued)

STEP	PROCEDURE
32	Adjust channel B CAL screw for exactly 5 div of vertical deflection. Reposition trace with B POSITION control as desired to complete adjustment.
33	Disconnect divider probe from oscilloscope.
34	Set channel B input coupling to GND.
35	Set channel A input coupling to AC.
36	Rotate channel A vernier VOLTS/DIV control fully clockwise to CAL.
37	Set channel A VOLTS/DIV to .005.
38	Set vertical DISPLAY to A.
39	Connect 10:1 divider probe to channel A INPUT connector.
40	Connect divider probe to CALIBRATOR 250MV output jack.
41	Adjust channel A CAL screw for exactly 5 div of vertical deflection. Reposition trace with A POSITION control as desired to complete adjustment.
42	Disconnect divider probe from oscilloscope.
	<u>VERTICAL AMPLIFIER COMBINED CHANNEL (A+B)</u> <u>DC BALANCE</u>
43	Set channel A input coupling to GND.
44	Using A POSITION control, position trace exactly on center horizontal graticule.
45	Set vertical DISPLAY to B.
46	Using B POSITION control, position trace exactly on center graticule.
47	Set vertical DISPLAY to A+B and observe trace.
48	If trace shifts vertically, adjust DC BAL A+B screw to reposition trace on center graticule.

3-6. DUAL CHANNEL VERTICAL AMPLIFIER OPERATING PROCEDURES

The dual channel vertical amplifier has three modes of operation: single or dual channel operation, A+B operation and XY operation. A brief description of the purpose and use of each mode of operation is given in the following paragraphs.

a. SINGLE OR DUAL CHANNEL OPERATION. - This mode of operation allows the operator to observe and accurately measure the voltage level of a single waveform displayed on one trace, or to observe and measure two separate waveforms displayed on two separate traces. The dual trace feature also allows accurate time comparison of two separate waveforms. When using the oscilloscope to measure voltage, the vernier VOLTS/DIV controls must be set to CAL. The voltage is then determined by multiplying the number of divisions of deflection by the setting of the appropriate VOLTS/DIV control. To use the oscilloscope for time comparison of two separate waveforms, the DISPLAY switch must be set to the ALT B TRIGGER or CHOP B TRIGGER position. The ALT B TRIGGER position is used for faster sweeps, and the CHOP B TRIGGER position is used for slower sweep speeds. Experience with the oscilloscope will allow the operator to select the proper position for the particular waveforms to be compared. Table 3-4 gives the procedure for setting the controls for single or dual channel operation.

TABLE 3-4. SINGLE OR DUAL CHANNEL OPERATING PROCEDURE

STEP	PROCEDURE
1	Perform turn-on procedure. (See table 3-3.)
2	Set vertical DISPLAY switch to desired position. (For single trace either channel A or channel B may be used. For dual trace select the display mode in accordance with the comparison to be made and the sweep speed to be used.)
3	Set sweep speed as desired. (Refer to paragraph 3-7 for time base operation.)
<p>Note</p> <p>If vertical DISPLAY switch is set for dual trace, perform following steps on both channel controls. If single channel is used, perform following steps on the channel corresponding to setting of vertical DISPLAY switch.</p>	
4	Set vernier VOLTS/DIV control to CAL. (If accurate voltage measurement is not required, this control can be used to vary vertical deflection.)
5	Set VOLTS/DIV as desired.

TABLE 3-4. (Continued)

STEP	PROCEDURE
6	Set vertical MAGNIFIER TO X1. (Vertical MAGNIFIER can be set to X5 to expand the vertical trace or to increase vertical amplifier gain on low amplitude signals.)
7	Set input coupling to AC or DC as desired.
8	Connect signal(s) to INPUT connector (s).
9	Set POLARITY to +UP or -UP as desired.
10	Adjust A POSITION and/or B POSITION as desired.

b. A+B OPERATION. - The A+B mode of operation is used to algebraically combine two waveforms on a single trace. In this mode, the POLARITY setting of each channel determines whether the display is the sum or difference of the input signals. The combination of displays provided are A+B, -A-B, A-B and -A+B. Table 3-5 provides the control settings for A+B operation.

TABLE 3-5. A+B OPERATING PROCEDURE

STEP	PROCEDURE
1	Perform turn-on procedure. (See table 3-3.)
2	Set channel A and B input coupling to GND.
3	Set vertical DISPLAY to A.
4	Set sweep speed as desired. (Refer to paragraph 3-7 for time base operation.)
5	Center trace vertically with A POSITION control.
6	Set vertical DISPLAY to B.
7	Center trace vertically with B POSITION control.

TABLE 3-5. (Continued)

STEP	PROCEDURE
8	Set vertical DISPLAY switch to A+B.
9	Set input coupling switches to AC or DC as desired.
10	Set vertical MAGNIFIER to X1. (Vertical MAGNIFIER can be set to X5 to increase amplitude of the combined signals.)
11	Connect signals to channel A and B INPUT connectors.
12	Set channel A and B vernier VOLTS/DIV controls to CAL.
13	Set channel A and B VOLTS/DIV switches as desired.
14	Set the channel A and B POLARITY switches to provide the combination desired.

c. XY OPERATION. - The XY mode of operation provides a method of determining the phase relationship of two waveforms. In this mode of operation, one waveform is applied to the vertical amplifier and the second waveform is applied to the horizontal amplifier. The Lissajous pattern produced allows the operator to determine phase relationship of the two waveforms. When the XY mode of operation is used to compare phase, the PHASE BANDWIDTH switch must be set to PHASE (to delay the horizontal signal the same amount of time as the vertical signal) to provide an accurate comparison. In addition to phase comparison, the XY mode also allows the operator to use an externally generated time base signal rather than the internal time base signal. Table 3-6 provides the control settings for XY operation.

TABLE 3-6. XY OPERATING PROCEDURE

STEP	PROCEDURE
1	Perform turn-on procedure. (See table 3-3.)
2	Set vertical DISPLAY to A, B, or A+B as desired.
3	Set channel A and B input coupling to GND.

TABLE 3-6. (Continued)

STEP	PROCEDURE
4	<p>Set channel A and B VOLTS/DIV and POLARITY switches as desired.</p> <p style="text-align: center;">Note</p> <p>If measuring phase relationship, perform step 5; otherwise proceed with step 6.</p>
5	<p>Set PHASE BANDWIDTH switch to PHASE.</p> <p style="text-align: center;">Note</p> <p>To gain access to PHASE BANDWIDTH switch, set oscilloscope on rear end, release four latches at rear of oscilloscope, and lift cover straight up. See figure 3-1 for location of switch.</p>
6	<p>Connect horizontal signal to horizontal amplifier EXT INPUT connector</p>
7	<p>Set horizontal amplifier external input coupling switch to AC or DC as desired.</p>
8	<p>Adjust horizontal DISPLAY and horizontal MAGNIFIER for desired amount of deflection.</p>
9	<p>Connect vertical signal to A and/or B INPUT connector.</p>
10	<p>Set appropriate vertical amplifier input coupling switch(es) to AC or DC as desired.</p>
11	<p>Set vertical MAGNIFIER to X1 or X5 as desired.</p> <p style="text-align: center;">Note</p> <p>Insure that PHASE BANDWIDTH switch is returned to BANDWIDTH after completing phase comparison.</p>

3-7. TIME BASE AND DELAY GENERATOR OPERATION.

The time base and delay generator has four modes of operation: main sweep operation, mixed sweep operation, delayed sweep operation and single sweep operation. A brief description of the purpose and use of each mode of operation is given in the following paragraphs.

a. MAIN SWEEP OPERATION. - The main sweep mode of operation produces a normal trace for observing simple waveforms applied to the vertical amplifier. This mode is used when the displayed waveform is simple and fairly uniform (horizontally) through the period of the waveform, or when the operator is only concerned with the vertical amplitude of the waveform. If a more complex, non-uniform waveform is to be displayed, the mixed or delayed mode is used to observe the waveform in more detail. Table 3-7 provides the procedure for main sweep operation.

TABLE 3-7. MAIN SWEEP OPERATING PROCEDURE

STEP	PROCEDURE
1	Perform turn-on procedure. (See table 3-3.)
2	Set horizontal DISPLAY to INT.
3	Set sweep display to MAIN.
4	Set SWEEP MODE to AUTO.
5	Rotate delayed TIME/DIV fully clockwise to OFF.
6	Center trace with HORIZONTAL POSITION controls.
7	Set horizontal MAGNIFIER to X1. (MAGNIFIER can also be used to expand the trace to X5 or X10.)
8	Connect signal to vertical amplifier. (Refer to paragraph 3-6.)
9	Set main trigger source to desired position. (INT is the normal position. If either of the EXT positions are selected, connect a trigger signal to main EXT INPUT connector.)
10	Set main trigger coupling to desired position. (DC is the normal coupling position. Select ACF to reject frequencies below 15 kHz, ACS to reject frequencies above 30 kHz, and AC to reject the dc component and frequencies below 20 Hz.)
11	Set main SLOPE to + or - as desired.
12	Adjust main TRIGGER LEVEL for desired trigger point. If display is unstable, set SWEEP MODE to NORM and adjust TRIGGER LEVEL.

TABLE 3-7. (Continued)

STEP	PROCEDURE
13	Rotate MAIN VERNIER fully clockwise to CAL. (If accurate time measurement is not required, this control can be used for fine adjustment of main sweep speed.)
14	Set main TIME/DIV as desired.

b. MIXED SWEEP OPERATION. - The mixed sweep mode of operation provides a trace (time base) that is a combination of the main sweep and the delayed sweep. In this mode the first portion of the displayed trace is produced by the main time base generator and the second portion of the trace is produced by the delayed time base generator. The time or position on the main sweep at which the delayed sweep starts is determined by the setting of the DELAY (DIV) control. This mode of operation is very useful in analyzing complex waveforms. By properly setting the DELAY (DIV) control and the delayed TIME/DIV switch, the operator can expand and observe any compressed area of a complex waveform. Table 3-8 provides the procedure for mixed sweep operation.

TABLE 3-8. MIXED SWEEP OPERATING PROCEDURE

STEP	PROCEDURE
1	Perform main sweep operating procedure. (See table 3-7.)
2	Rotate DELAYED VERNIER fully clockwise to CAL. (If accurate delayed sweep speed is not required, this control can be used for fine adjustment of delayed sweep speeds.)
3	Set delayed trigger source to AUTO. (If trigger source other than AUTO is selected, delayed sweep starts on the first trigger signal received after delay time. Set delayed TRIGGER LEVEL, trigger SLOPE, and trigger coupling controls as desired.)
4	Rotate delayed TIME/DIV counterclockwise from OFF to a speed approximately 10 to 100 times faster than main sweep speed. (If main sweep speed is set faster than 1 usec/div it is not possible to set delayed sweep 10 times faster than main sweep.)

TABLE 3-8. (Continued)

STEP	PROCEDURE
5	<p>Rotate DELAY (DIV) clockwise from 0 until a portion of the sweep is intensified, then adjust DELAY (DIV) to position the intensified trace over the portion of the waveform to be expanded.</p> <p style="text-align: center;">Note</p> <p style="text-align: center;">The length of the intensified trace can be increased or decreased by resetting the delayed TIME/DIV.</p>
6	Set sweep display to MIXED.
7	Adjust DELAY (DIV) and delayed TIME/DIV as desired to expand any portion of the waveform.

c. DELAYED SWEEP OPERATION. - The delayed sweep mode of operation produces the delayed sweep only, at a delay time determined by the product of the DELAY (DIV) control and the main TIME/DIV switch. The difference between this mode and the mixed sweep mode is that the main sweep does not appear in the display and the delayed sweep covers the full 10 div deflection. This allows the delayed sweep to expand or magnify a portion of the waveform the full width of the screen. Table 3-9 provides the procedure for delayed sweep operation. In addition to providing a method of expanding a complex waveform for observation, the delayed mode is also used to make rise time measurements and time differential measurements. Procedures for making accurate rise time measurements are provided in table 3-10. Procedures for making time differential measurements are provided in table 3-11.

TABLE 3-9. DELAYED SWEEP OPERATING PROCEDURE

STEP	PROCEDURE
1	Perform main sweep operating procedure. (See table 3-7.)
2	Rotate DELAYED VERNIER fully clockwise to CAL. (If accurate delayed sweep speed is not required, this control can be used for fine adjustment of delayed sweep speed.)

TABLE 3-9. (Continued)

STEP	PROCEDURE
3	Set delayed trigger source to AUTO.
4	Rotate delayed TIME/DIV counterclockwise from OFF to a speed approximately 10 to 100 times faster than main sweep. (If main sweep speed is set faster than 1 usec/div it is not possible to set delayed sweep 10 times faster than main sweep.)
5	<p>Rotate DELAY (DIV) clockwise from 0 until intensified portion of the trace appears over portion of waveform to be expanded.</p> <p style="text-align: center;">Note</p> <p style="text-align: center;">The length of the intensified trace can be increased or decreased by resetting the delayed TIME/DIV.</p>
6	Set sweep display to DELAYED.
7	Adjust DELAY (DIV) and delayed TIME/DIV as desired to observe any portion of the waveform.

TABLE 3-10. RISE TIME MEASUREMENT PROCEDURE

STEP	PROCEDURE
1	Perform main sweep operating procedure. (See table 3-7.)
2	Rotate delayed TIME/DIV counterclockwise from OFF.
3	Set DELAYED VERNIER to CAL.
4	Set delayed trigger source switch to INT, EXT or EXT ÷ 10 as desired. (INT is the normal setting. If either of the EXT positions are selected, connect a trigger signal to delayed EXT INPUT connector.)

TABLE 3-10. (Continued)

STEP	PROCEDURE
5	Set delayed trigger coupling to desired position. (DC is the normal coupling position. Select ACF to reject frequencies below 15 kHz, ACS to reject frequencies above 30 kHz, and AC to reject the dc component and frequencies below 20 Hz.)
6	Set delayed SLOPE to + or - as desired.
7	Adjust delayed TRIGGER LEVEL for an intensified display. (If intensified display does not appear, set DELAY (DIV) to 1.00 and readjust TRIGGER LEVEL as required.)
8	Adjust DELAY (DIV) to position intensified trace over portion of waveform to be measured.
9	Set sweep display to DELAYED.
10	Set delayed TIME/DIV and DELAY (DIV) as desired to display portion of waveform to be measured.
11	Adjust vertical controls to obtain a centered trace exactly 8 div in amplitude.
12	Using the CRT graticule, measure and record the distance in div between the 10% and 90% amplitude points.
	<p style="text-align: center;">Note</p> <p style="text-align: center;">If vertical amplitude is 8 div, the two exterior dotted horizontal lines on the CRT graticule are the 10% and 90% amplitude points. If vertical amplitude is 6 div the two interior dotted horizontal lines are the 10% and 90% amplitude points.</p>
13	Multiply the distance in div (obtained in step 12) by the setting of the delayed TIME/DIV switch to obtain rise time.

TABLE 3-11. TIME DIFFERENTIAL MEASUREMENT PROCEDURE

STEP	PROCEDURE
1	Perform main sweep operating procedure. (See table 3-7.)
2	Rotate DELAYED VERNIER and MAIN VERNIER fully clockwise to CAL.
3	Rotate delayed TIME/DIV counterclockwise from OFF to a speed approximately 10 to 100 times faster than main sweep. (If main sweep speed is set faster than 1 usec/div it is not possible to set delayed sweep 10 times faster than main sweep.)
4	Set delayed trigger source to AUTO.
5	Adjust DELAY (DIV) to position intensified trace over first point of interest on waveform. (Reset delayed TIME/DIV if required.)
6	Set sweep display to DELAYED.
7	Readjust DELAY (DIV) to position point of interest on waveform exactly on a vertical reference line (normally the center vertical line of graticule).
8	Record setting of DELAY (DIV) control.
9	Set sweep display to MAIN.
10	Adjust DELAY (DIV) to position intensified trace over second point of interest on waveform.
11	Set sweep display to DELAYED
12	Readjust DELAY (DIV) to position second point of interest on waveform exactly on the vertical reference line (same reference line used in step 7).
13	Record setting of DELAY (DIV) control.
14	Calculate the difference between the setting of the DELAY (DIV) control recorded in step 8 and the setting recorded in step 13.
15	Multiply the main TIME/DIV setting by the difference obtained in step 14 to obtain the time differential between the two points of interest on the waveform.

d. SINGLE SWEEP OPERATION. - The primary purpose of the single sweep mode of operation is to provide a single trace for use when making a photographic recording. This single sweep can be used with any of the previous sweep modes (main sweep, mixed sweep or delayed sweep). The procedure for obtaining a single sweep is given in table 3-12.

TABLE 3-12. SINGLE SWEEP OPERATING PROCEDURE

STEP	PROCEDURE
1	Perform any previous time base operating procedure. (Tables 3-7 thru 3-11.)
2	Set SWEEP MODE to SINGLE.
3	Press RESET pushbutton-indicator to arm sweep. The RESET pushbutton-indicator lights, indicating sweep is armed. The first trigger input will start the sweep and the RESET indicator will go off at the end of the sweep. To repeat the cycle, press RESET pushbutton-indicator.


3-8. OPERATOR'S MAINTENANCE.

Operator's maintenance of the AN/USM-281A Oscilloscope is limited to fuse replacement and periodic cleaning of the exterior surfaces of the instrument. Detailed checkout and trouble shooting require external test equipment and usually require internal adjustment if a component is replaced. Therefore, these procedures are covered in Sections 4 and 5 and should be performed only by a qualified technician. The following paragraphs further identify and explain operator's maintenance.

a. OPERATING CHECKS AND ADJUSTMENTS. - Checkout and adjustment of the oscilloscope requires the use of accurate external test equipment and is not normally performed by the operator. Section 5 gives a detailed reference standards procedure for the oscilloscope and the periodic internal adjustments required to maintain the accuracy of the oscilloscope. Operator's adjustment is limited to the front-panel adjustments provided in table 3-3. These adjustments should be performed periodically to insure the accuracy of the instrument and should be checked before making a voltage measurement when a high degree of accuracy is required.

b. PREVENTIVE MAINTENANCE. - Preventive maintenance for the oscilloscope consists of periodically cleaning the exterior surfaces of the oscilloscope with a soft cloth or dry compressed air (not to exceed 10 psig) and checking controls for security of attachments. The oscilloscope is convection cooled and therefore requires that the external surfaces be kept free from dirt and grease to allow proper heat dissipation.

c. EMERGENCY MAINTENANCE. - Emergency maintenance is limited to replacing power supply and high voltage supply fuses. Figure 3-3 locates and identifies the fuses used in the oscilloscope, and also locates spare fuses stored in the oscilloscope. The spare fuses are located in clips adjacent to the fuse holder and a new fuse should be installed in the spare fuse clip as soon as possible after use. To gain access to the internal fuses, set oscilloscope on rear end, release four latches at rear of oscilloscope, and lift cover straight up.

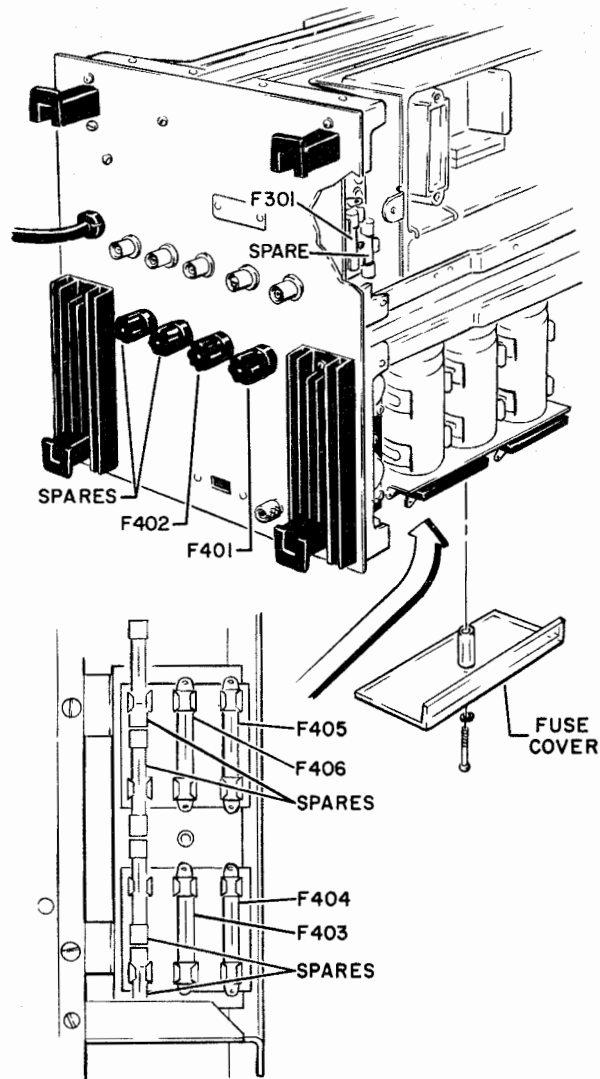

USER ACTIVITY TECHNICAL MANUAL COMMENT SHEET
NAVSHIPS 5600/2 (REV. 9/67)
(Formerly NAVSHIPS 4914)
(COG I - 11-DIGIT STOCK NUMBER: 0105-503-9850)

NAVSHIPS NO. _____
VOLUME NO. _____

(Fold on dotted line on reverse side, staple and mail to NAVSEC)

PROBLEM AREA:

Fold

DEPARTMENT OF THE NAVY
NAVAL SHIP ENGINEERING CENTER
WASHINGTON, D. C. 20360

POSTAGE AND FEES PAID
NAVY DEPARTMENT

OFFICIAL BUSINESS

COMMANDER, NAVAL SHIP ENGINEERING CENTER
TECHNICAL DATA MANAGEMENT BRANCH
DEPARTMENT OF THE NAVY
WASHINGTON, D. C. 20360

Fold